

SYNC Module [APIM]**Removal****All vehicles**


1. Remove the FCIM.

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Removal and Installation).


Vehicles without touchscreen display

2. Remove the screws, disconnect the electrical connectors and remove the FCDIM and APIM as an assembly.


Torque: 27 lb.in (3 Nm)

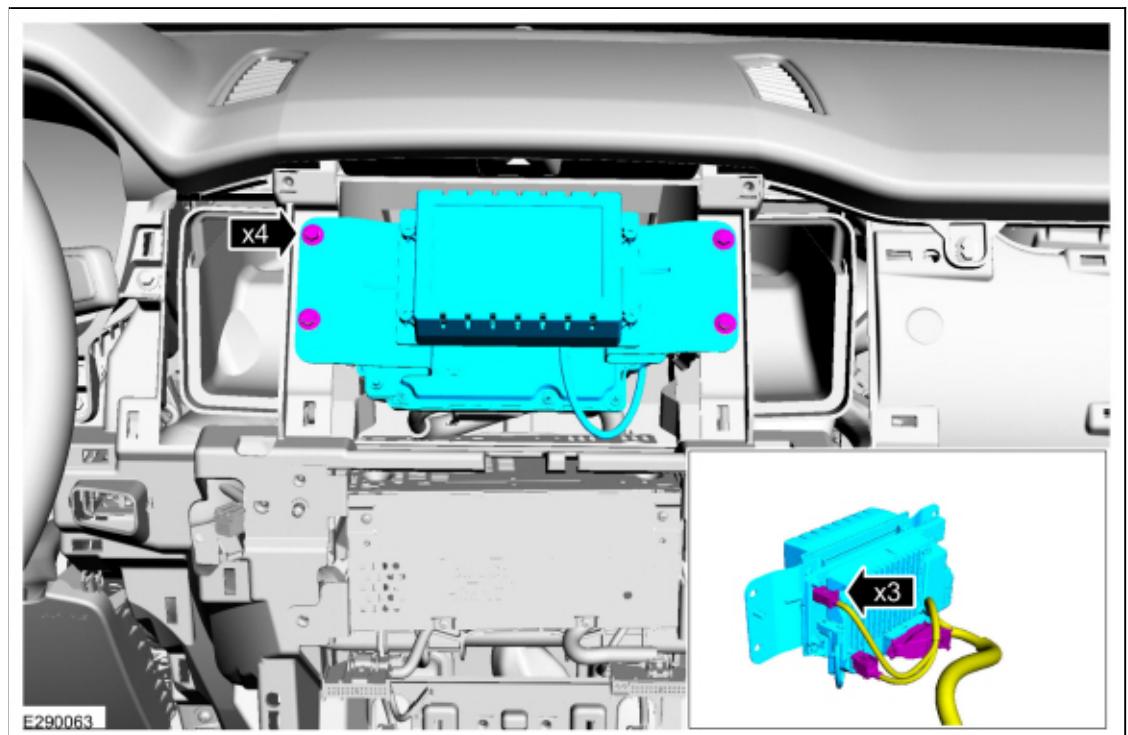

3. Disconnect the LVDS cable electrical connector.

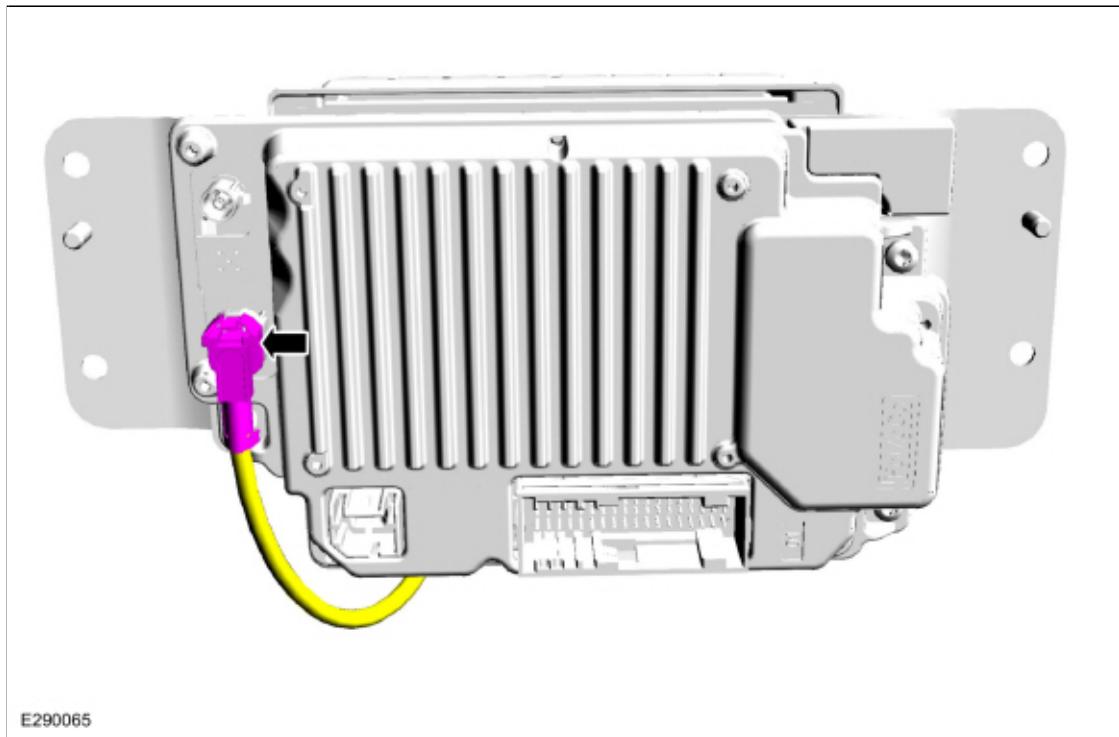

4. Remove the screws and the APIM.
Torque: 9 lb.in (1 Nm)

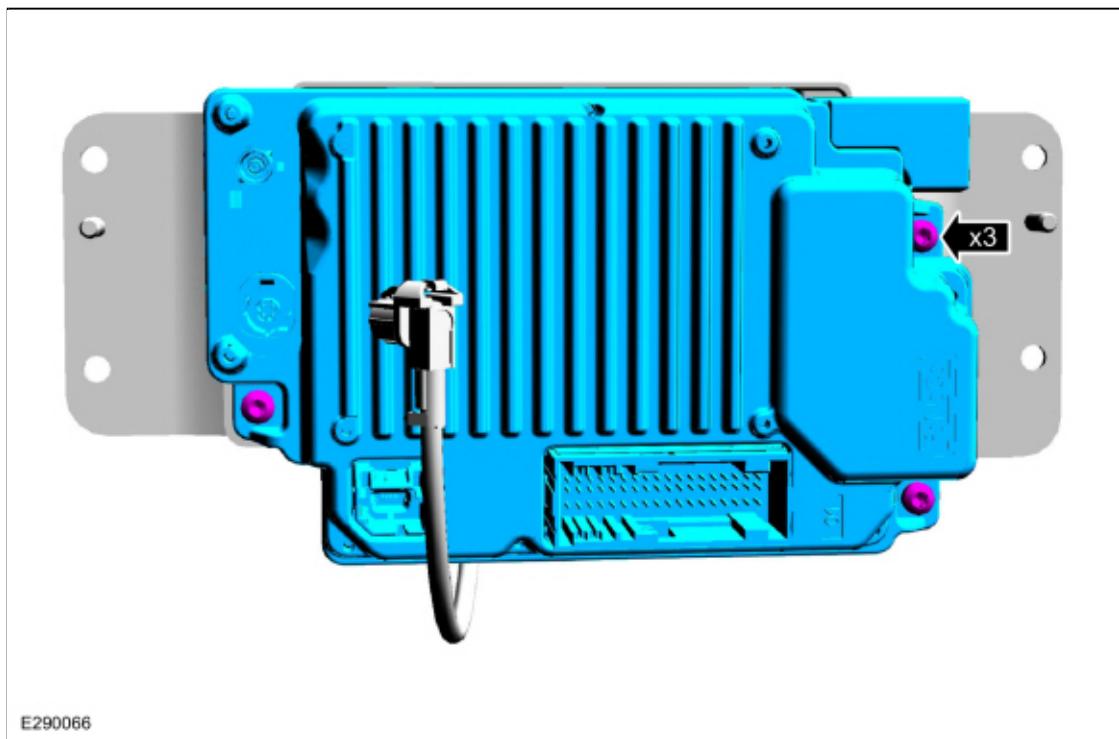


Vehicles with touchscreen display


5. Remove the screws, disconnect the electrical connectors and remove the FDIM and APIM as an

assembly.

Torque: 27 lb.in (3 Nm)

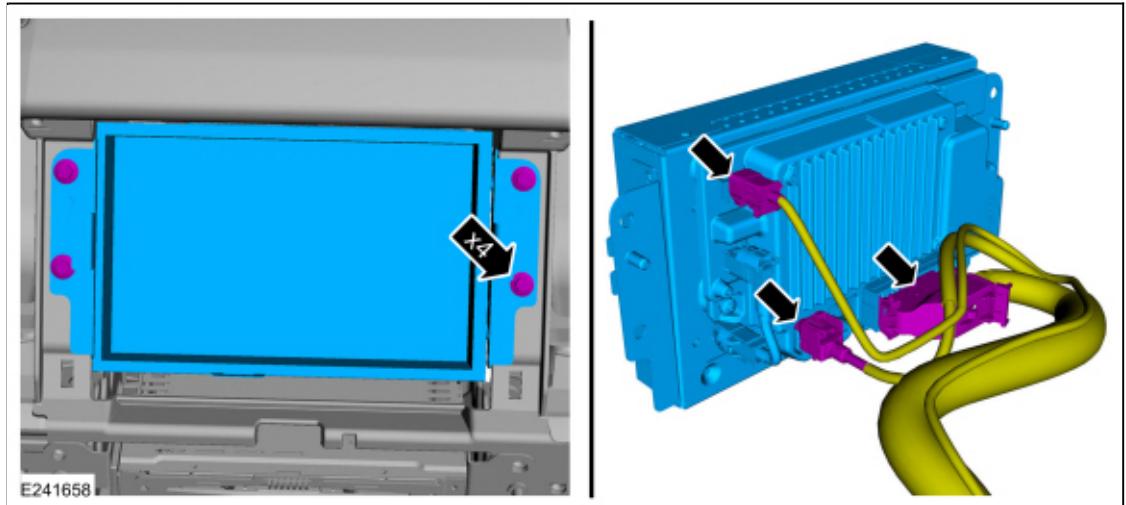

6. Remove the screws, disconnect the electrical connectors and remove the APIM.
Torque: 9 lb.in (1 Nm)

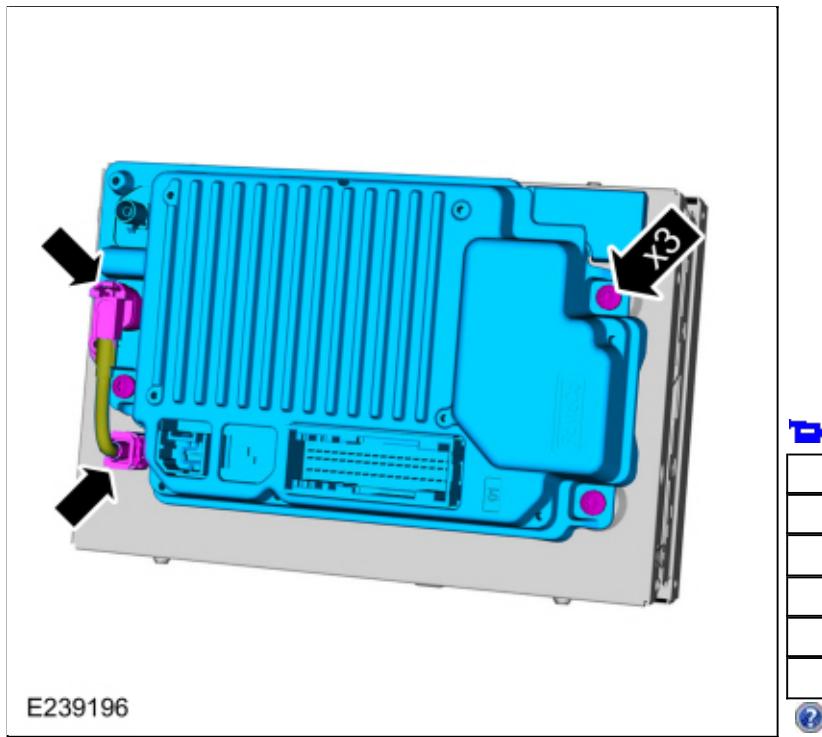

Installation

1. To install, reverse the removal procedure.
2. If a new APIM is being installed, program the APIM to the correct software level.

