


## Subwoofer Speaker


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


1. Release the seatback latch and position the rear seatback down.

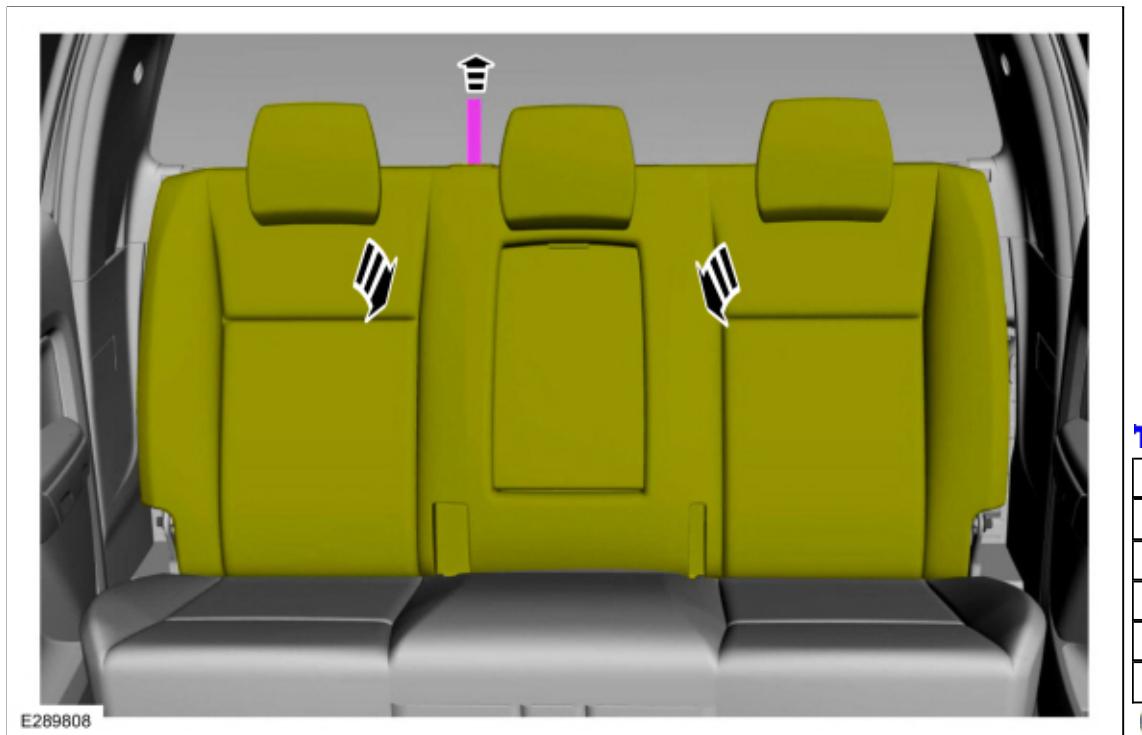

2. Separate the wire harness guide.

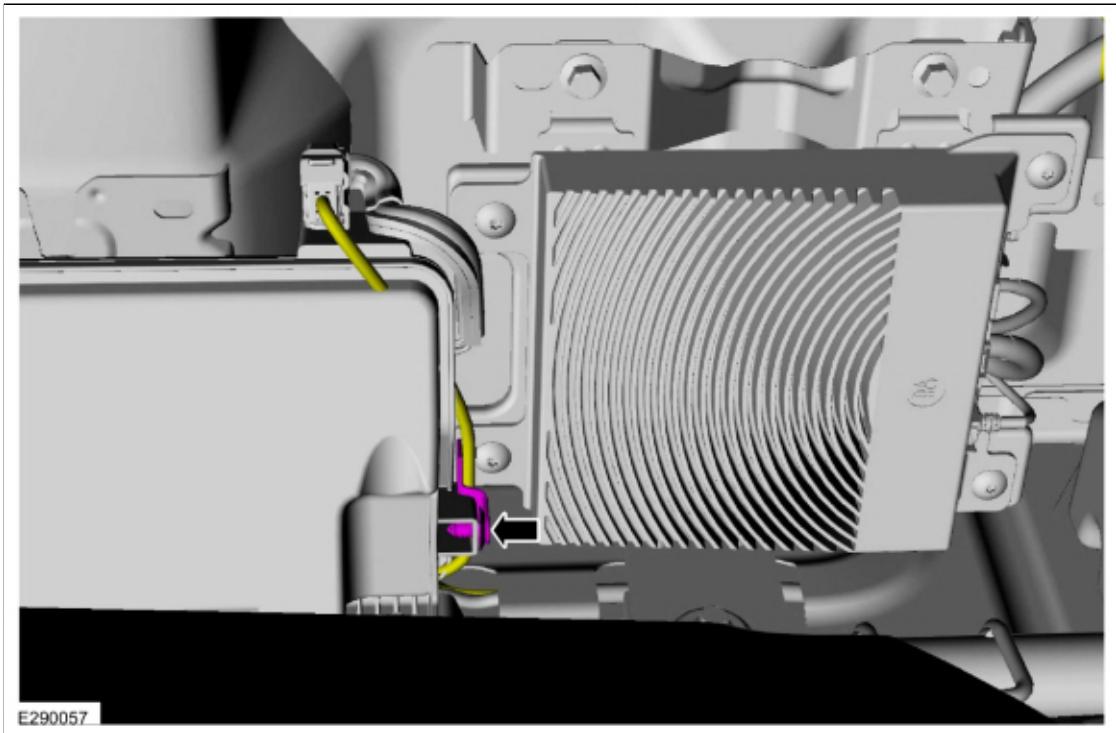

3. Disconnect the electrical connectors, remove the screws and the subwoofer speaker.  
*Torque: 62 lb.in (7 Nm)*

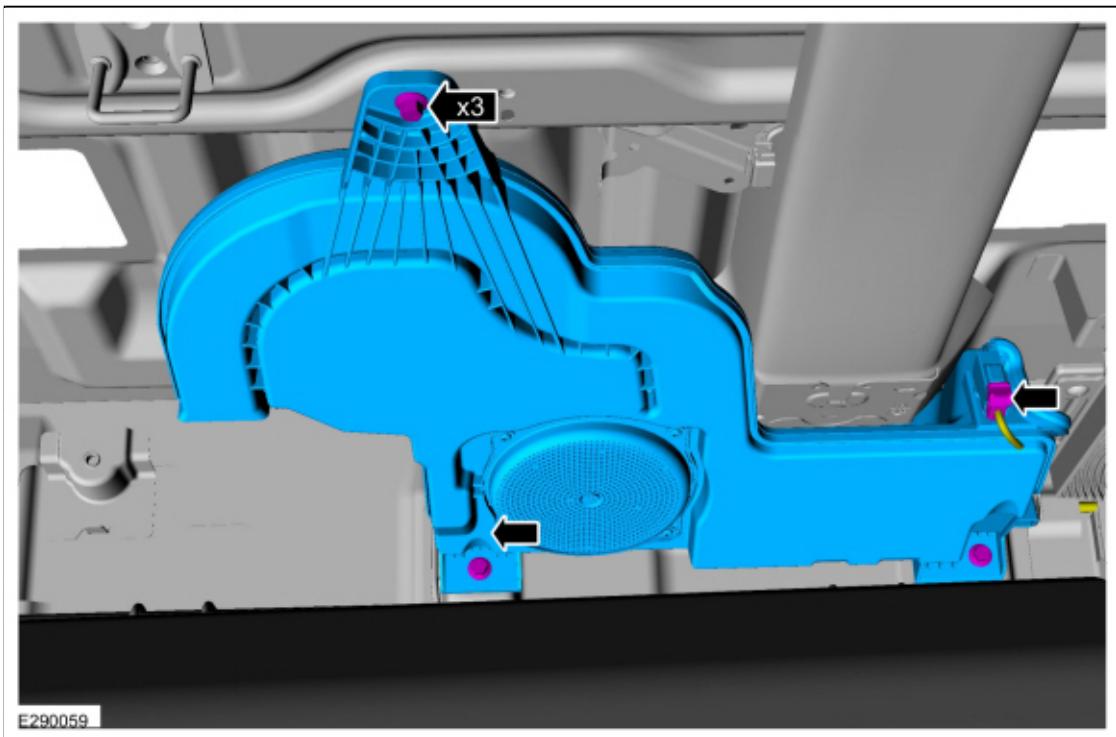

## Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

---