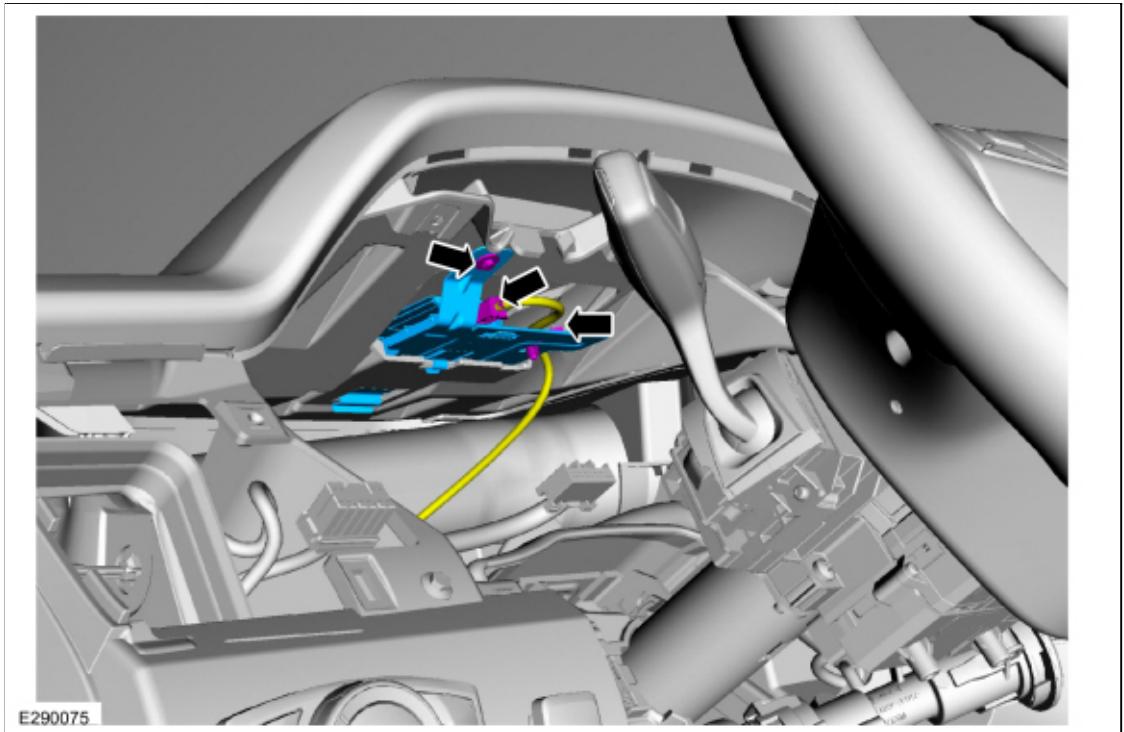


**Telematics Control Unit (TCU) Module Antenna****Removal**

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the IPC.  
Refer to: [Instrument Panel Cluster \(IPC\)](#) (413-01 Instrumentation, Message Center and Warning Chimes, Removal and Installation).
2. Separate the wiring guide, disconnect the electrical connector, remove the bolt and the TCU antenna.  
*Torque: 80 lb.in (9 Nm)*

**Installation**

1. To install, reverse the removal procedure.

