

Autolamps**DTC Charts****DTC Chart: BCM**

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

<u>DTC</u>	<u>Description</u>	<u>Action</u>
B1A85:11	Ambient Light Sensor: Circuit Short To Ground	GO to Pinpoint Test A
B1A85:13	Ambient Light Sensor: Circuit Open	GO to Pinpoint Test A
For other <u>BCM</u> Diagnostic Trouble Codes (DTCs)	-	REFER to: Body Control Module (BCM) (419-10 Multifunction Electronic Modules, Diagnosis and Testing).

Symptom Chart(s)

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

Symptom Chart: Autolamps

<u>Condition</u>	<u>Possible Sources</u>	<u>Actions</u>
A module does not respond to the diagnostic scan tool	<ul style="list-style-type: none"> ● Fuse ● Wiring, terminals or connectors ● Module 	REFER to: Communications Network (418-00 Module Communications Network, Diagnosis and Testing).
The autolamps are inoperative/do not operate correctly	Refer to the Pinpoint Test	GO to Pinpoint Test A

Pinpoint Tests

► **PINPOINT TEST A : THE AUTOLAMPS ARE INOPERATIVE/DO NOT OPERATE CORRECTLY**

Copyright © 2019 Ford Motor Company
