

Front Fog Lamp Adjustment

Adjustment


1. **NOTE:** Horizontal aim is not adjustable. Consult your state vehicle inspection center for recommended tolerance ranges for visual aiming.

NOTE: Before starting fog lamp adjustment, entry conditions must be met.

- Vehicle must be on level ground.
- Tires must be correctly inflated.
- Vehicle must be normally loaded.
- Fog lamps and headlamps must be clean.
- Headlamps must be operating and correctly aimed.


2. **NOTE:** The vertical wall screen must be a minimum of 10 ft (2.4 m) wide.

Park the vehicle on a level surface approximately 7.6 m (25 ft) from the vertical wall or screen directly in front of it.

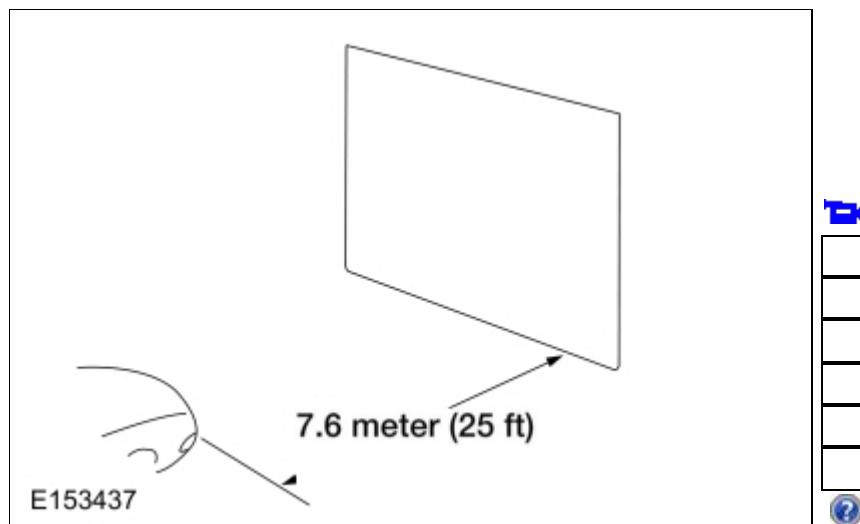

3. The correct visual aim for the fog lamps is with the top edge of the high-intensity zone 101.6 mm (4 in) below the horizontal center of the fog lamps.



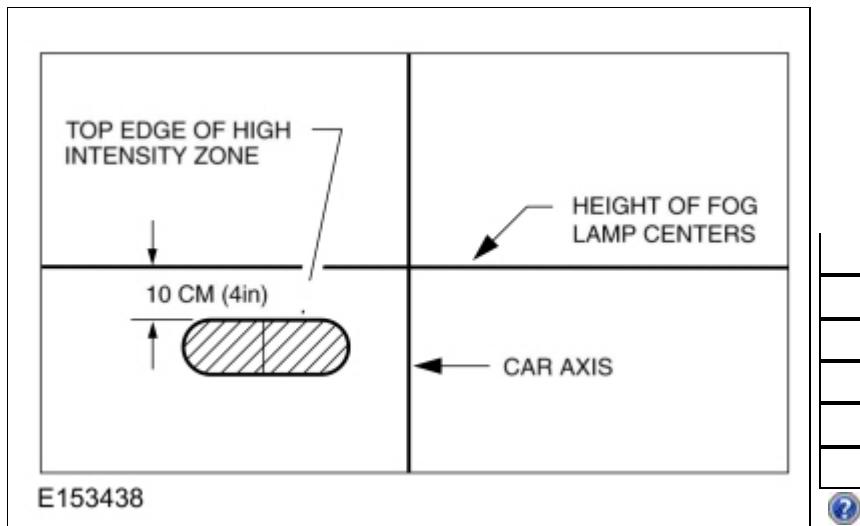

Copyright © 2019 Ford Motor Company
