

## Front Fog Lamp


### Removal

**NOTE:** LH side shown, RH side similar.

1. **NOTE:** Accessed from under vehicle.

Remove the bolts and the fog lamp assembly.

- Disconnect the electrical connector.  
*Torque: 42 lb.in (4.8 Nm)*

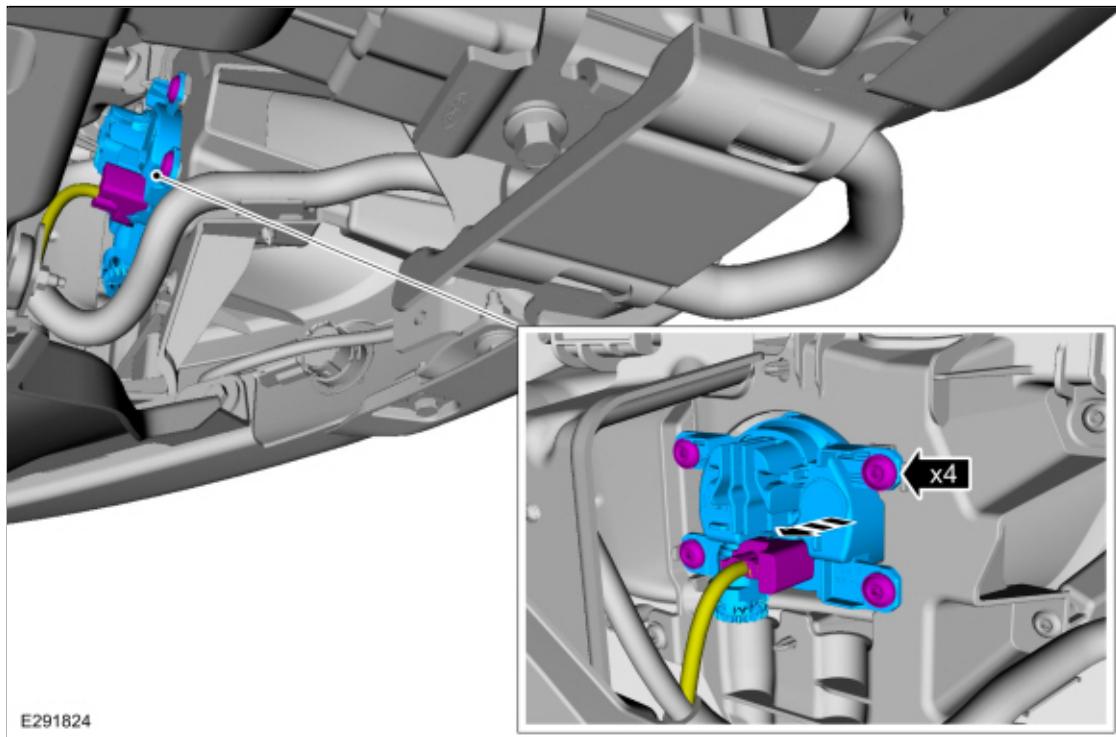

### Installation

1. To install, reverse the removal procedure.
2. Adjust the fog lamp.  
Refer to: [Front Fog Lamp Adjustment \(417-01 Exterior Lighting, General Procedures\)](#).

