

Headlamp Assembly

Base Part Number: 13005

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.


1. Remove the radiator grille.

Refer to: [Radiator Grille](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).


2. Remove the light.

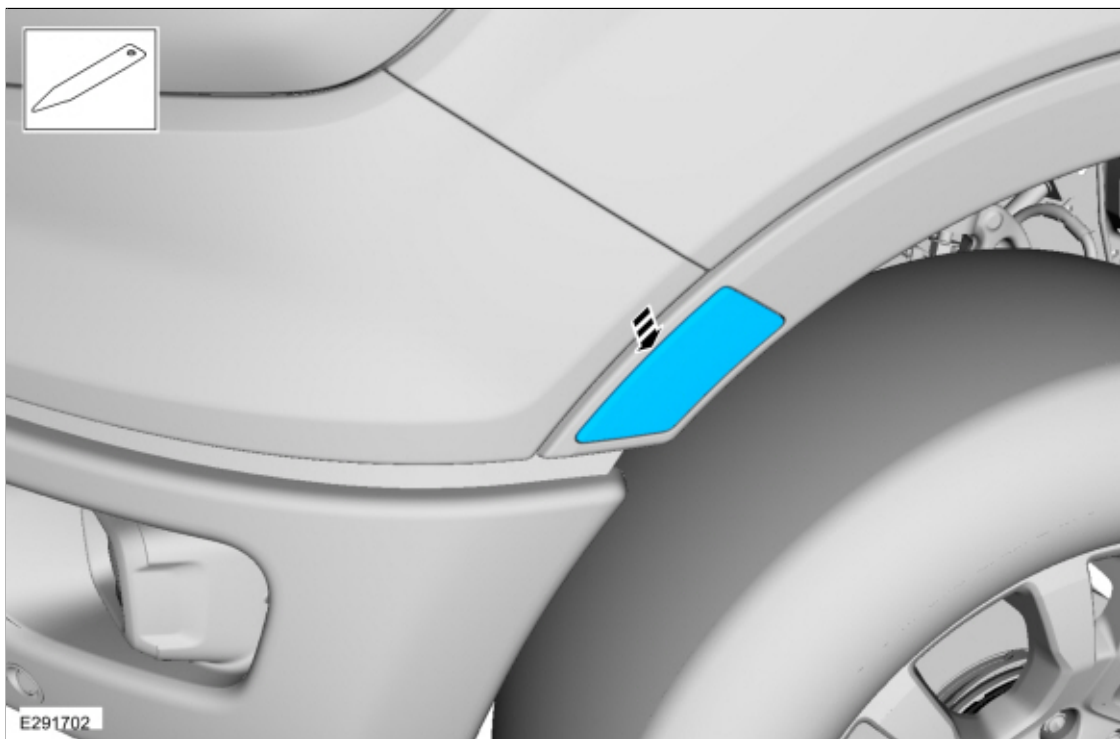


3. Remove the screw.

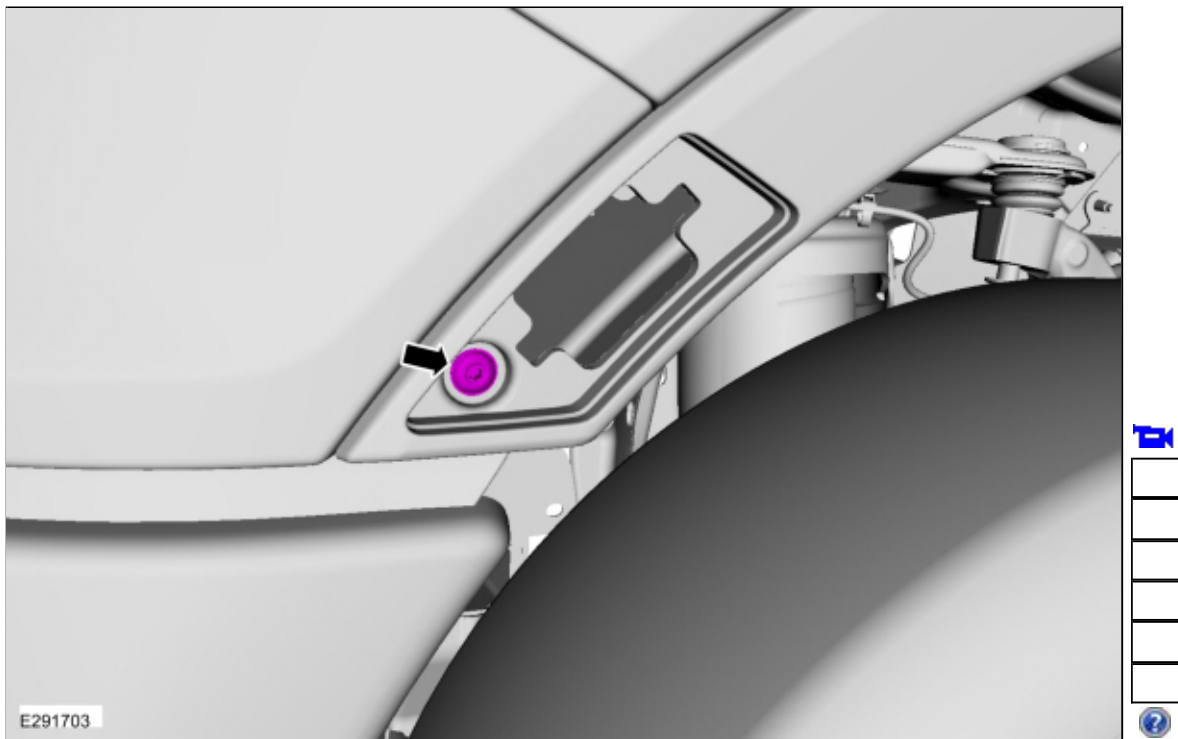


4. Position aside the front fender moulding.

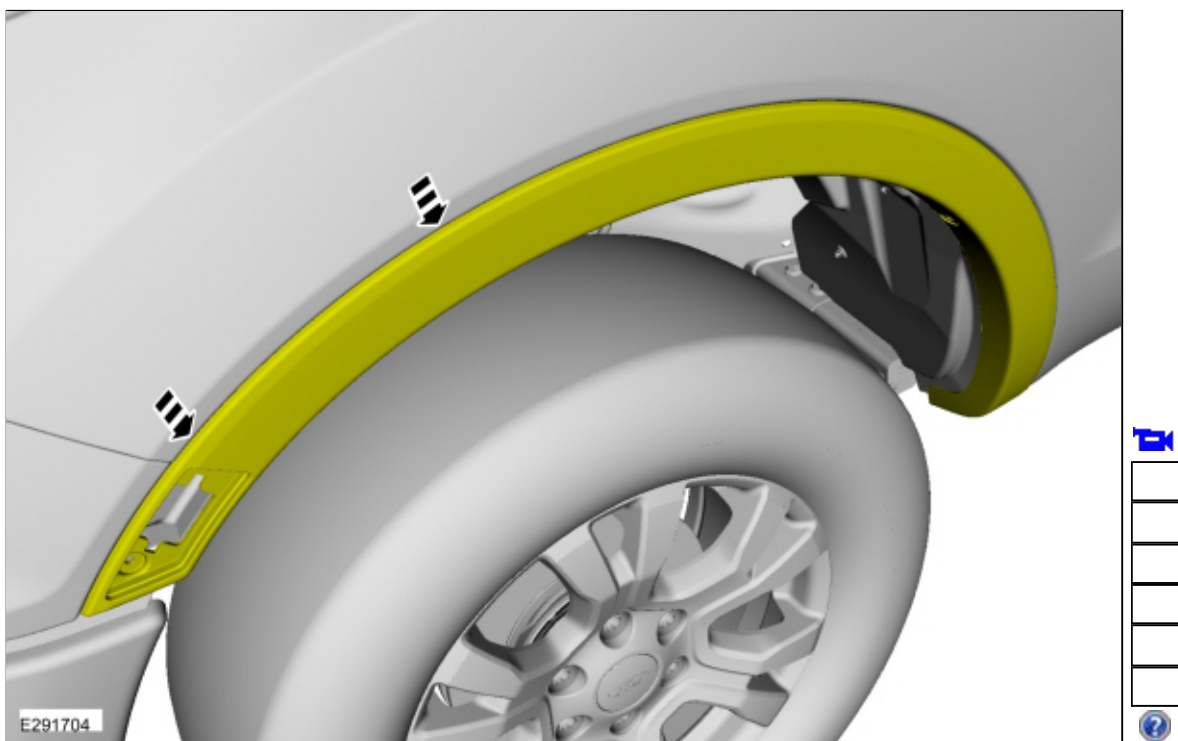


5. Remove the bolt.
Torque: 42 lb.in (4.8 Nm)

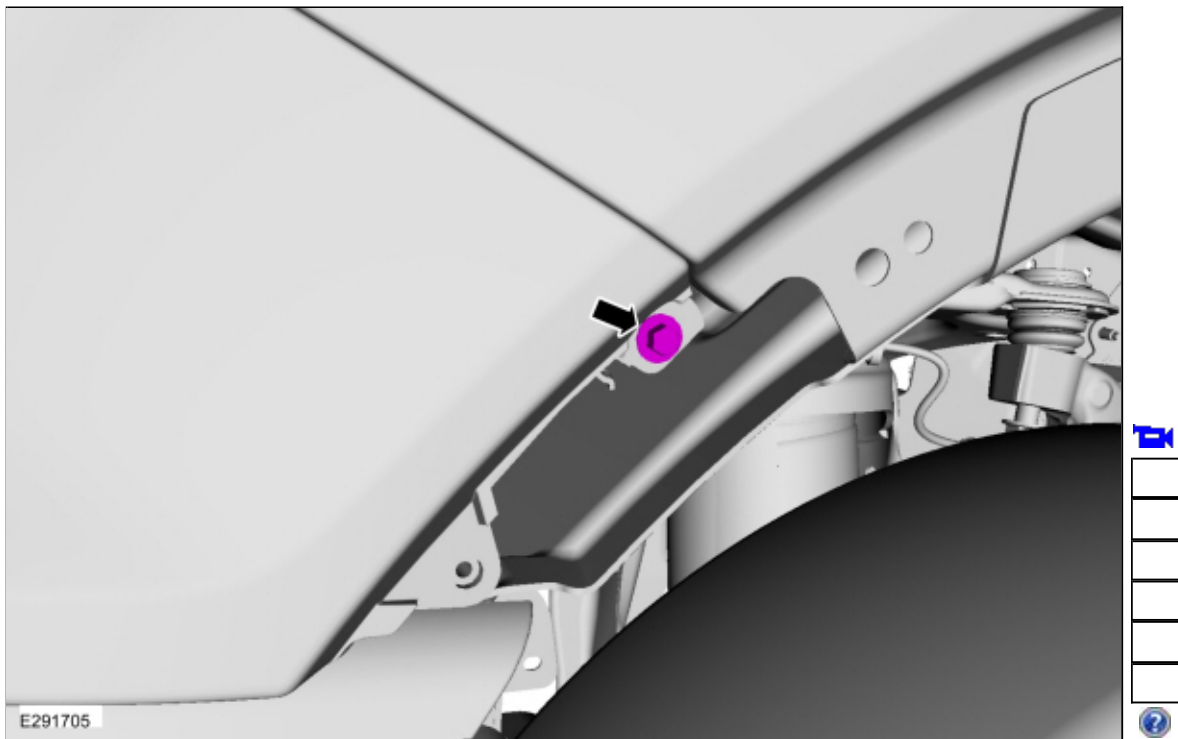


6. Remove the retainer.

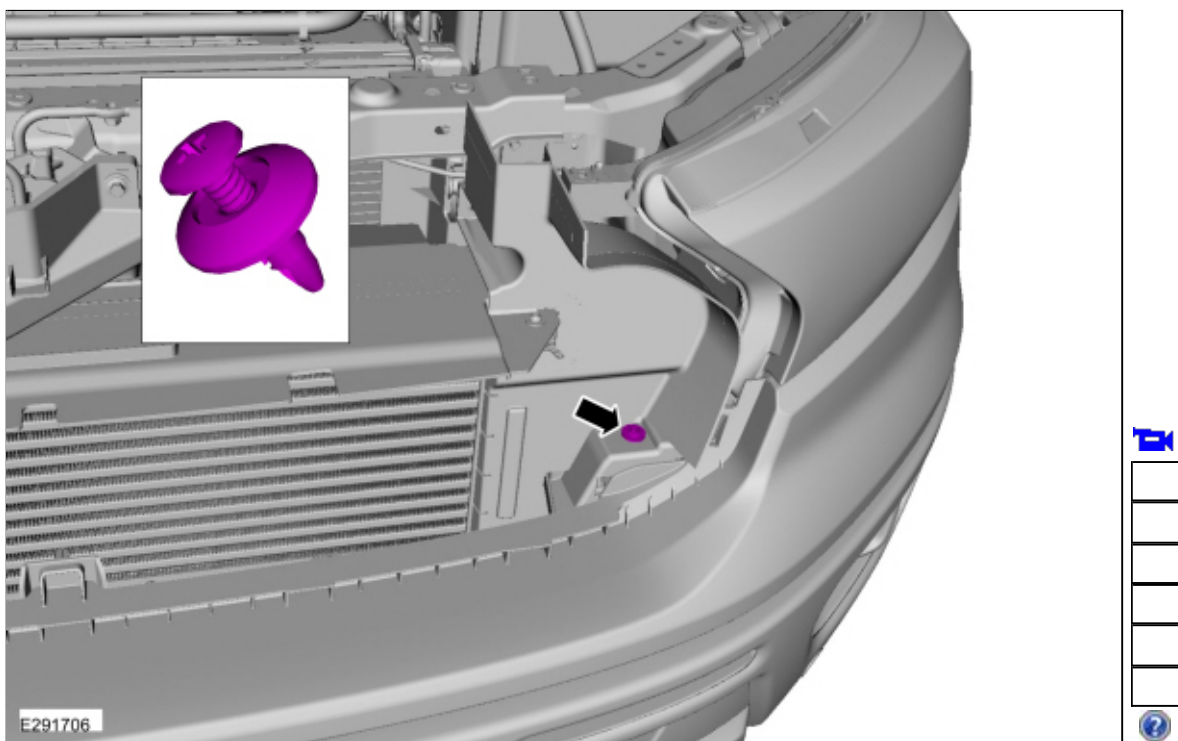


7. Remove the bolts.
Torque: 42 lb.in (4.8 Nm)

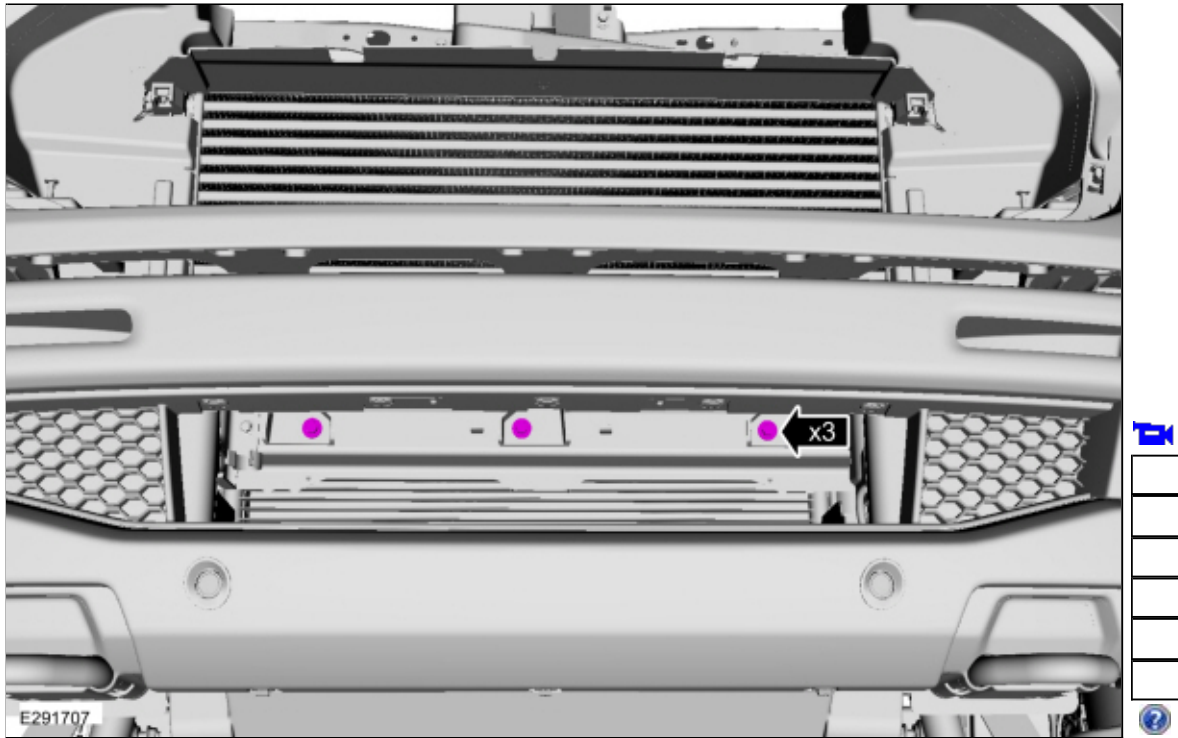

8. Position aside the front bumper upper cover trim panel.
- Using a flat-blade screwdriver release the locking tabs.

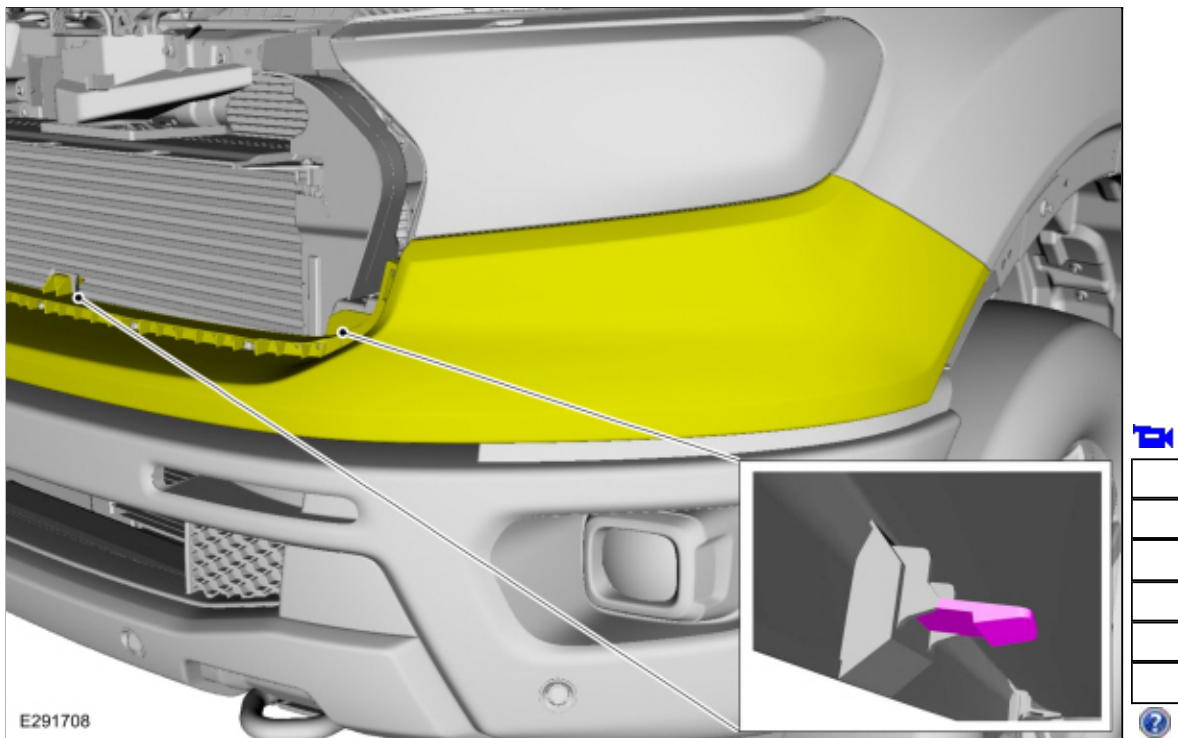

9. Remove the bolt.
Torque: 42 lb.in (4.8 Nm)

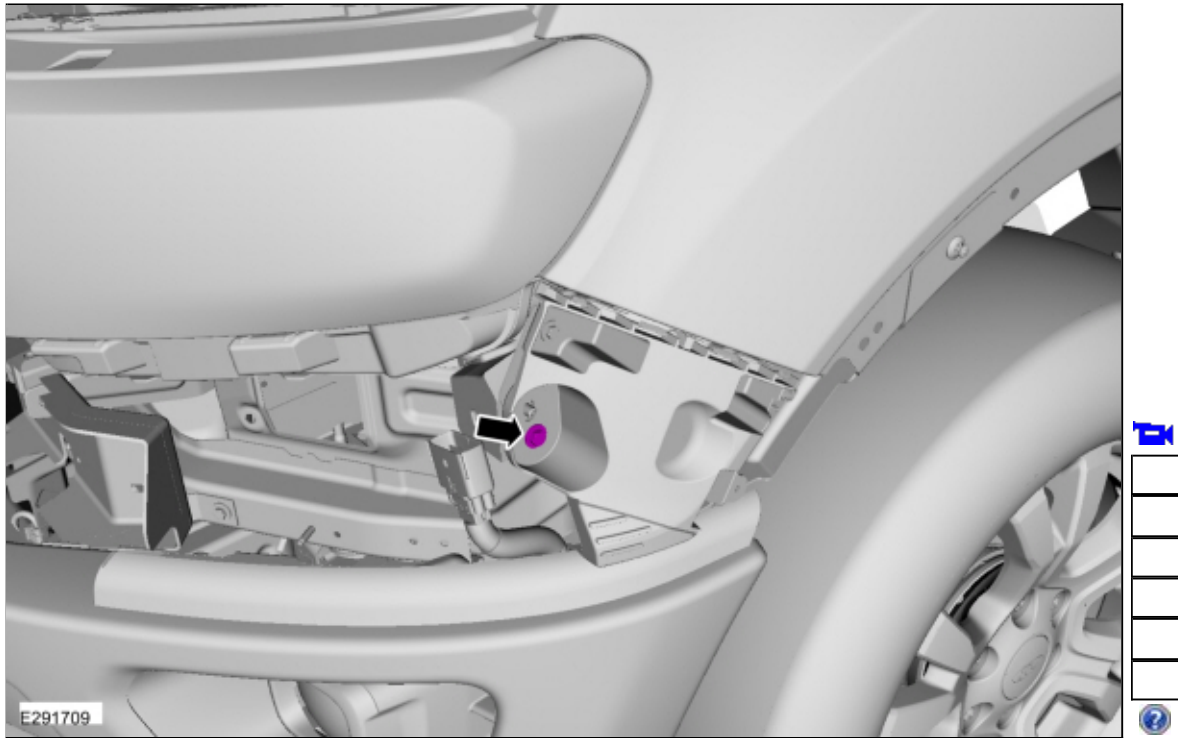


10.

Remove the headlamp assembly.

- Remove the bolts.
Torque: 42 lb.in (4.8 Nm)
- Remove the screw.
- Remove the push pin.
- Disconnect the electrical connector.



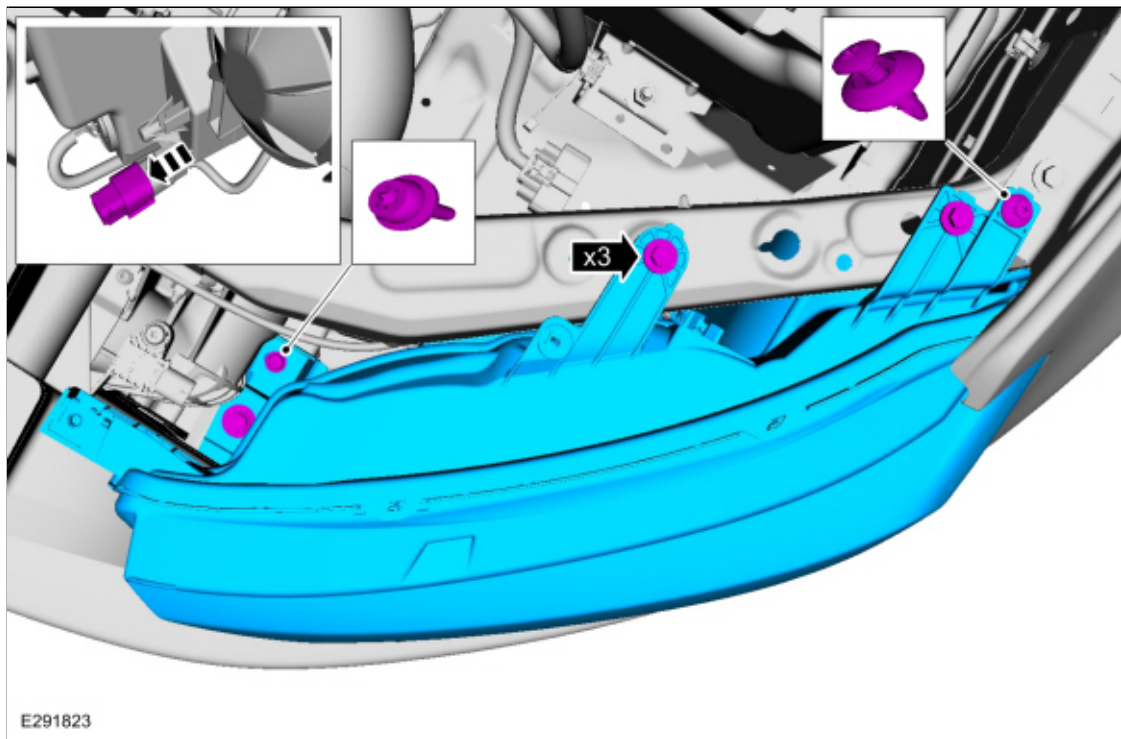

Installation

1. To install, reverse the removal procedure.
2. Adjust the headlamps.
Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

Copyright © 2019 Ford Motor Company

