


License Plate Lamp


Removal

NOTE: LH side shown, RH side shown.

1. Remove the license plate lamp assembly.
 1. Release the tabs.
 2. Remove the assembly.

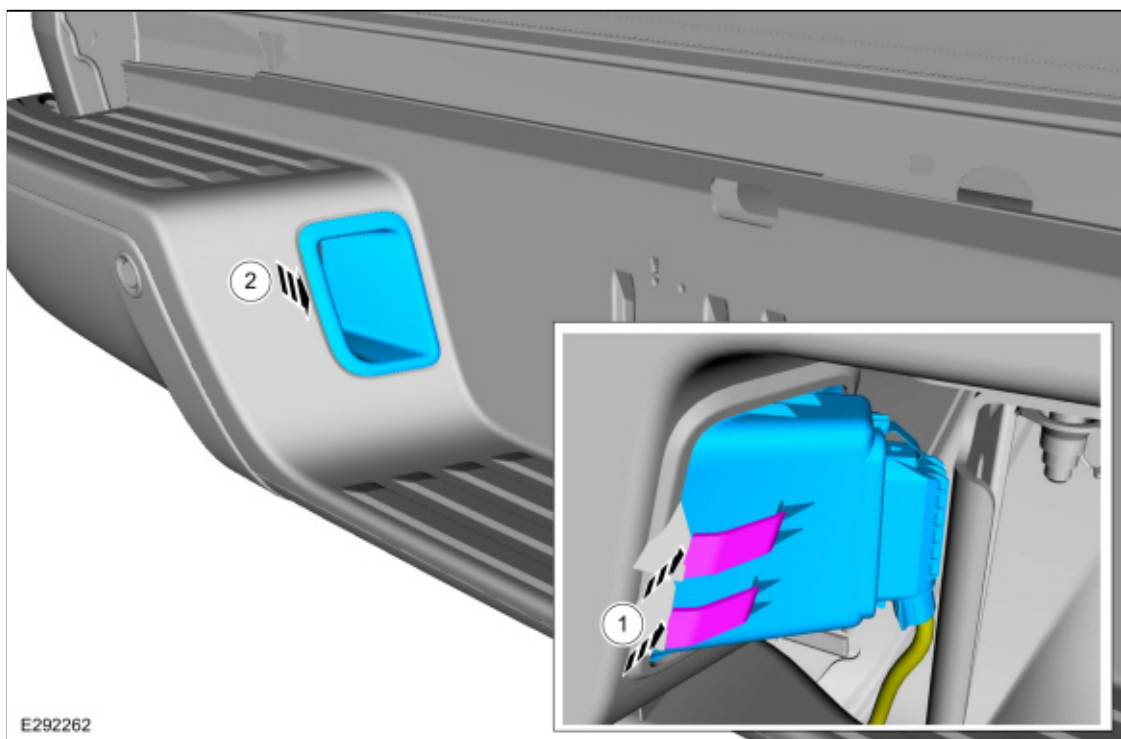

2. Remove the license plate lamp bulb.
 1. Release the clip.
 2. Remove the bulb holder.
 3. Remove the bulb.

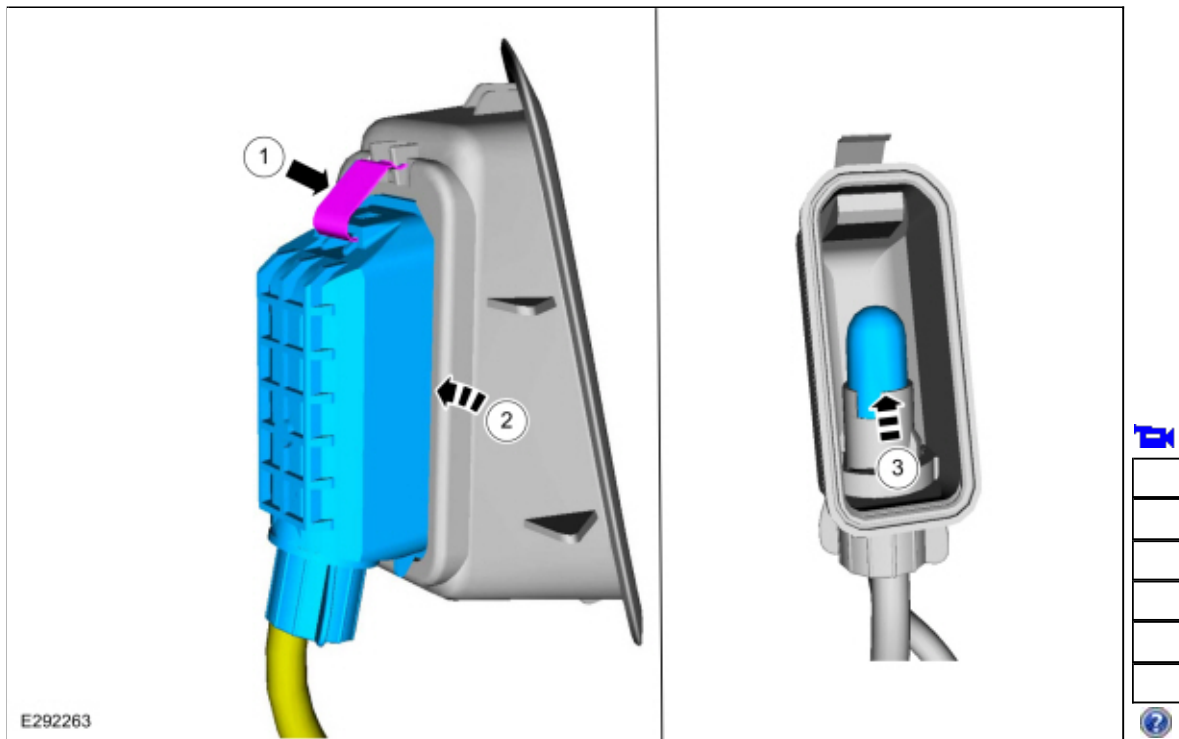

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

