


Low Beam Headlamp Bulb

Removal


NOTE: Headlamps shown removed for clarity.

NOTE: LH headlamp shown, RH headlamp similar.


1. Remove the high beam headlamp bulb cover.

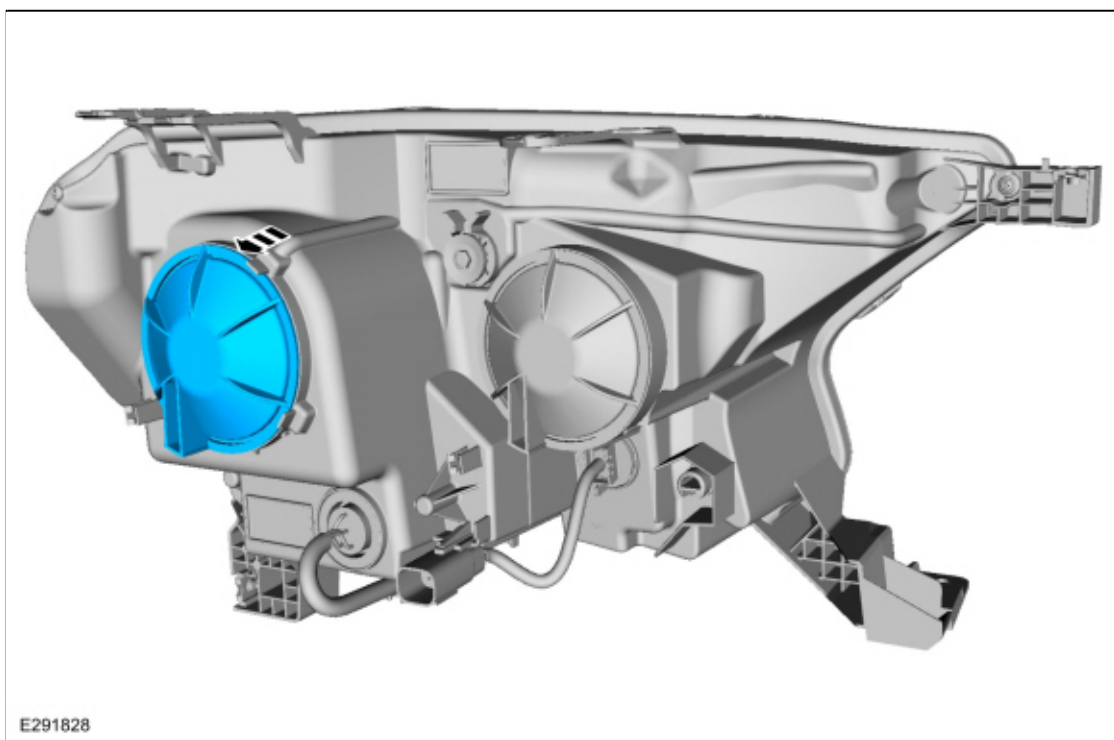

2. Disconnect the electrical connector.

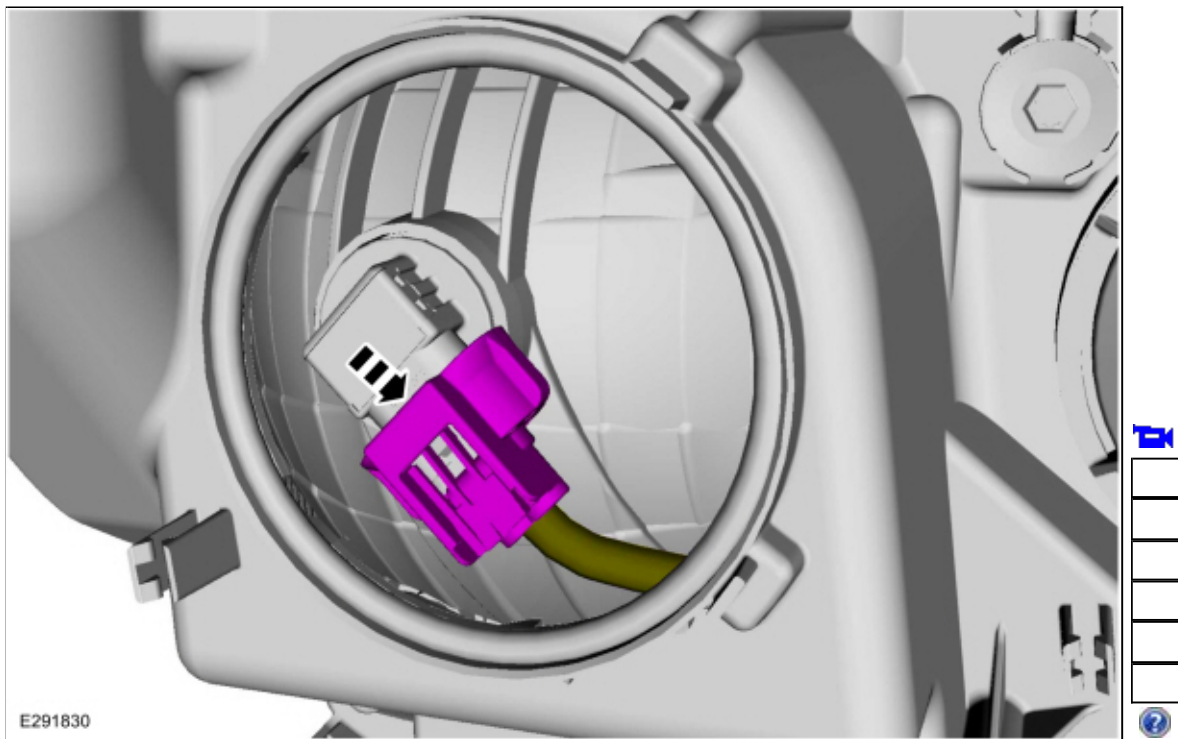

3. Rotate the bulb counterclockwise and remove the bulb.

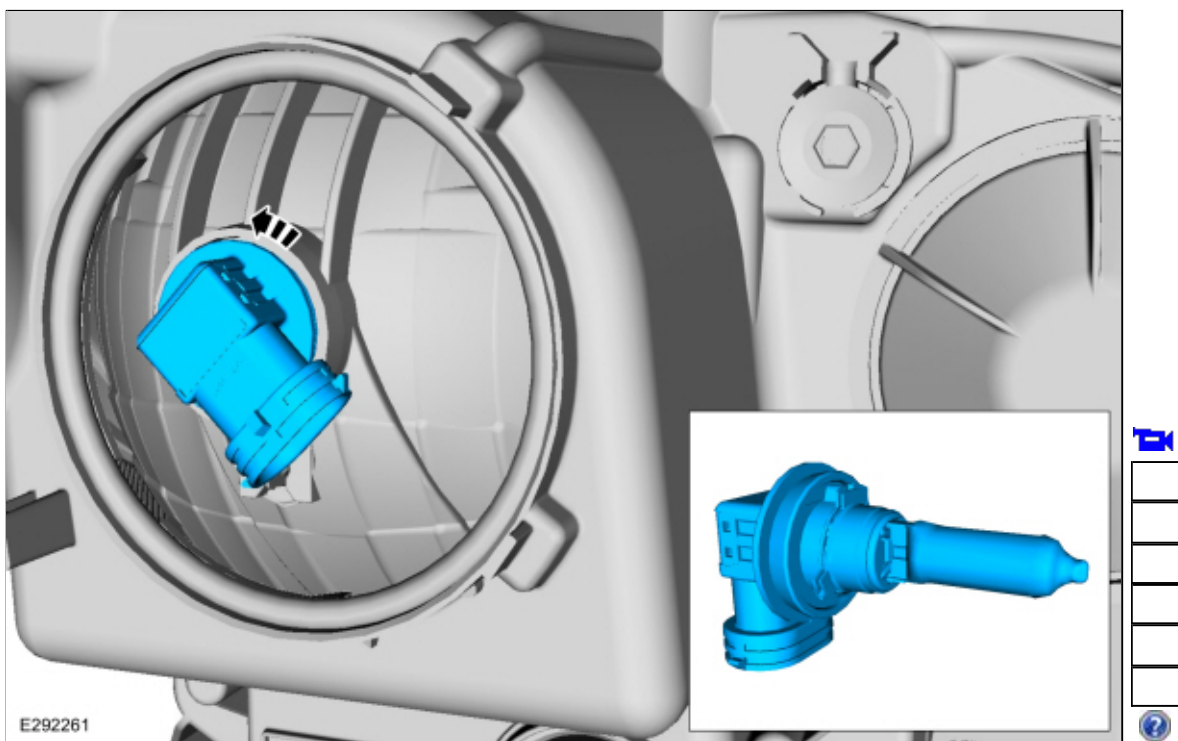

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
