


Trailer Module (TRM)**Removal**


NOTE: Removal steps in this procedure may contain installation details.

NOTE: If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

1. Using a diagnostic scan tool, begin the PMI process for the TRM following the on-screen instructions.
2. Remove front driver side seat only.
Refer to: Front Seat (501-10B) .
Refer to: Front Bench Seat (501-10B) .
3. Disconnect the electrical connectors.

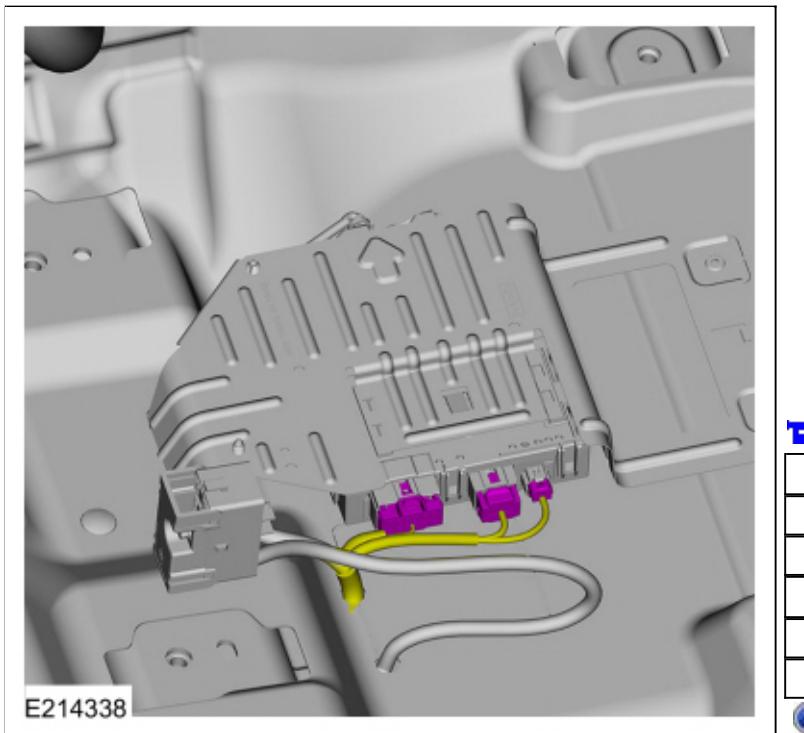

4.
 1. Release the tab.
 2. Remove the TRM.

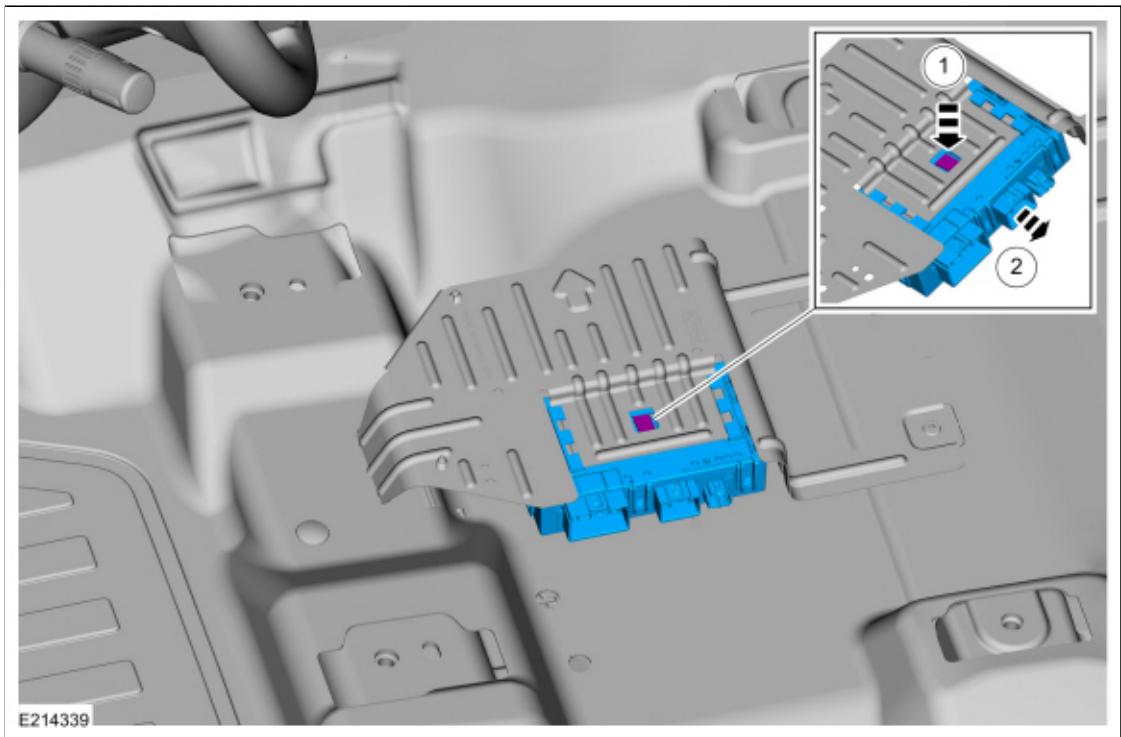

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only required if the component is being replaced.*

Using a diagnostic scan tool, complete the PMI process for the TRM following the on-screen instructions.

Copyright © 2019 Ford Motor Company

