

**Gateway Module A (GWM)****Removal**

**NOTE:** Removal steps in this procedure may contain installation details.


1. **WARNING:** Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


2. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Upload the GWM configuration to the scan tool by following the scan tool on-screen instructions.

- 3.

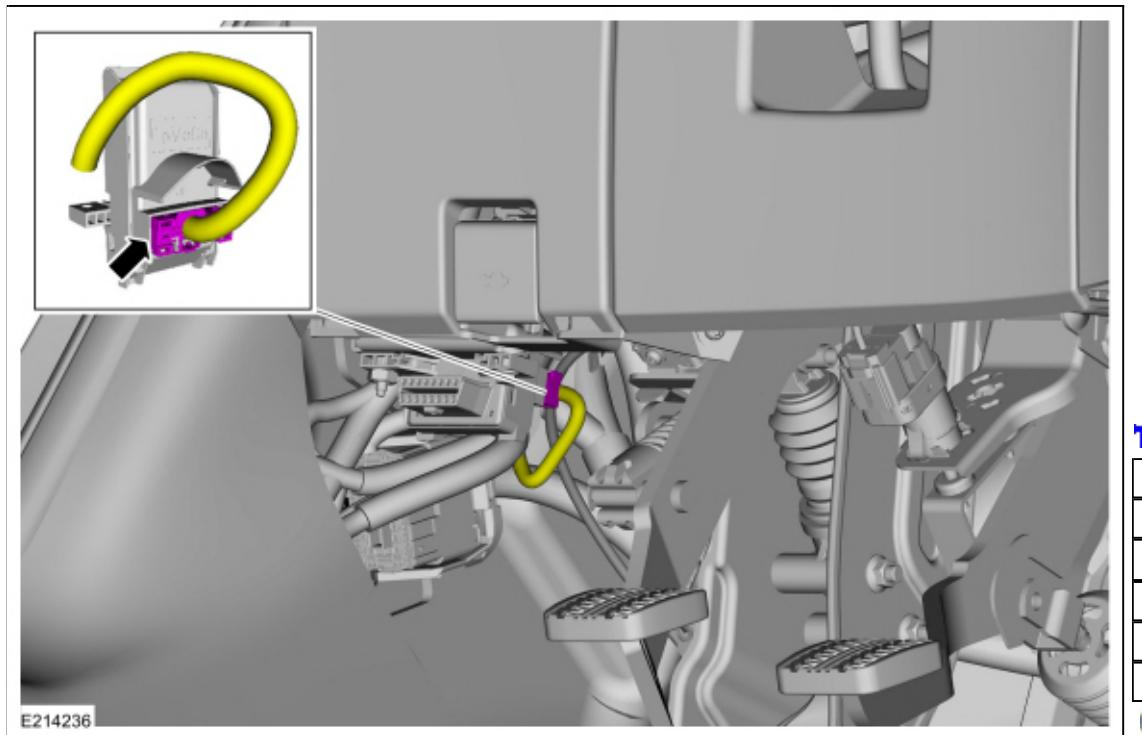

4. **Torque:** 35 lb.in (4 Nm)

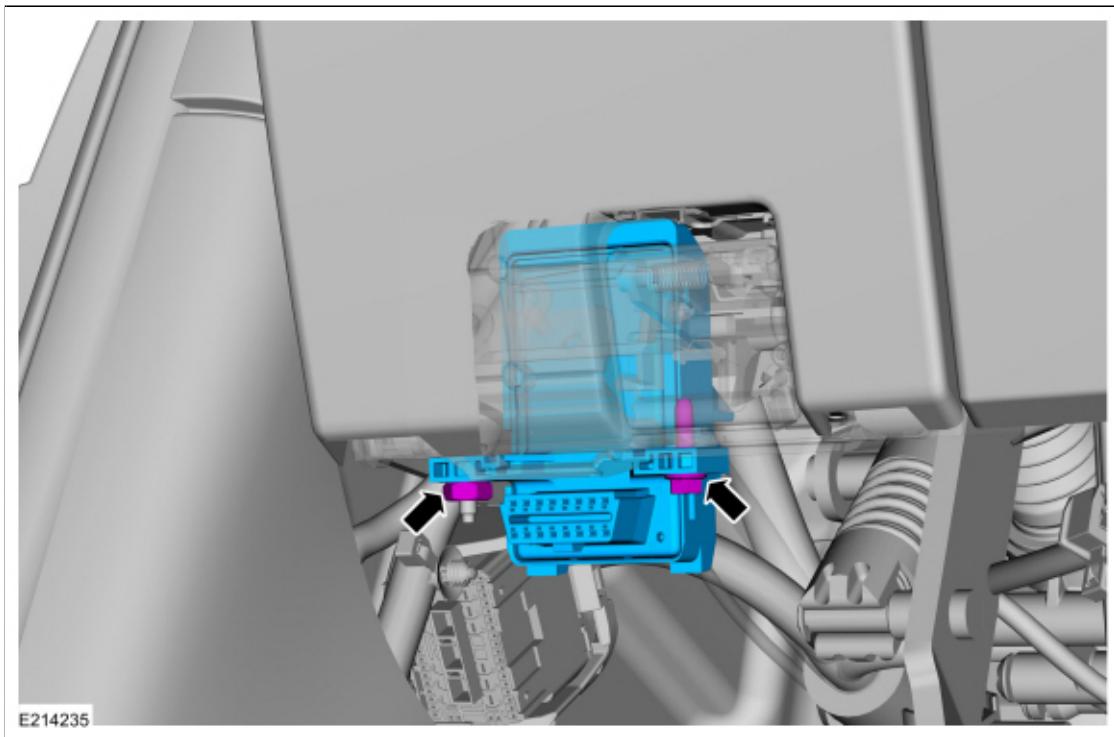

## Installation

1. To install, reverse the removal procedure.
2. Download the GWM configuration information from the scan tool to the new GWM following the scan tool on-screen instructions.

Copyright © 2019 Ford Motor Company

