


Cowl Panel

 
Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the wiper linkage assembly.
Refer to: [Wiper Linkage Assembly](#) (501-16 Wipers and Washers, Removal and Installation).
2. Detach the wire harness retainers and the push the rubber grommet.

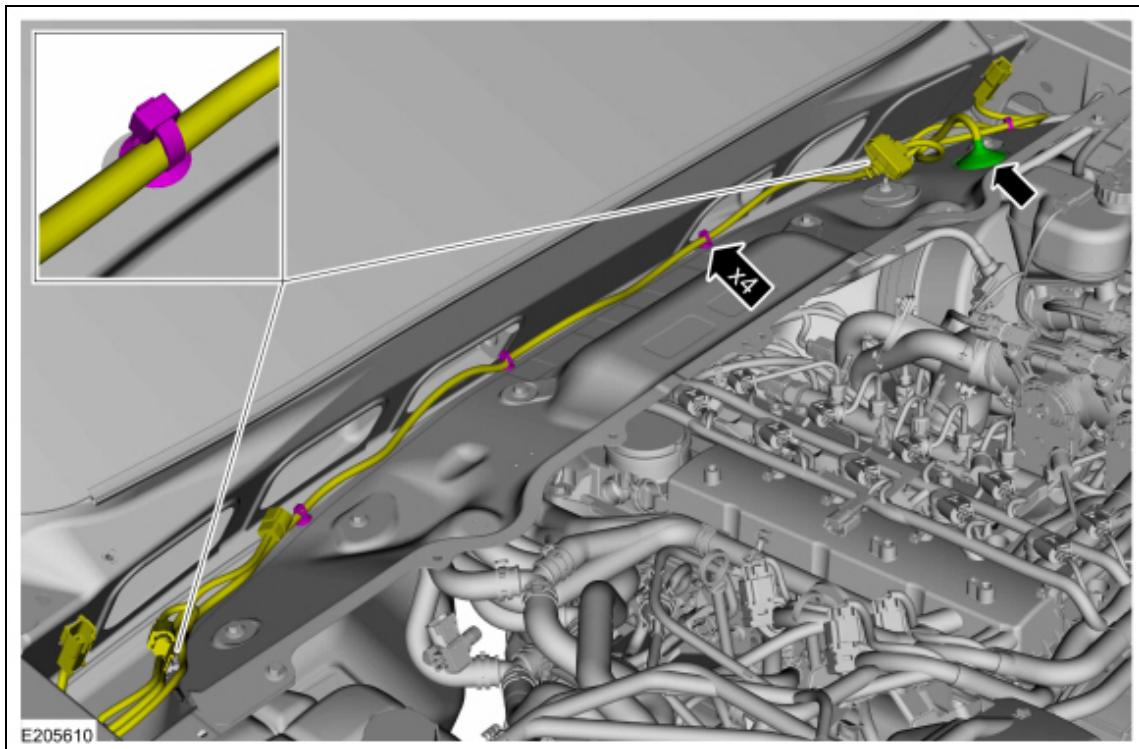

3. Remove the bolts, nut and the cowl panel.
Torque: 97 lb.in (11 Nm)



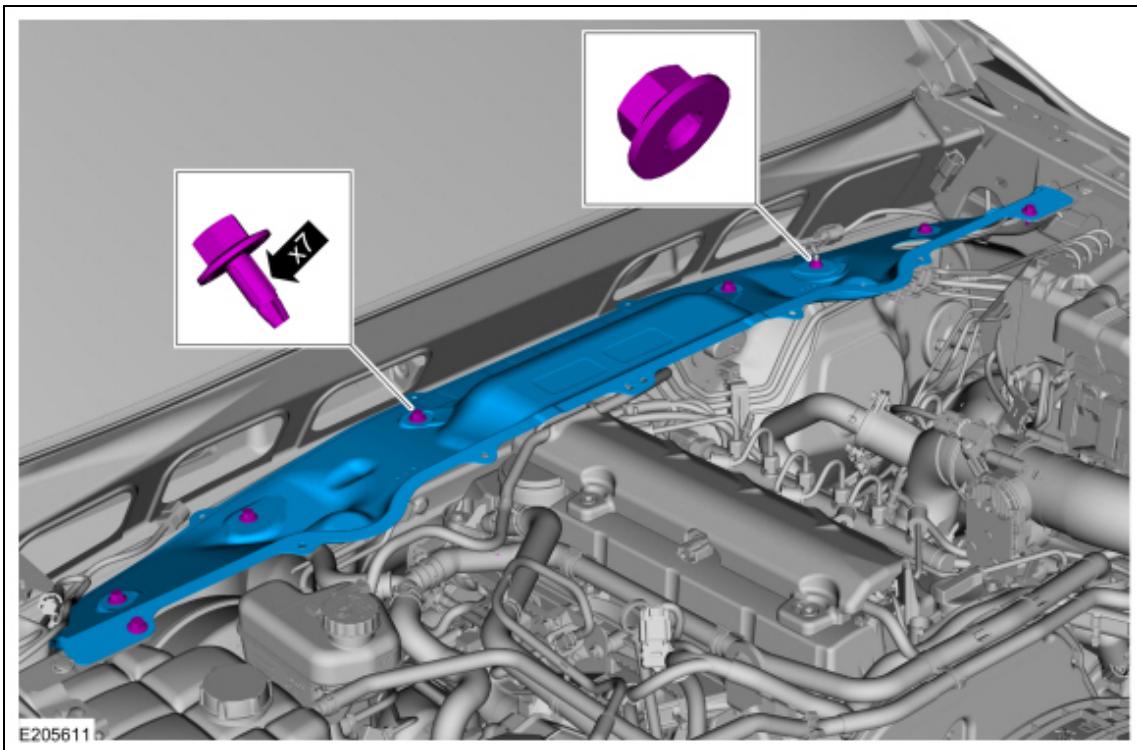

Installation

1. To install, reverse the removal procedure.

