

### Engine Front Undershield


#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** Vehicles come with an undershield or a skid plate.

Remove the bolts and the engine front undershield.


Torque: 22 lb.ft (30 Nm)

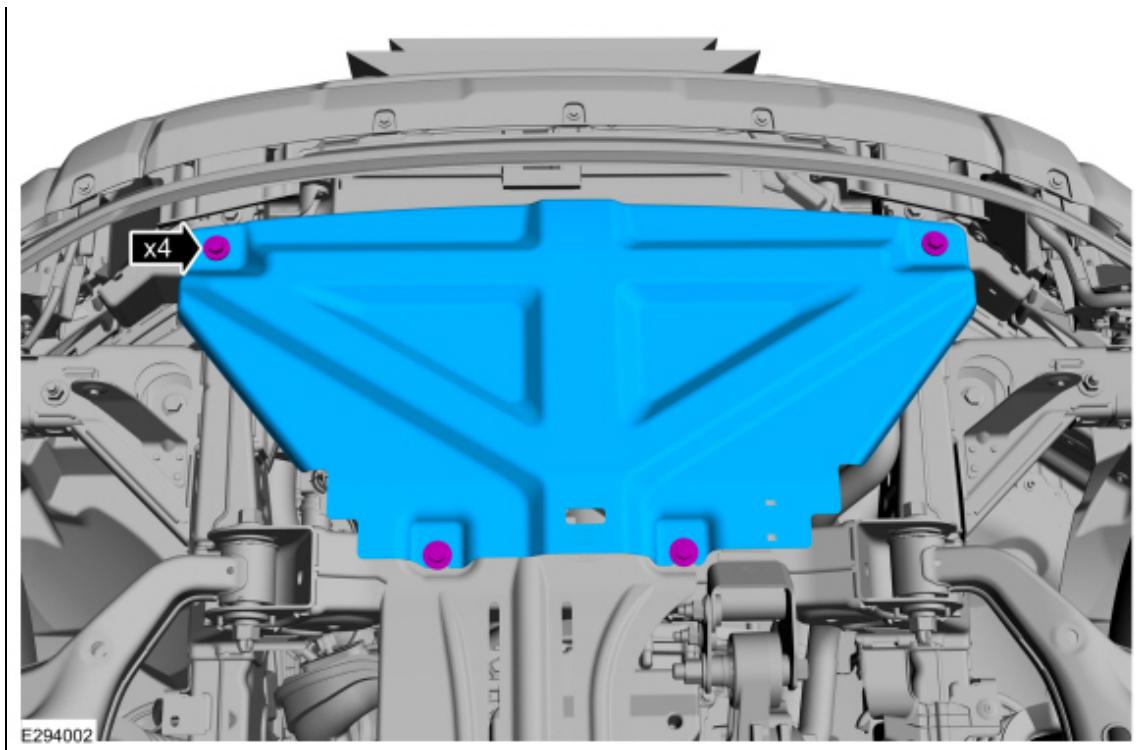


3. **NOTE:** Vehicles come with an undershield or a skid plate.

Remove the bolts and the skid plate.

 Torque: 22 lb.ft (30 Nm)



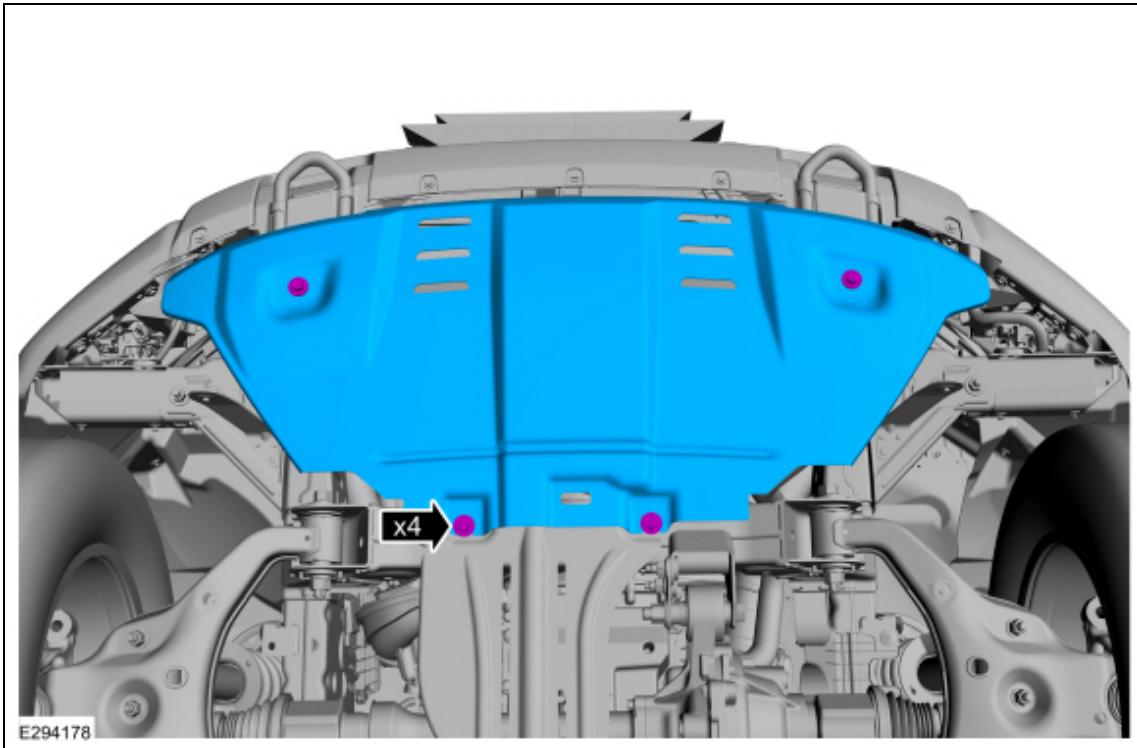

## Installation

1. To install, reverse the removal procedure.

