


Engine Rear Undershield

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Remove the bolts and the engine rear undershield.
Torque: 22 lb.ft (30 Nm)

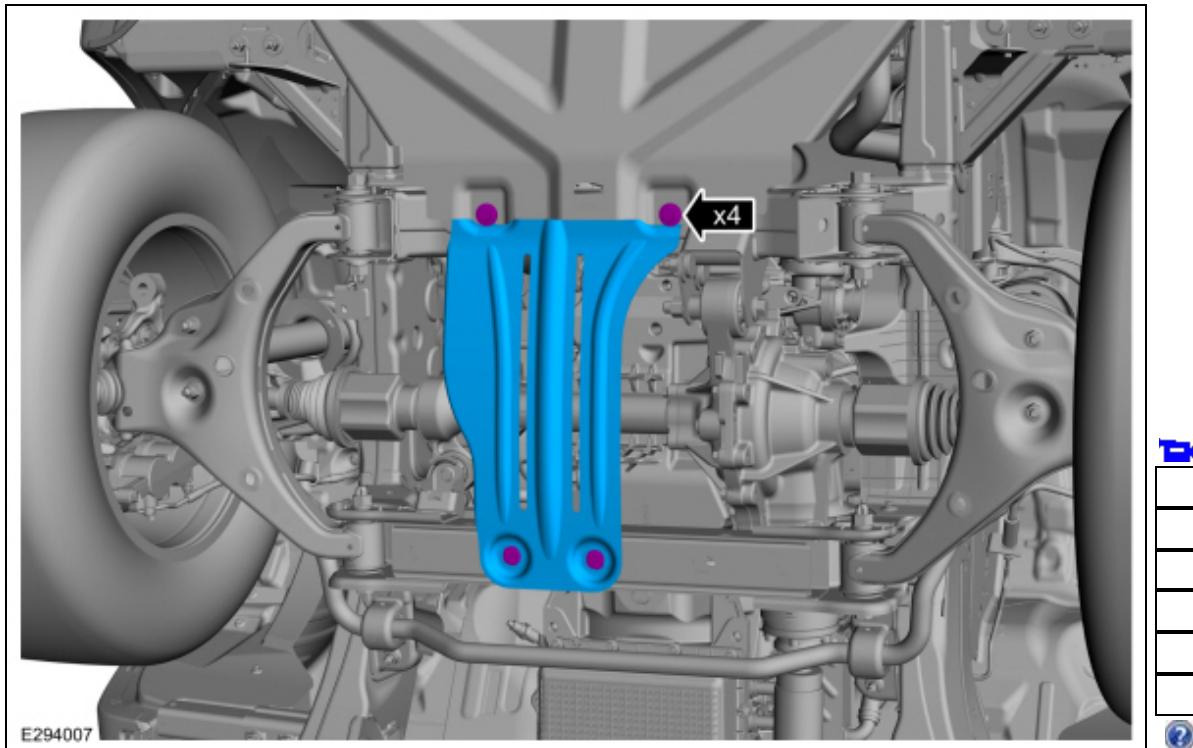

Installation

1. To install, reverse the removal procedure.

