

Fender

Special Tool(s) / General Equipment


Knife

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Remove the fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
2. Remove the headlamp assembly.
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
3. Remove the running board.
Refer to: [Running Board](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
4.
 1. Release the clips and remove the applique.
 2. If equipped.
Disconnect the electrical connector.

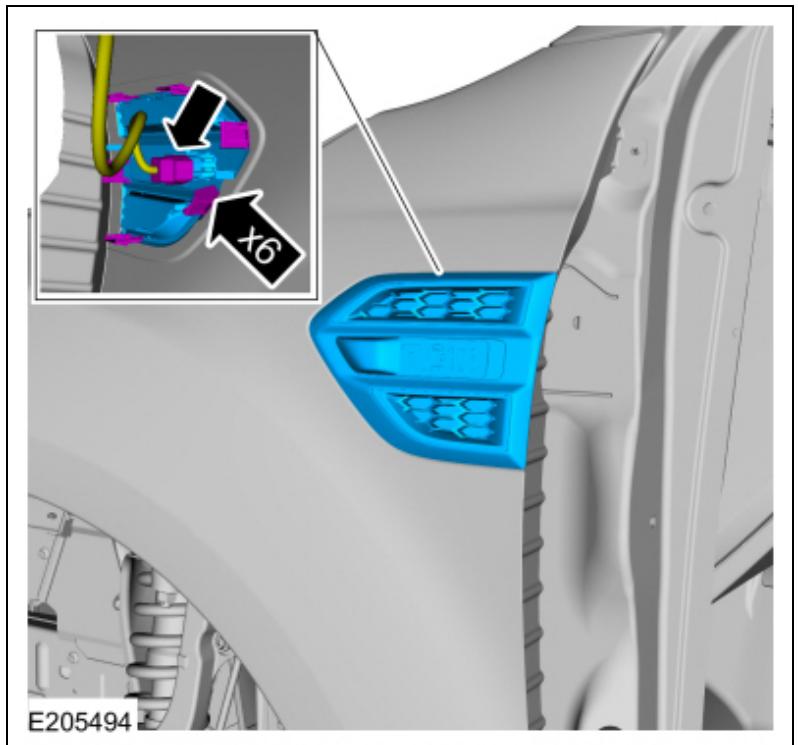


5. If equipped.
Remove the bolts and the bumper bracket.
Torque:

1: 42 lb.in (4.8 Nm)
2: 17 lb.in (1.9 Nm)



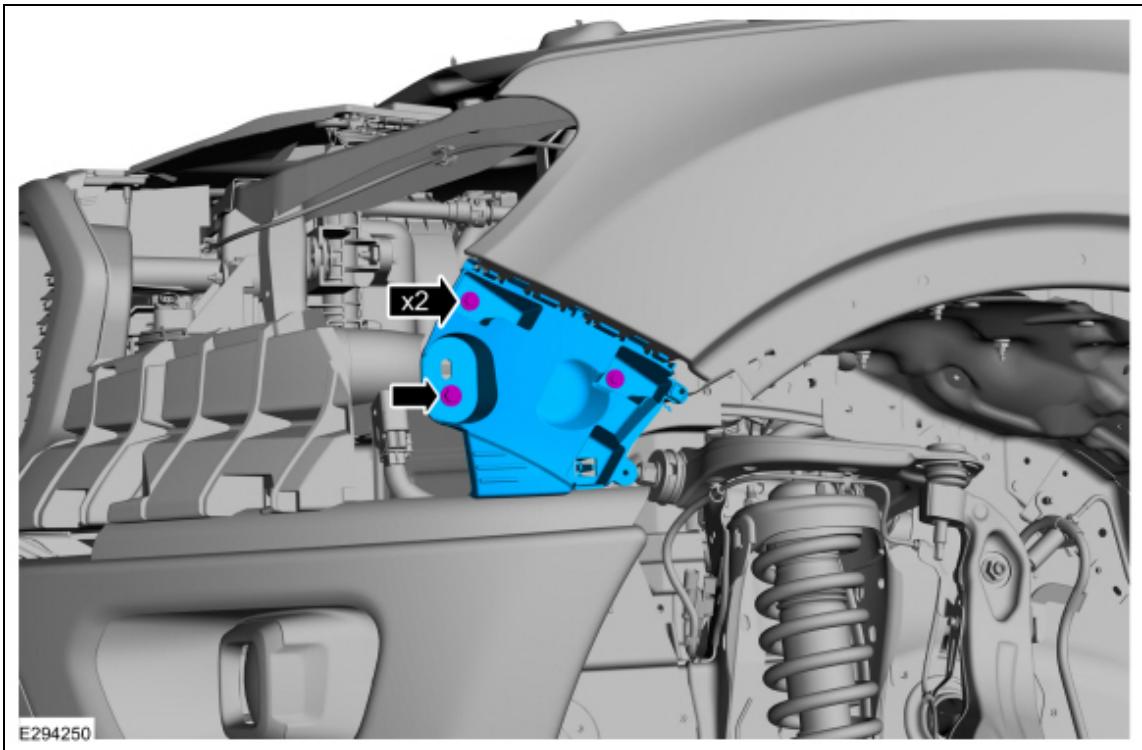


6.


1. If equipped.
Remove the push pin.
2. Remove the cowl panel extension.

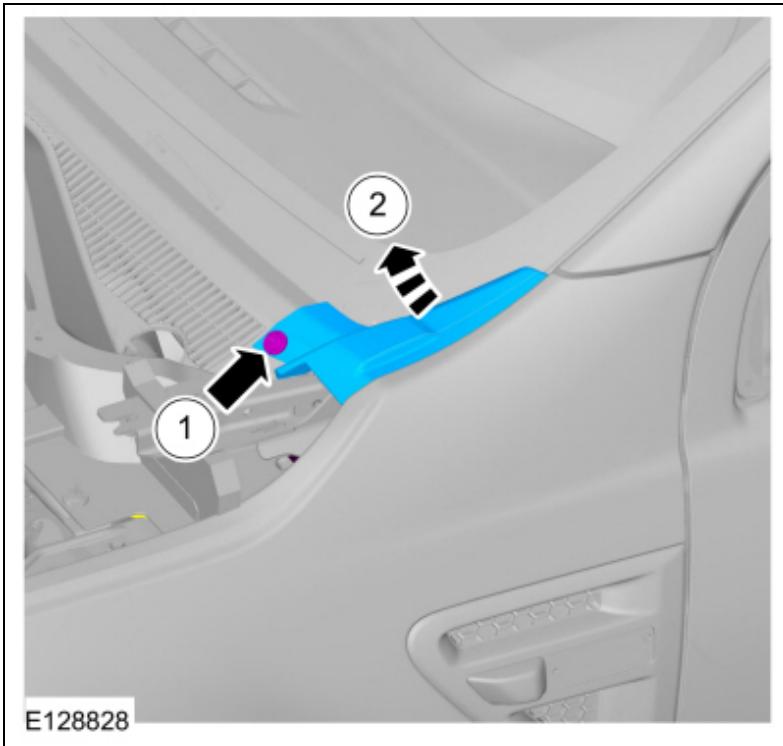

  7. Remove the bolts.
Torque: 80 lb.in (9 Nm)

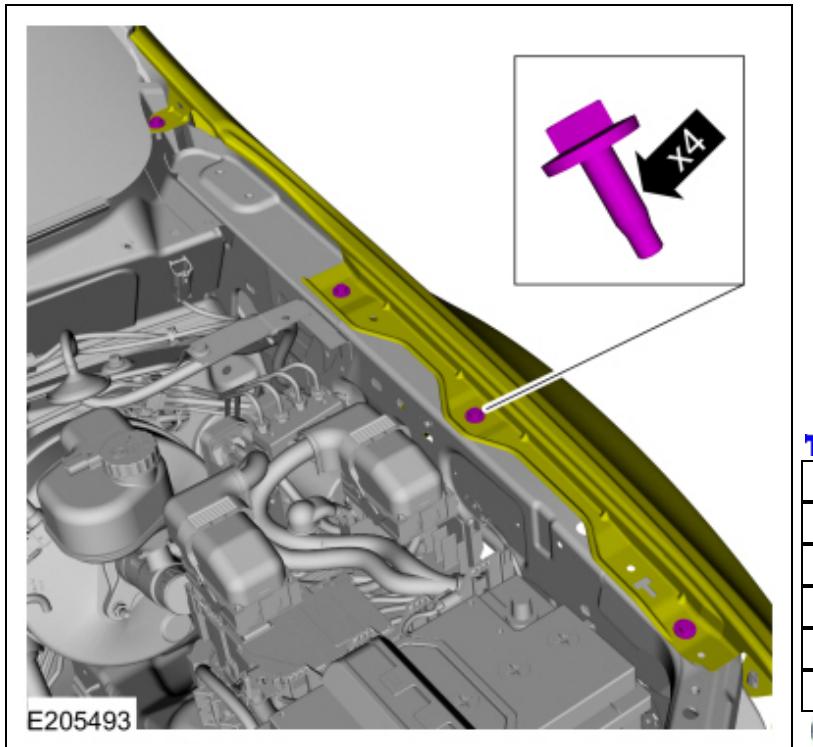


8. Remove the bolts.
Torque: 80 lb.in (9 Nm)

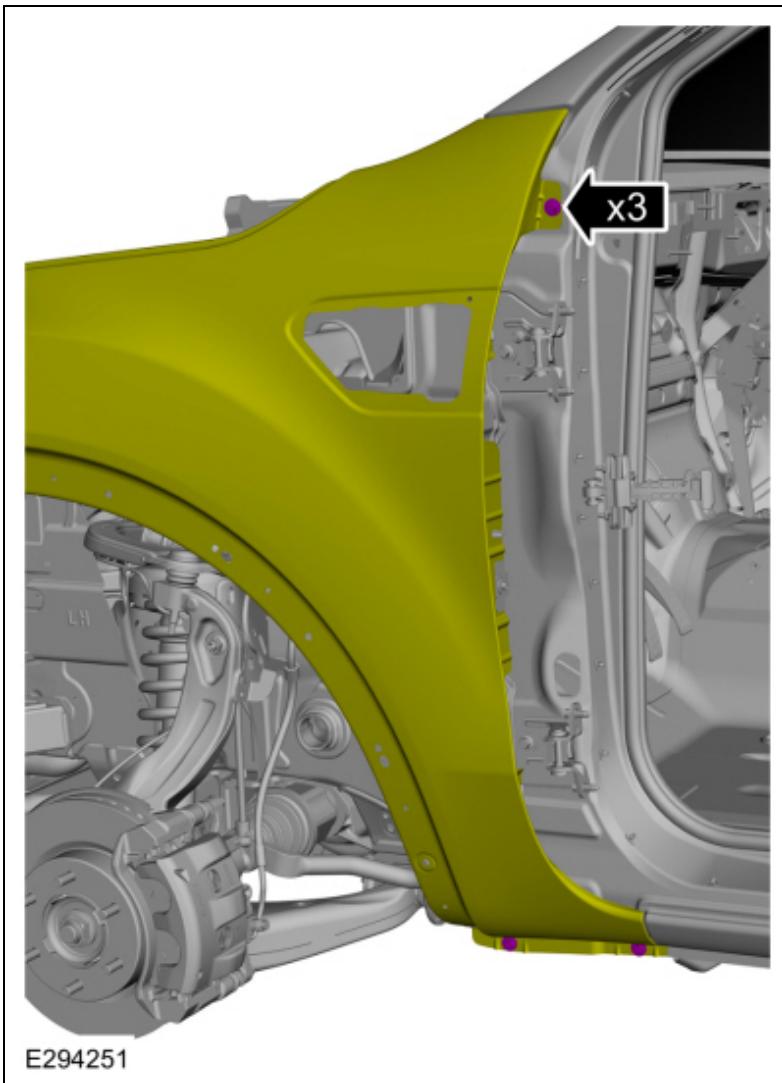

9.


- Remove the bolt.
Torque: 80 lb.in (9 Nm)
- Using a knife, cut the foam sealant between the fender and the body.
Use the General Equipment: Knife



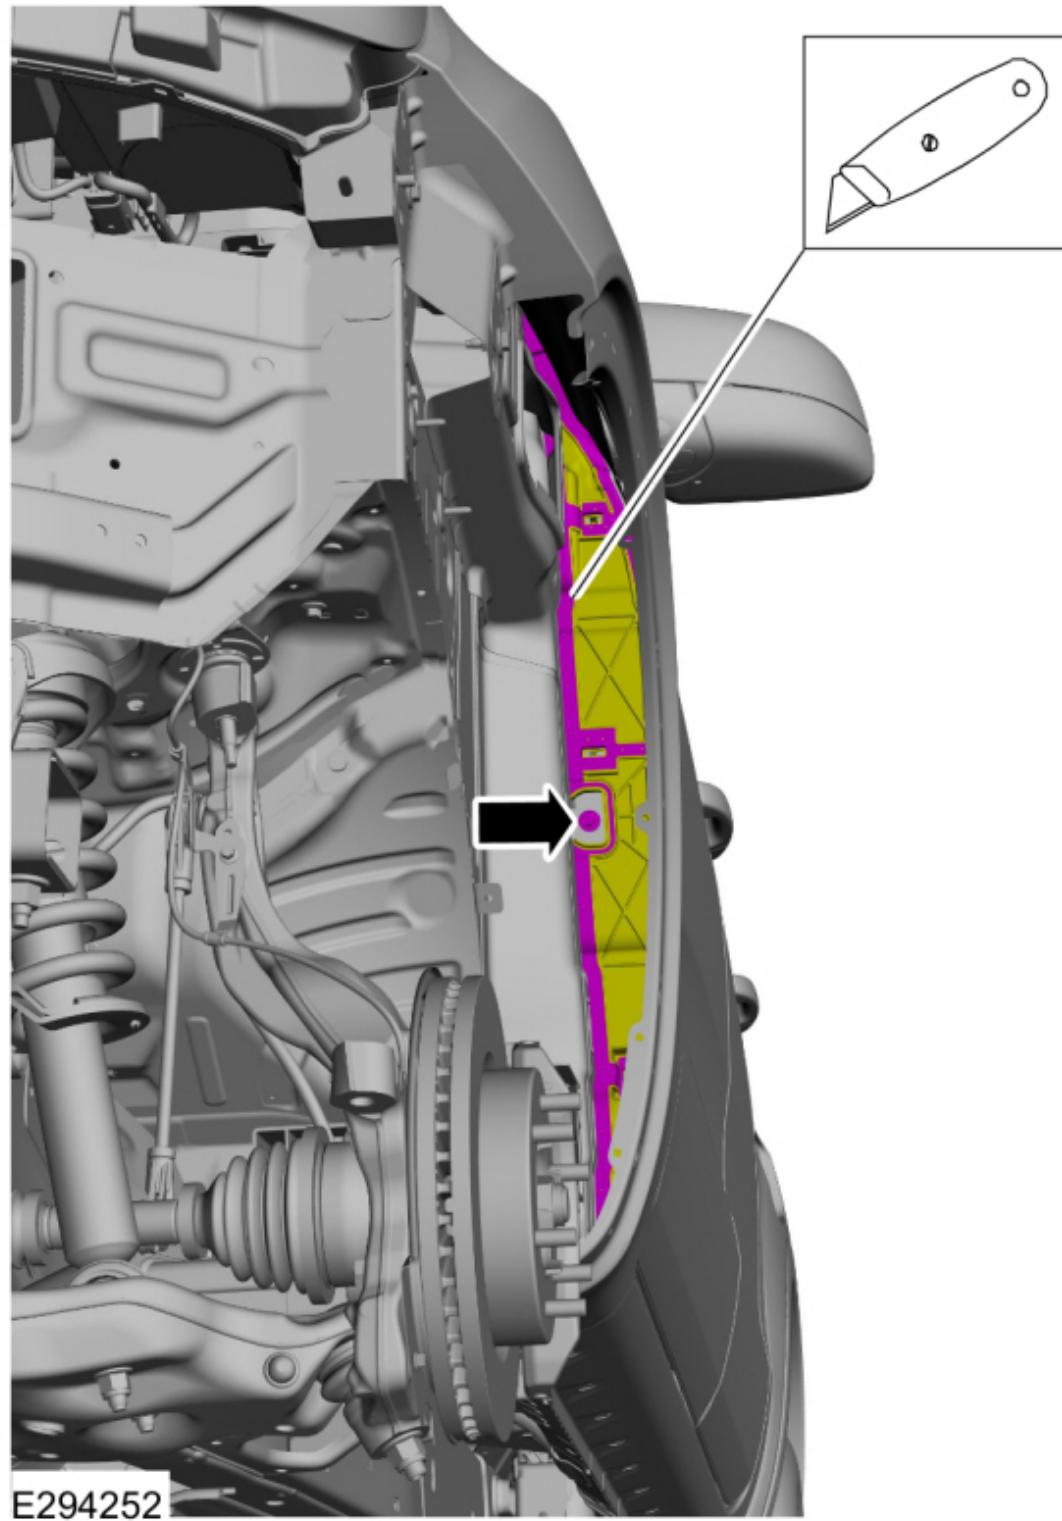

10. Remove the bolts and the fender.
Torque: 80 lb.in (9 Nm)



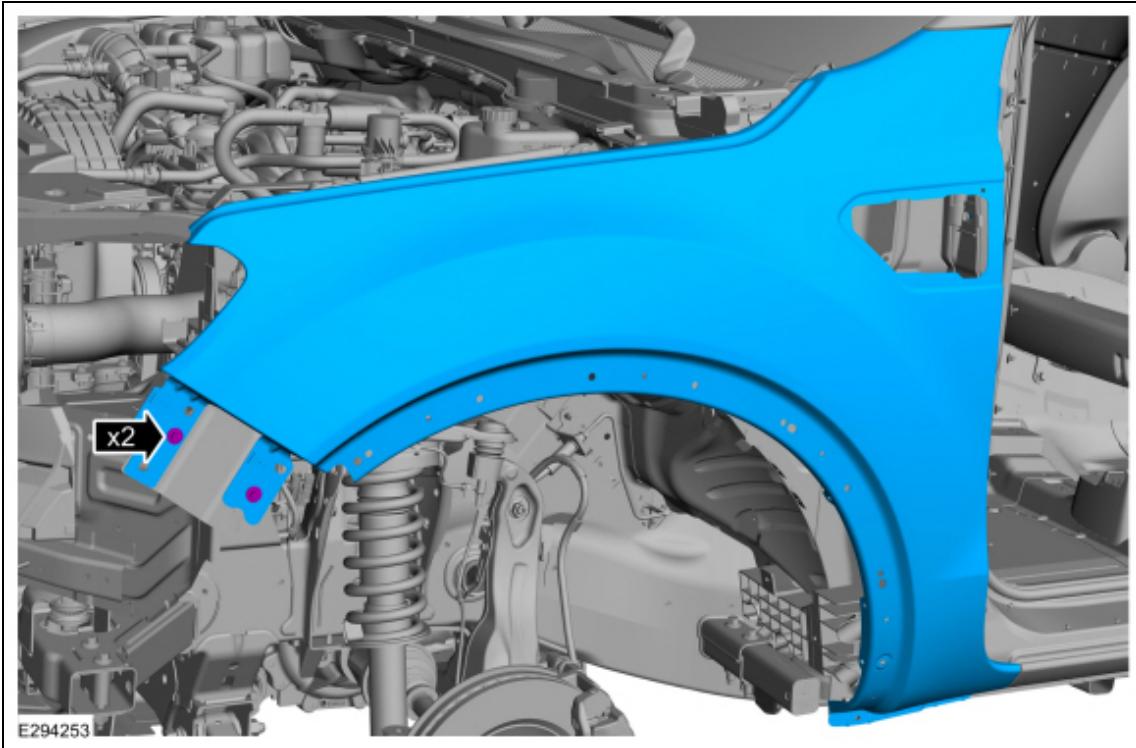

Installation

1. To install, reverse the removal procedure.

