

Front Door Alignment - Crew Cab/Regular Cab

Base Part Number: 20124

Inspection

NOTE: LH side shown, RH side similar.

NOTE: Crew Cab shown, Regular Cab similar.

1. Inspect the front door-to-body dimensions.
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

 
Adjustment


All alignments

1. Open the front door.




2. Remove the bolts and the striker assembly.



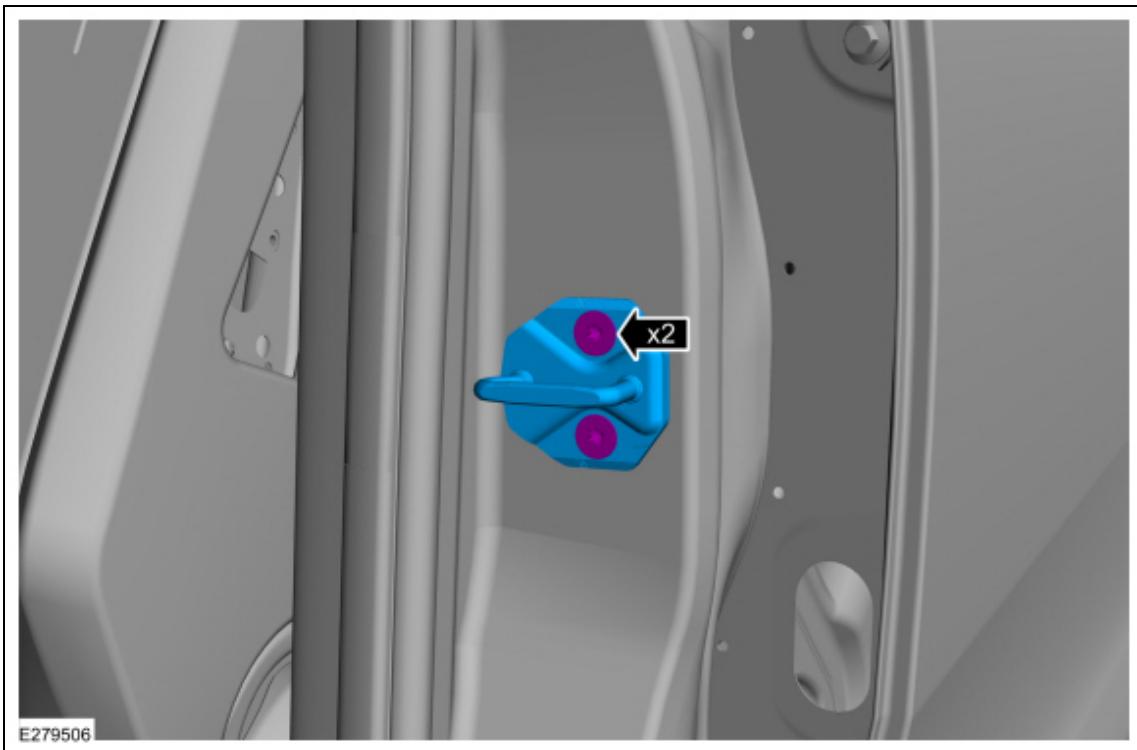


Front door in and out, up and down alignment

3. Loosen the bolts enough to permit movement of the door.

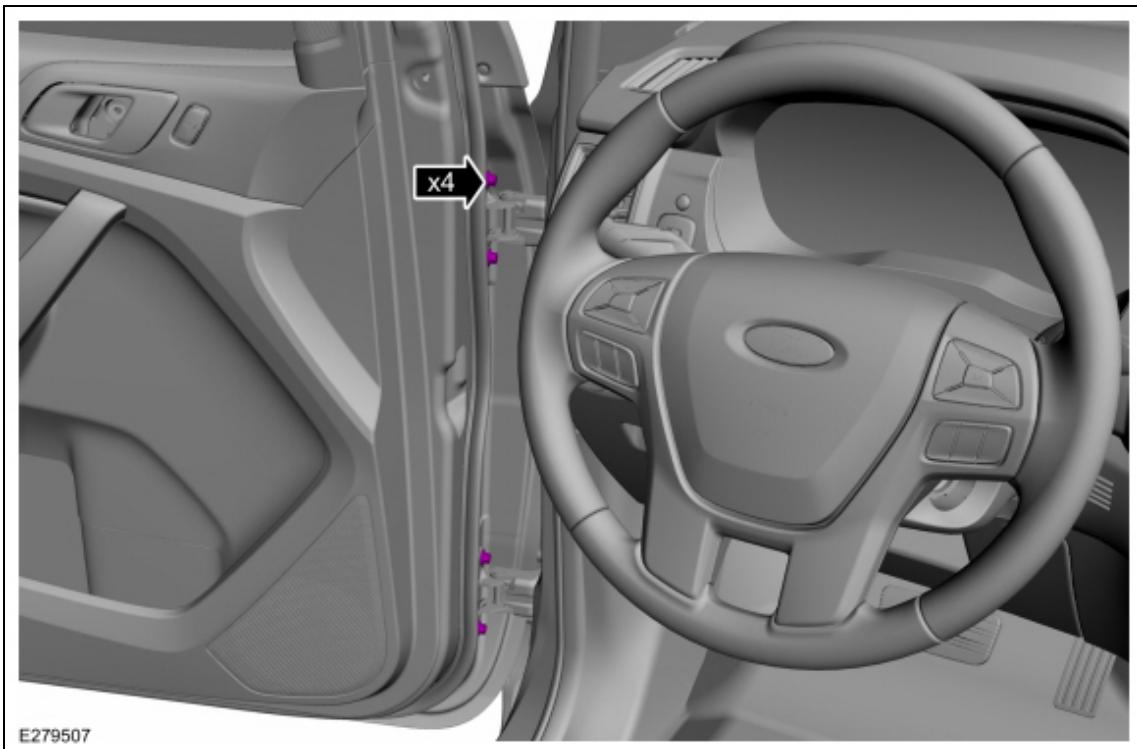


4. Adjust the door to specification.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).


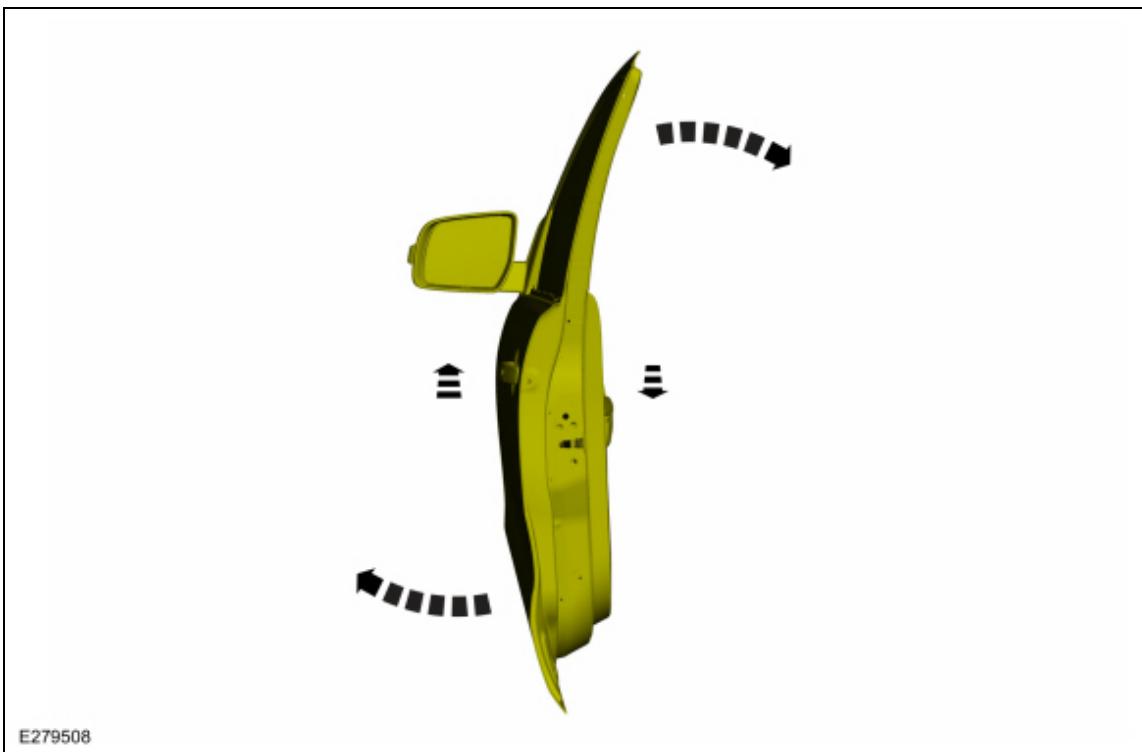


5. Tighten the bolts.
Torque: 18 lb.ft (25 Nm)

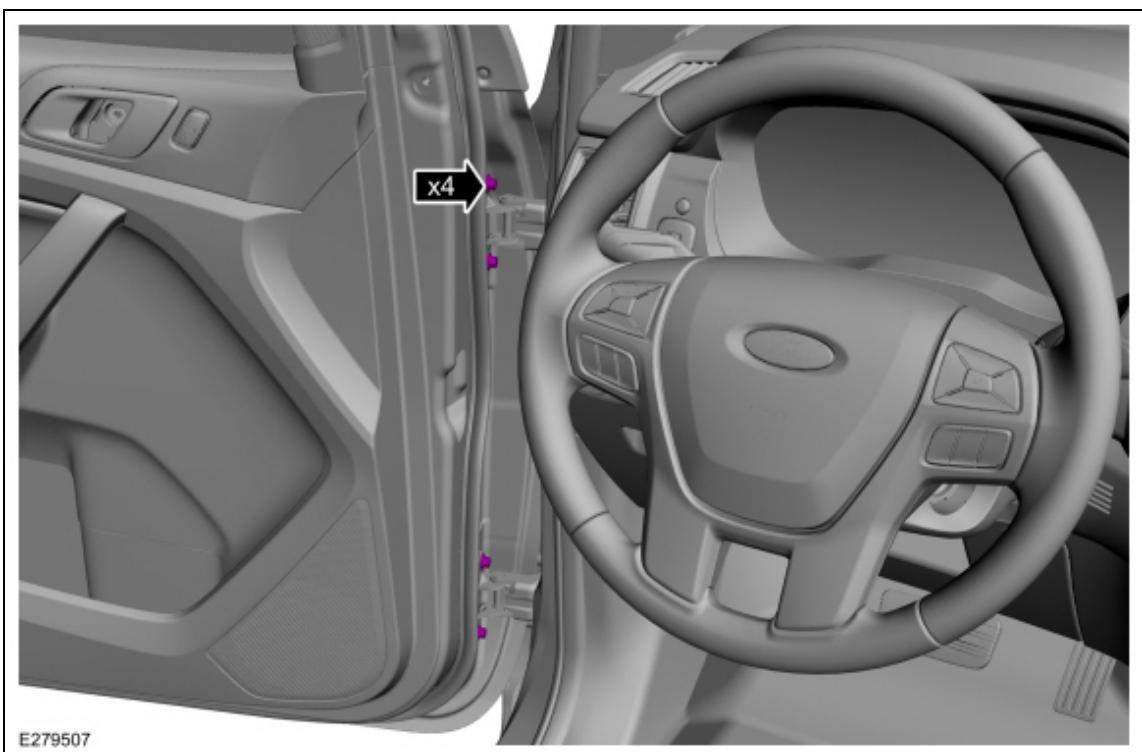

Front door fore, aft and tilt alignment

 6. Loosen the bolts enough to permit movement of the door.

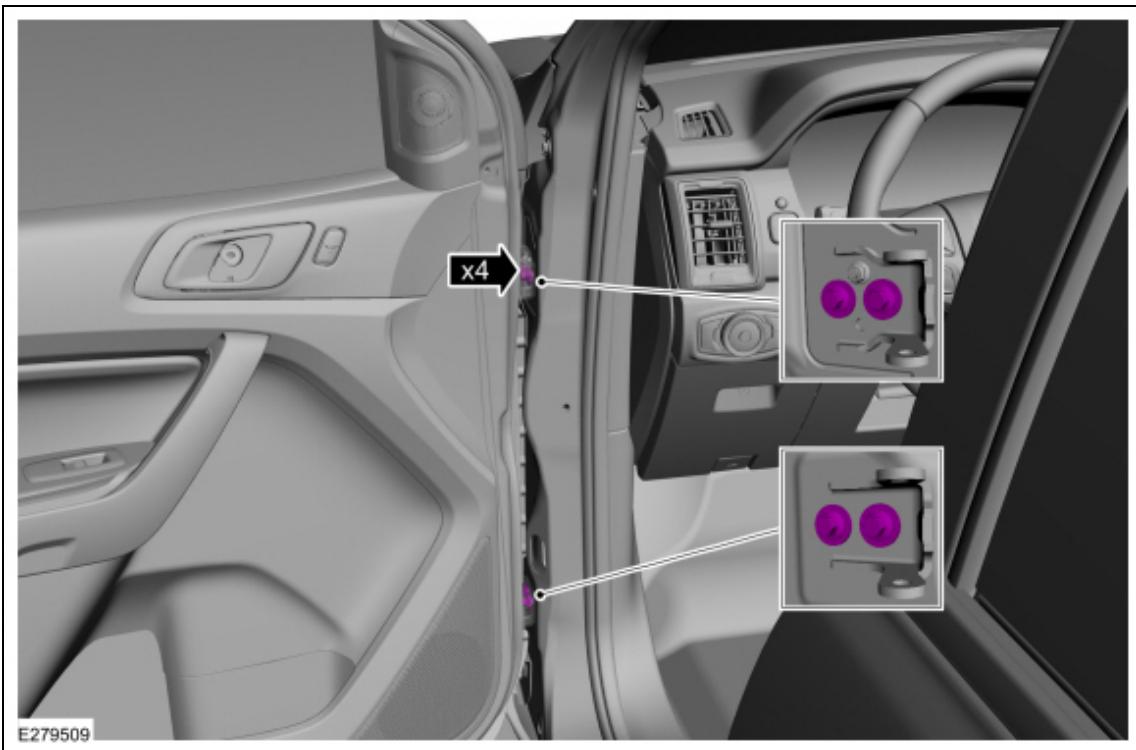


7. Carefully close the door.



8. Adjust the door to specification.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



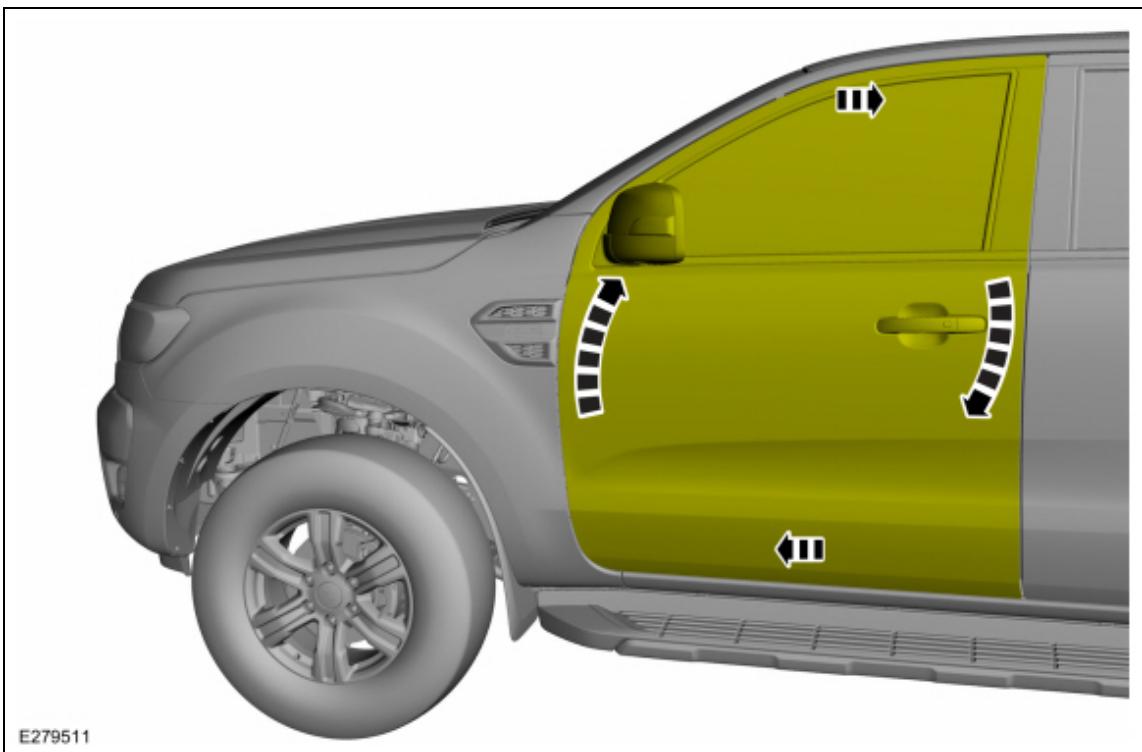


9. Carefully open the door.



10. Tighten the bolts.
Torque: 18 lb.ft (25 Nm)




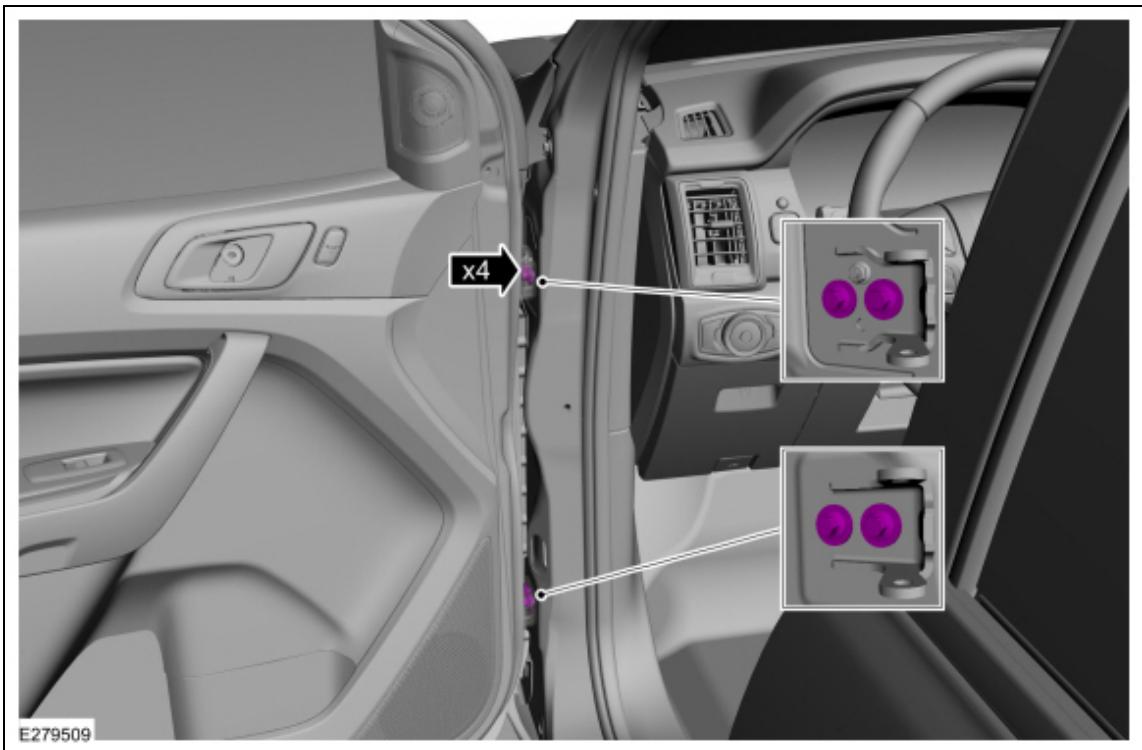

All alignments


11. Install the striker assembly and the bolts.

Torque: 177 lb.in (20 Nm)

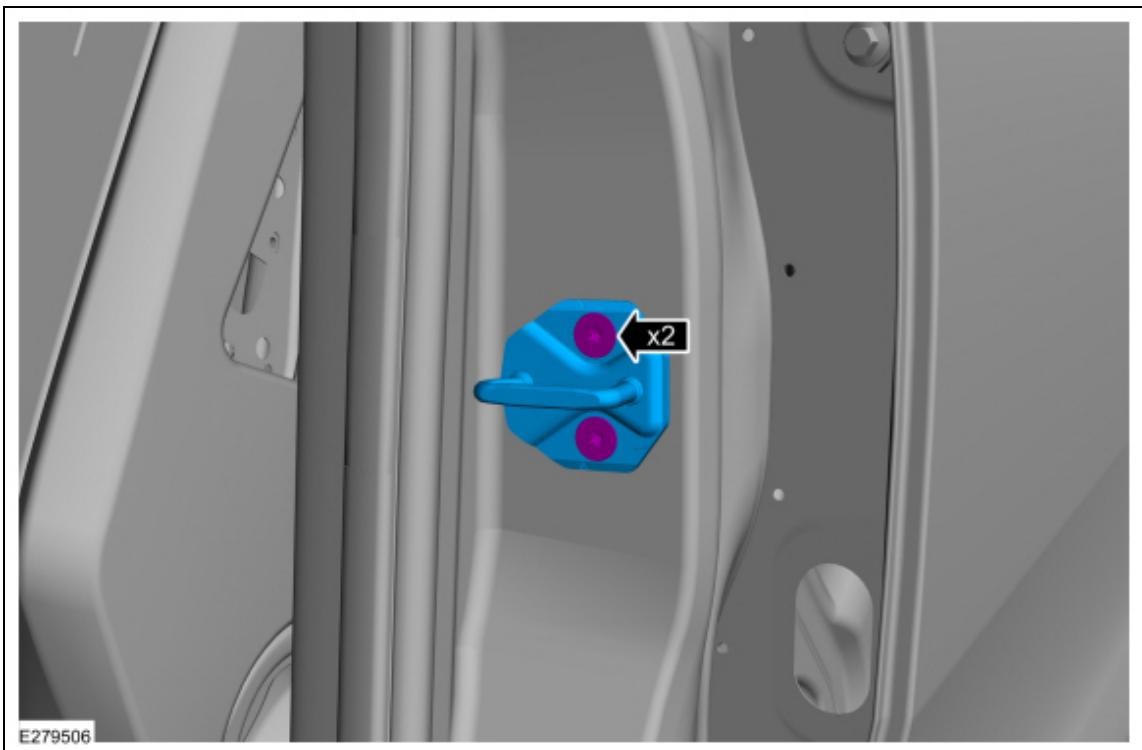

12. Check the body-to-front door dimensions.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

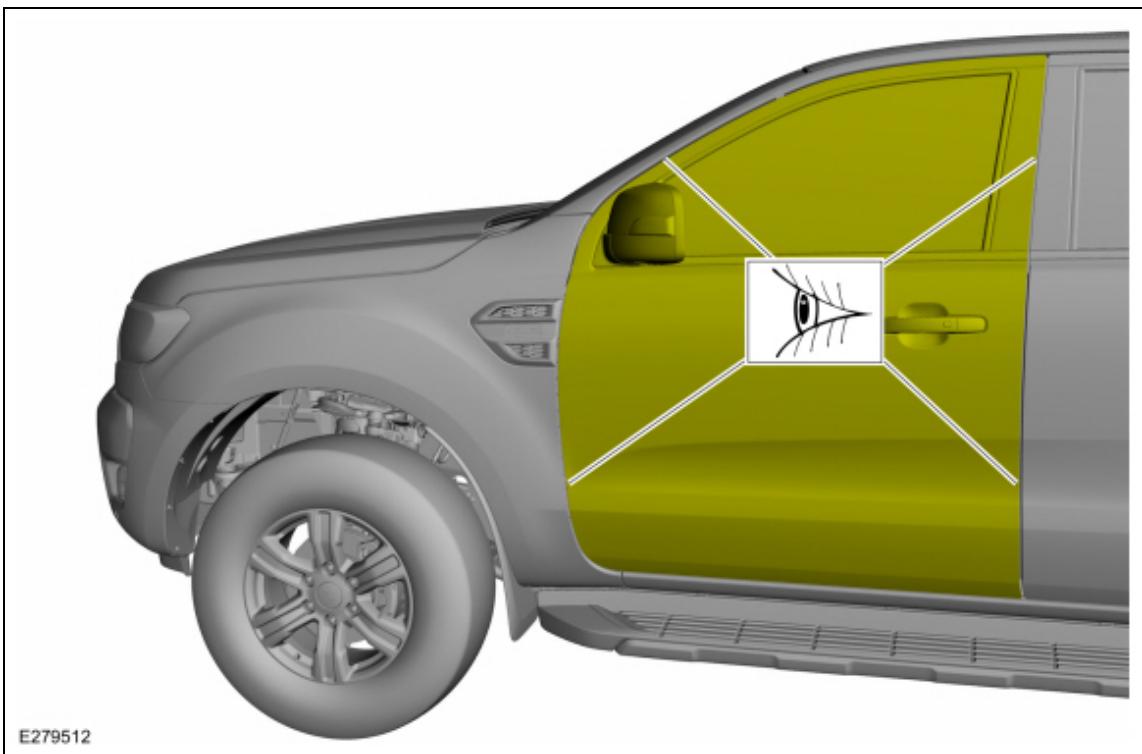

E279512



Copyright © 2019 Ford Motor Company