

Hood Alignment

Base Part Number: 16000

Inspection


1. Inspect the hood-to-body dimensions.
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

All alignments

2. Remove the hood latch.
Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

Hood fore and aft, left and right alignments

3. Loosen the nuts to permit movement of the hood.

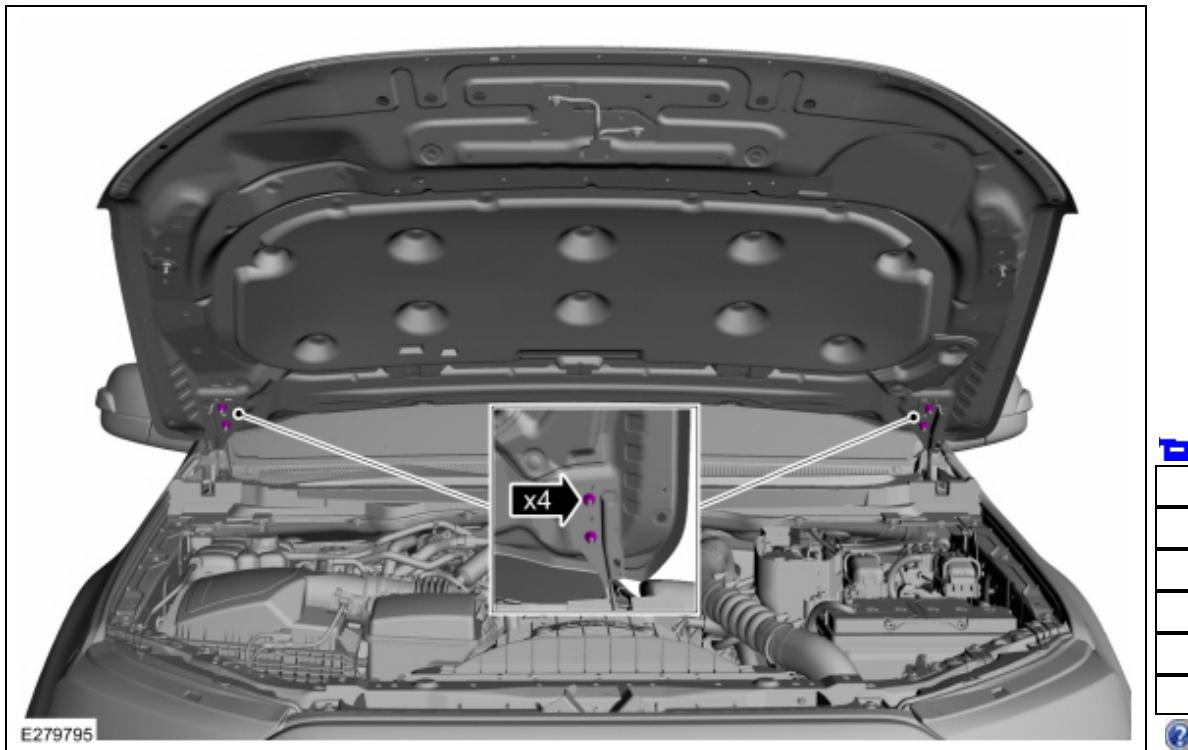

4. Carefully close the hood.






5. Adjust the hood to specification.

Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).




6. Carefully open the hood.



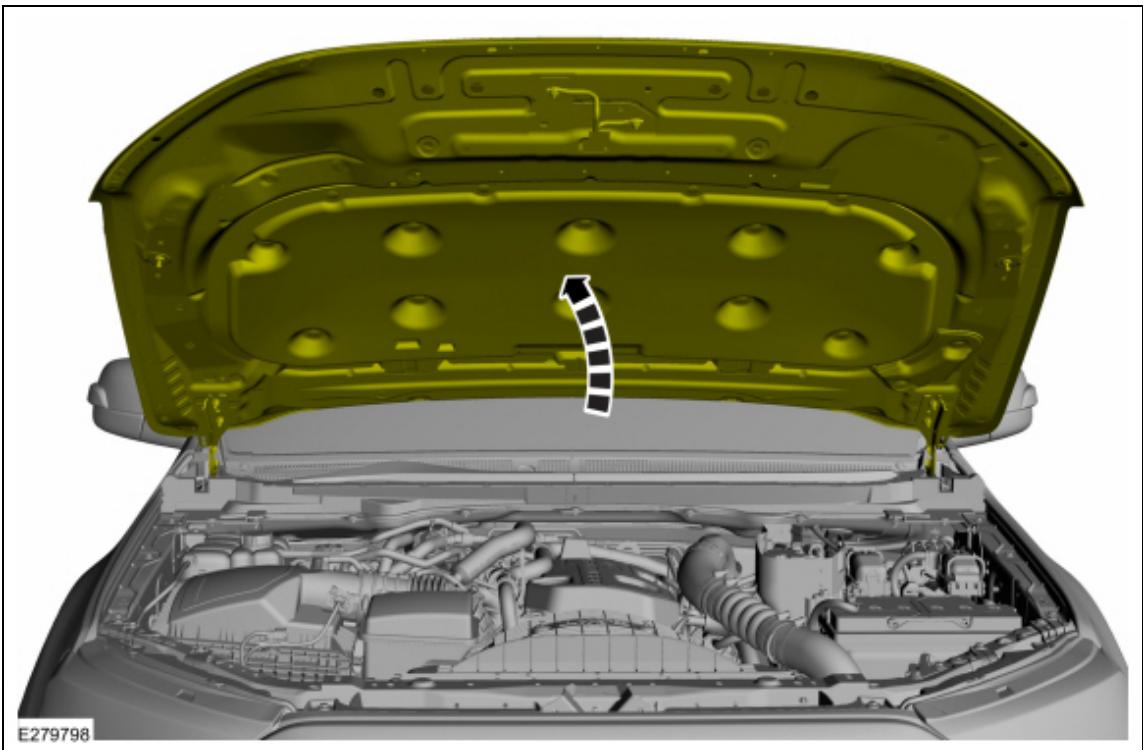


7. Tighten the nuts.
Torque: 18 lb.ft (25 Nm)

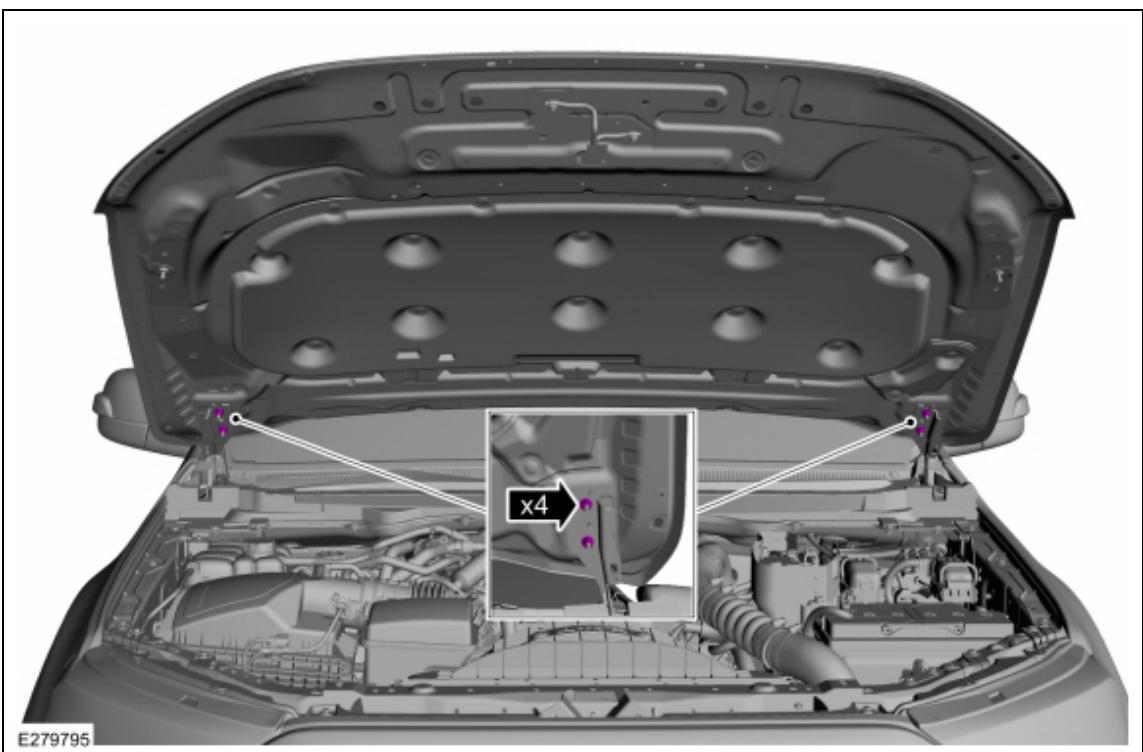

Hood front up and down alignments

8. Adjust the bump stop rubbers.

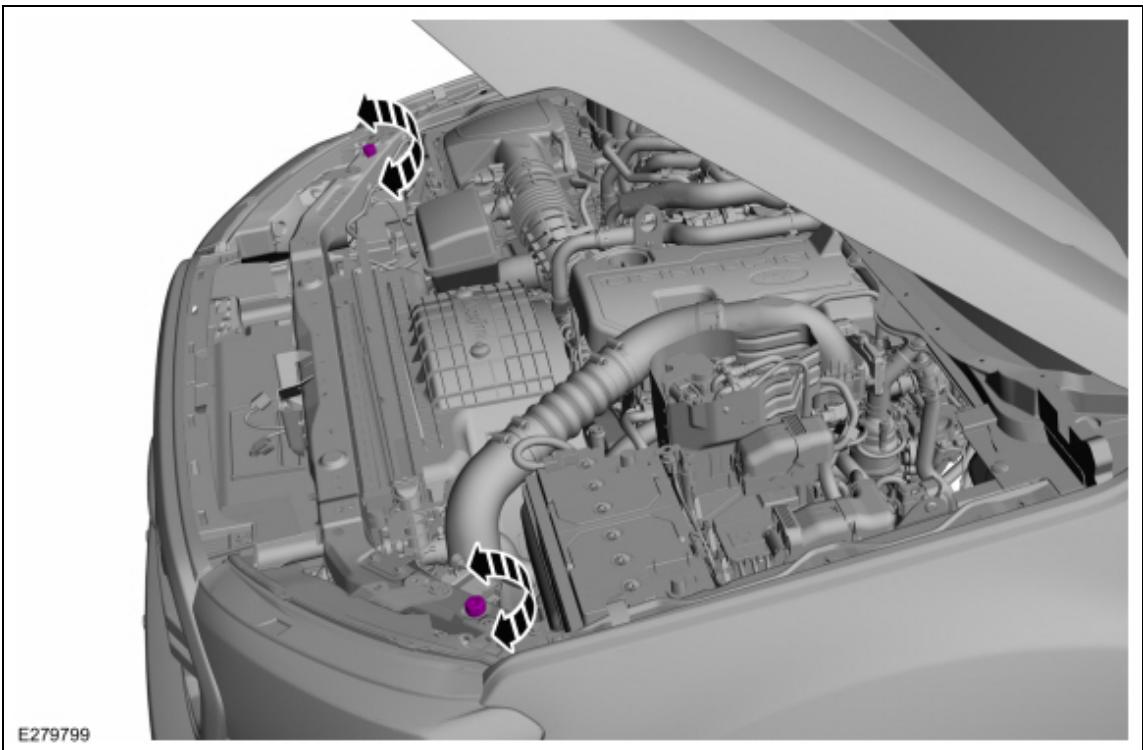


9. Carefully close the hood.



10. Adjust the hood to specification.


Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).



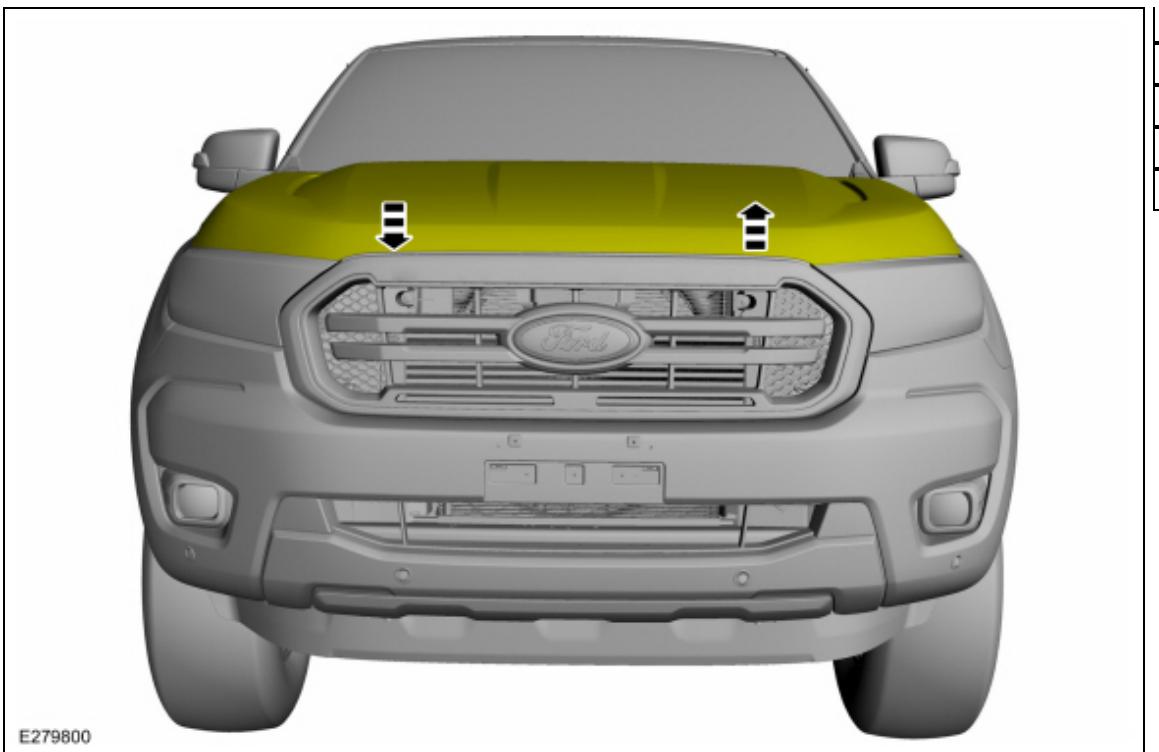

All alignments

11. Install the hood latch.
Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
12. Inspect the body-to-hood dimensions.
Refer to: [Body and Frame](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, Description and Operation).

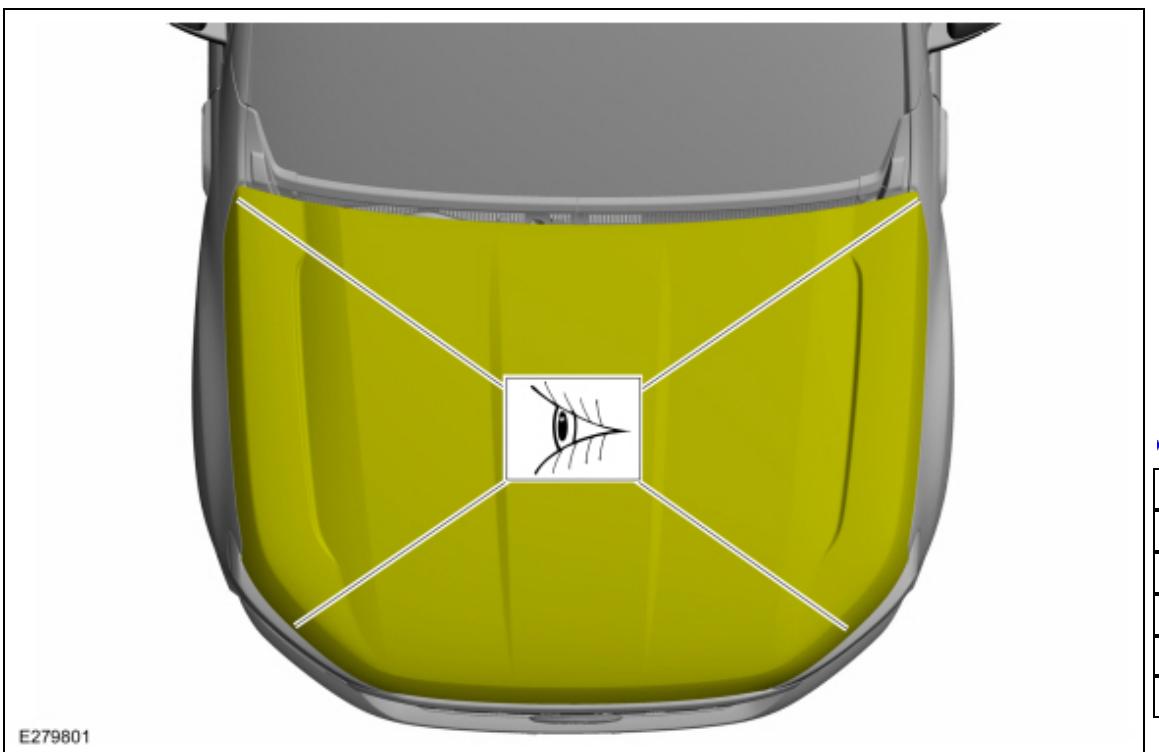

Copyright © 2019 Ford Motor Company
