

### Front Door - SuperCab

Base Part Number: 20124

#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** LH side shown, RH side similar.

1. Open the door.




2. Remove the check arm bolt.  
*Torque: 18 lb.ft (25 Nm)*






3. Remove the cowl side trim panel.  
Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
4.
  - Disconnect the electrical connectors.
  - Route the wiring harness through the body.

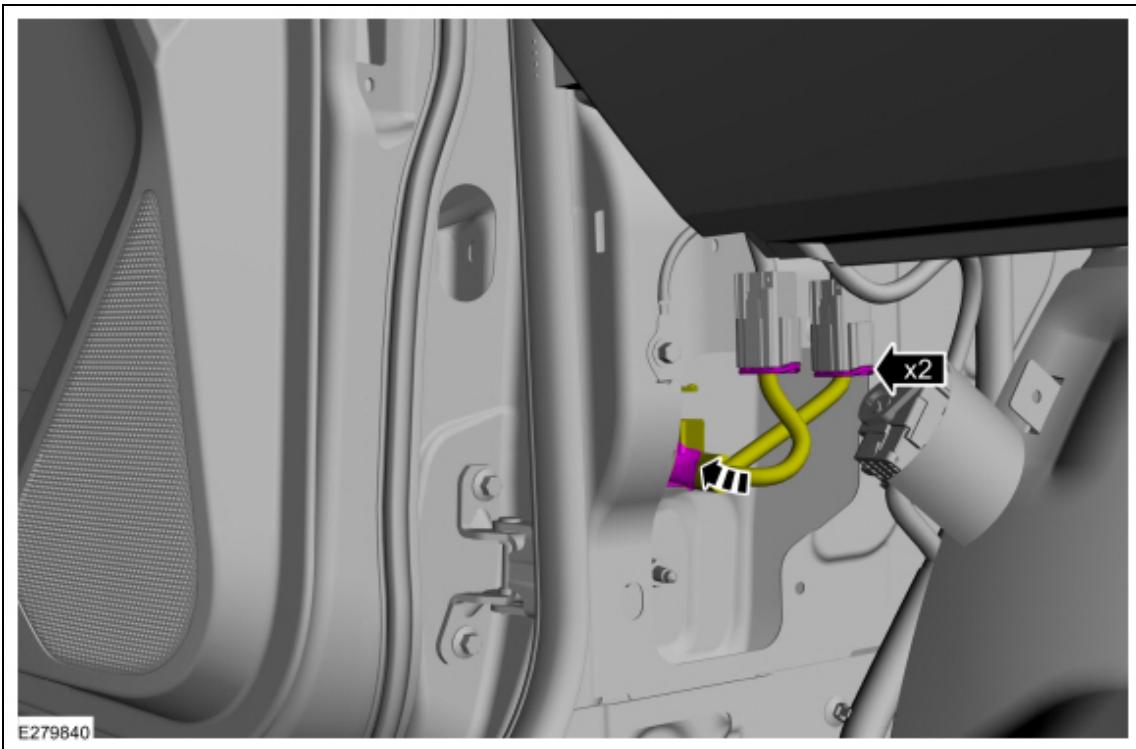


5. **NOTE:** This step requires the aid of another technician.


- Remove the door hinge bolts.  
*Torque*: 18 lb.ft (25 Nm)
- Remove the front door.

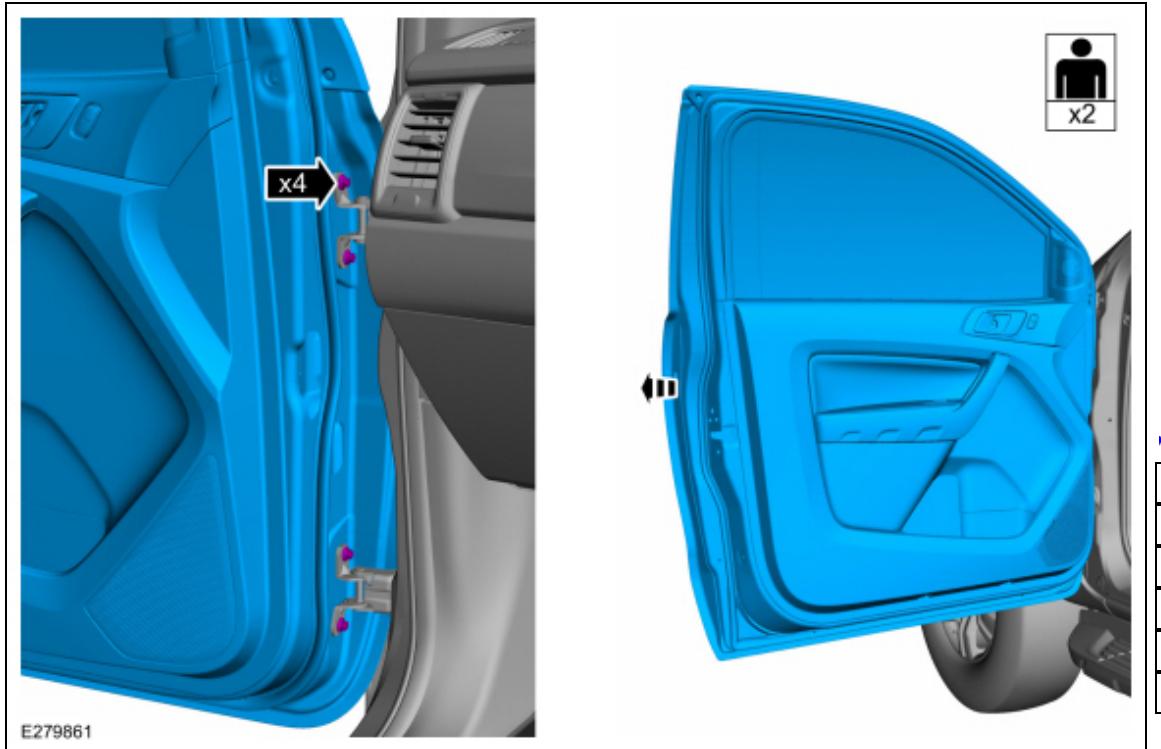

## Installation

 1. To install, reverse the removal procedure.
2. Check the body-to-front door dimensions. Align the door as necessary.  
Refer to: [Front Door Alignment - SuperCab](#) (501-03 Body Closures, General Procedures).



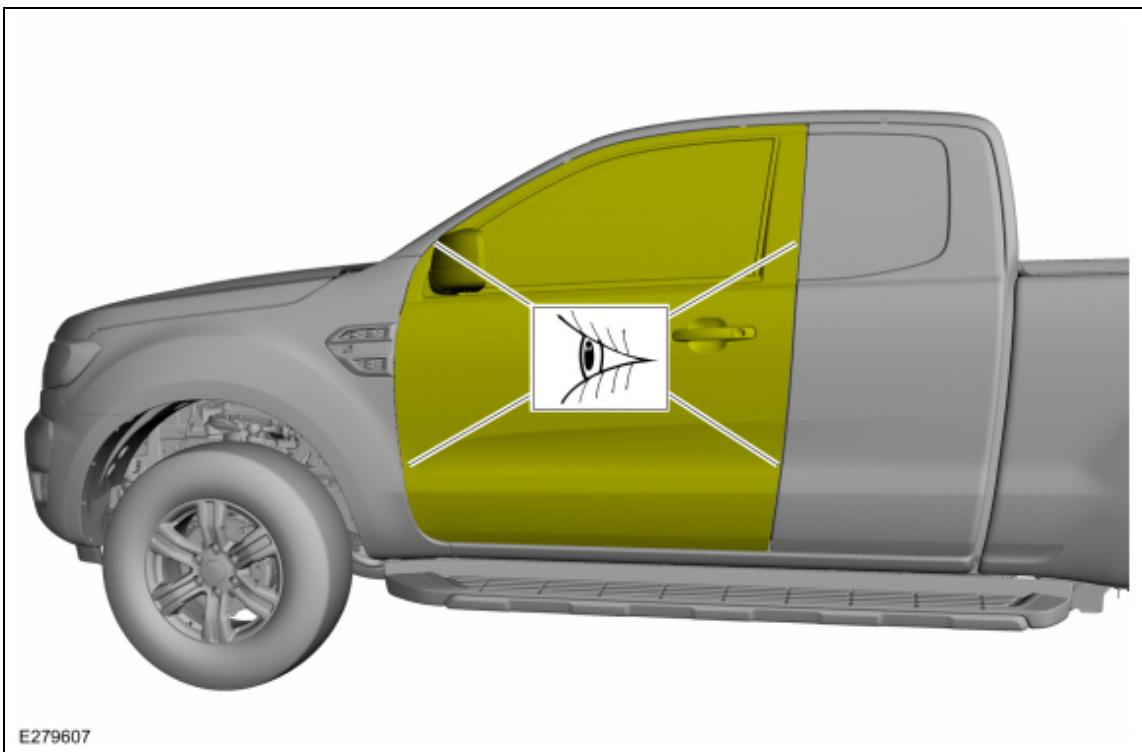

Copyright © 2019 Ford Motor Company

---