

 
Front Door Check Arm

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Open the door.



2. Remove the check arm bolt.
Torque: 18 lb.ft (25 Nm)




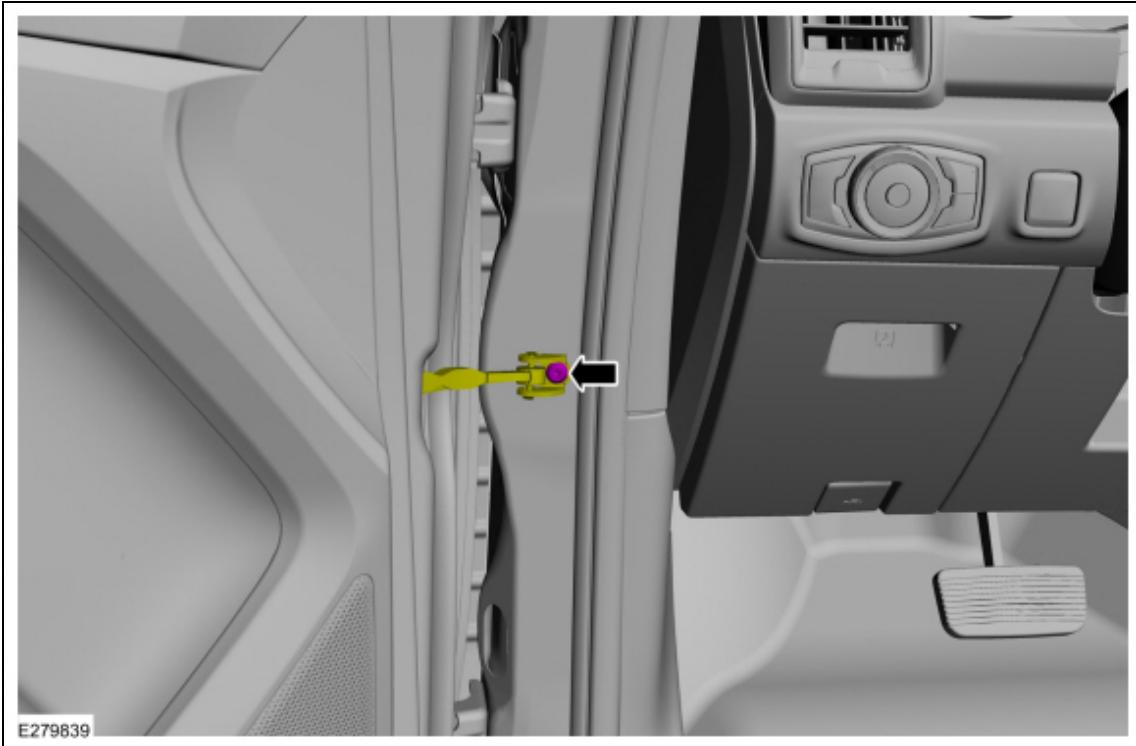

E279839

3. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05) .
4. **NOTE:** *Door removed from vehicle for clarity.*

Remove the water shield.

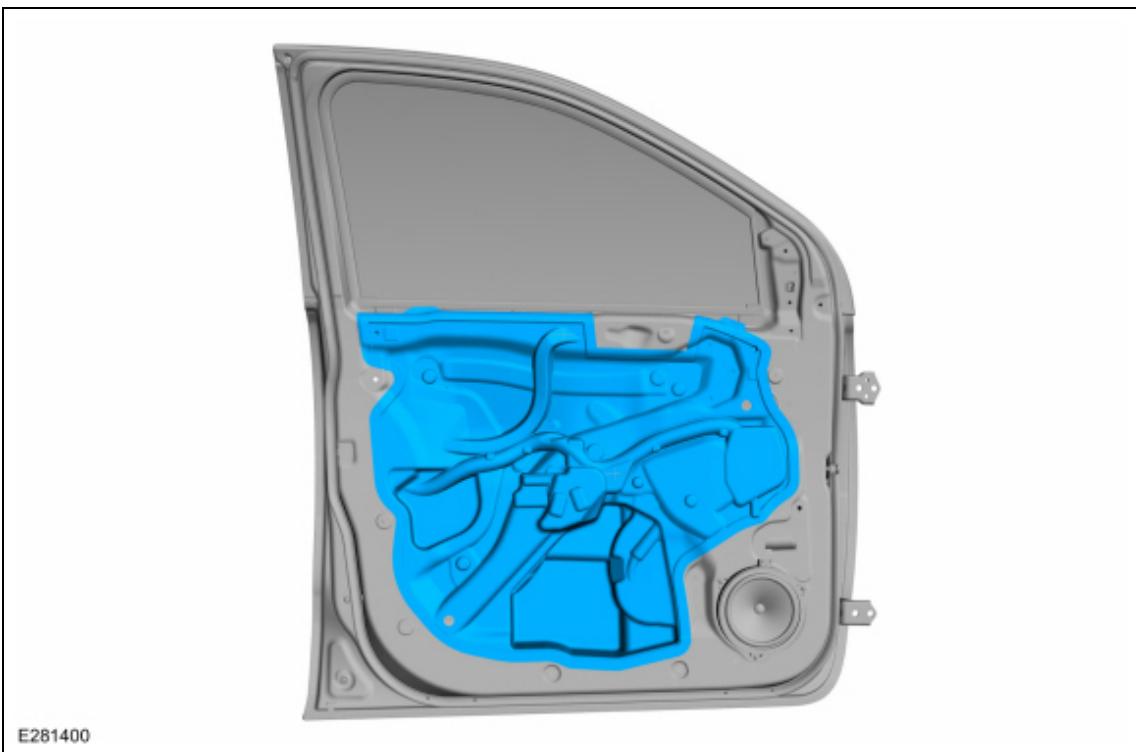


E281400

5. **NOTE:** *Door removed from vehicle for clarity.*


Remove the front door check arm nuts.

Torque: 97 lb.in (11 Nm)

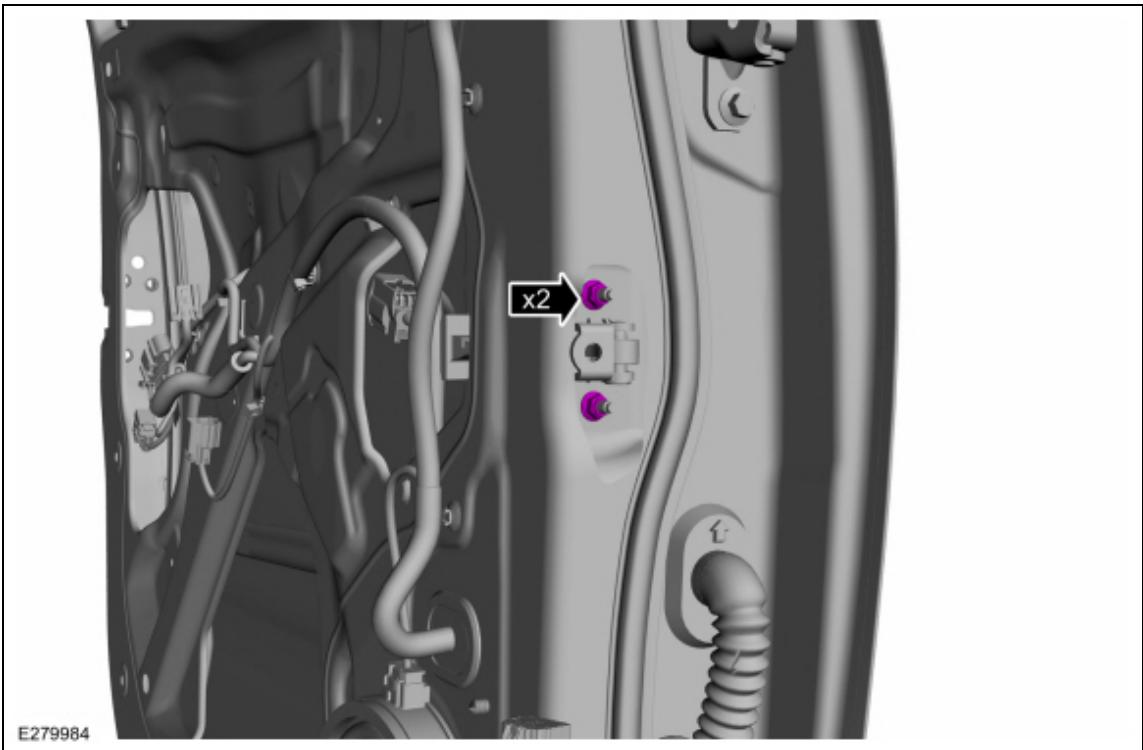

6. NOTE: Door removed from vehicle for clarity.

Remove the front door check arm assembly.

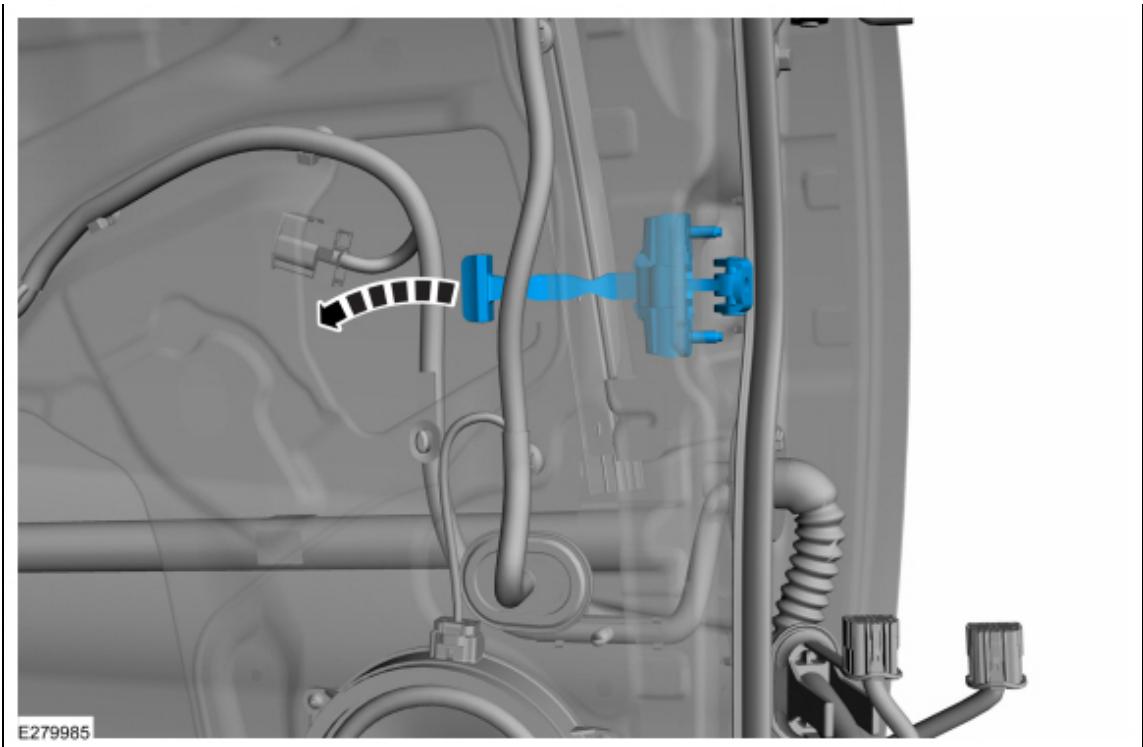

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
