

Fuel Filler Door Assembly

Special Tool(s) / General Equipment

Flat Headed Screw Driver
Knife

Removal

NOTE: Removal steps in this procedure may contain installation details.

 
NOTE: The fuel filler door assembly is damaged during the removal process and requires a new fuel filler door assembly installed.


NOTE: Always cover open ports to protect from debris. It is important that no foreign material enter the system.

1. Remove the fuel filler door.
Refer to: [Fuel Filler Door](#) (501-03 Body Closures, Removal and Installation).
2. Remove the cap.




3. Using a knife, slice through the heat stakes holding the fuel filler molding to the outer sheet metal panel.
Use the General Equipment: Knife



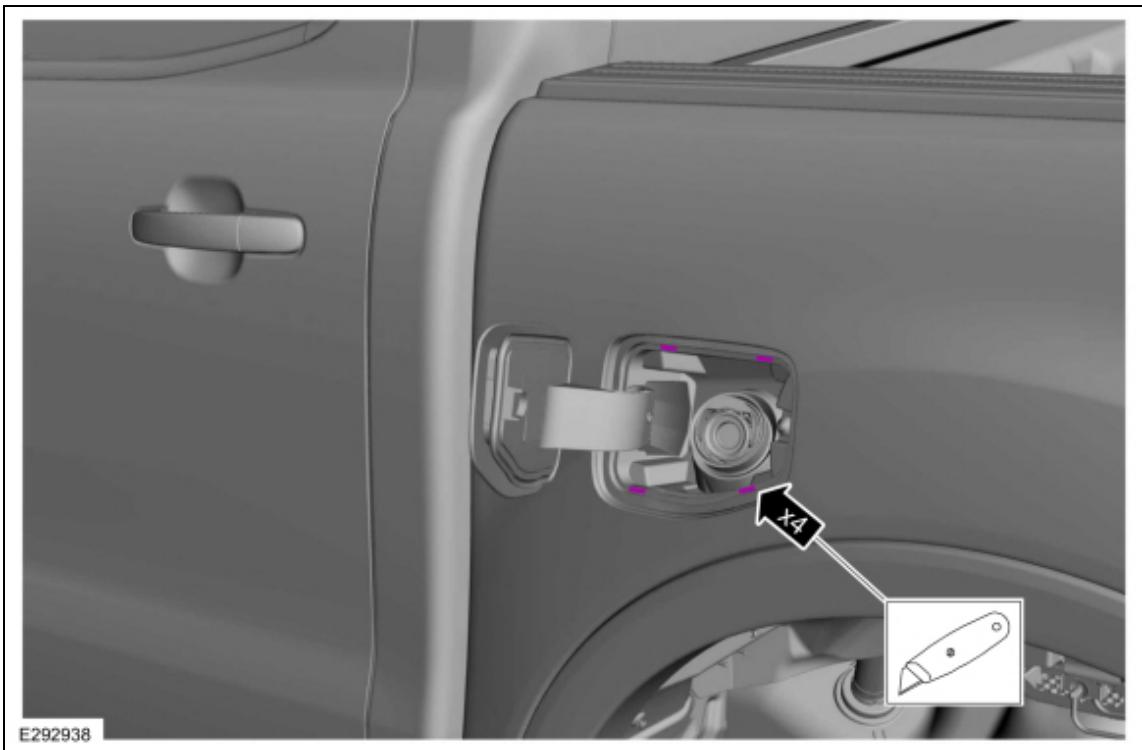


4. Insert the screwdriver and release the clips while pulling the fuel filler door housing away from the vehicle.

Use the General Equipment: Flat Headed Screw Driver

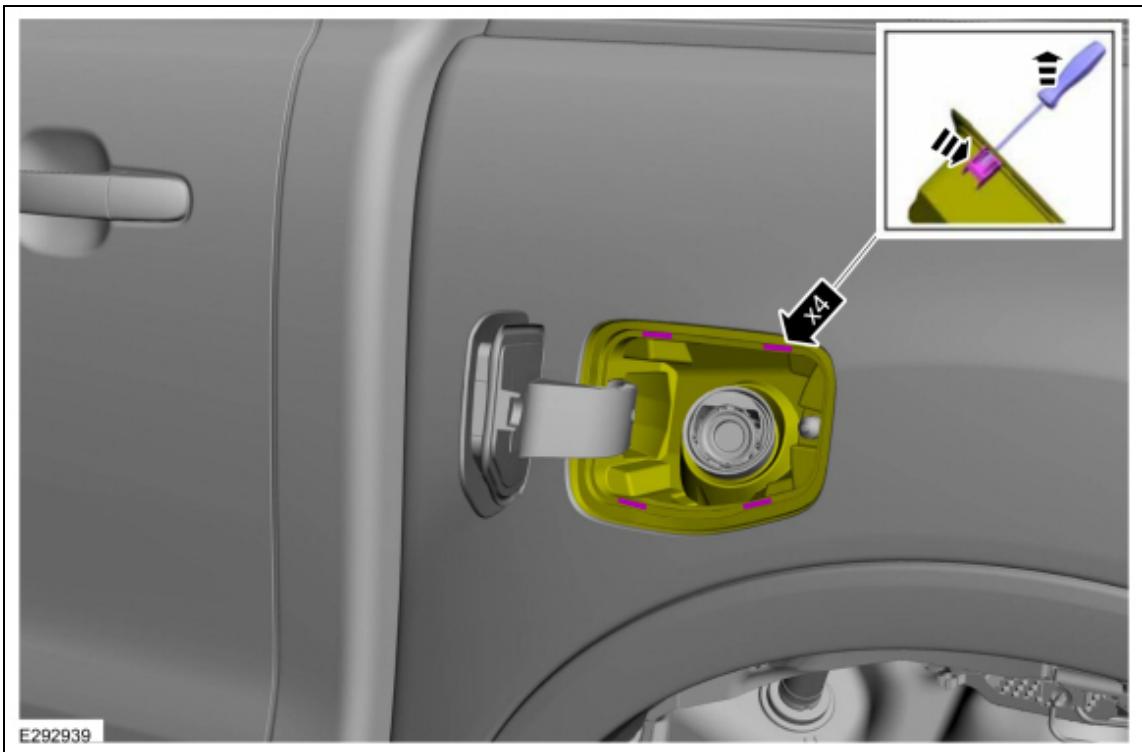

5. Pull the fuel filler door assembly away from the vehicle and remove.

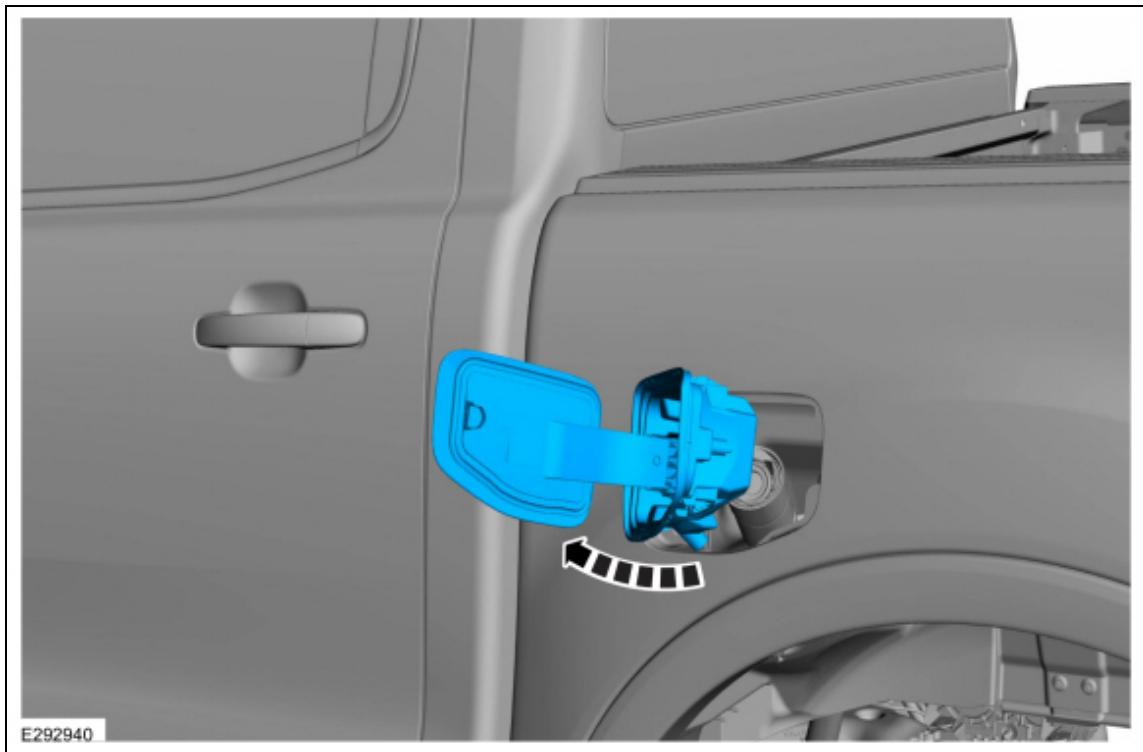

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

