

Rear Door - Crew Cab

Removal

 
NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Open the rear door.




2. Remove the check arm bolt.
Torque: 18 lb.ft (25 Nm)




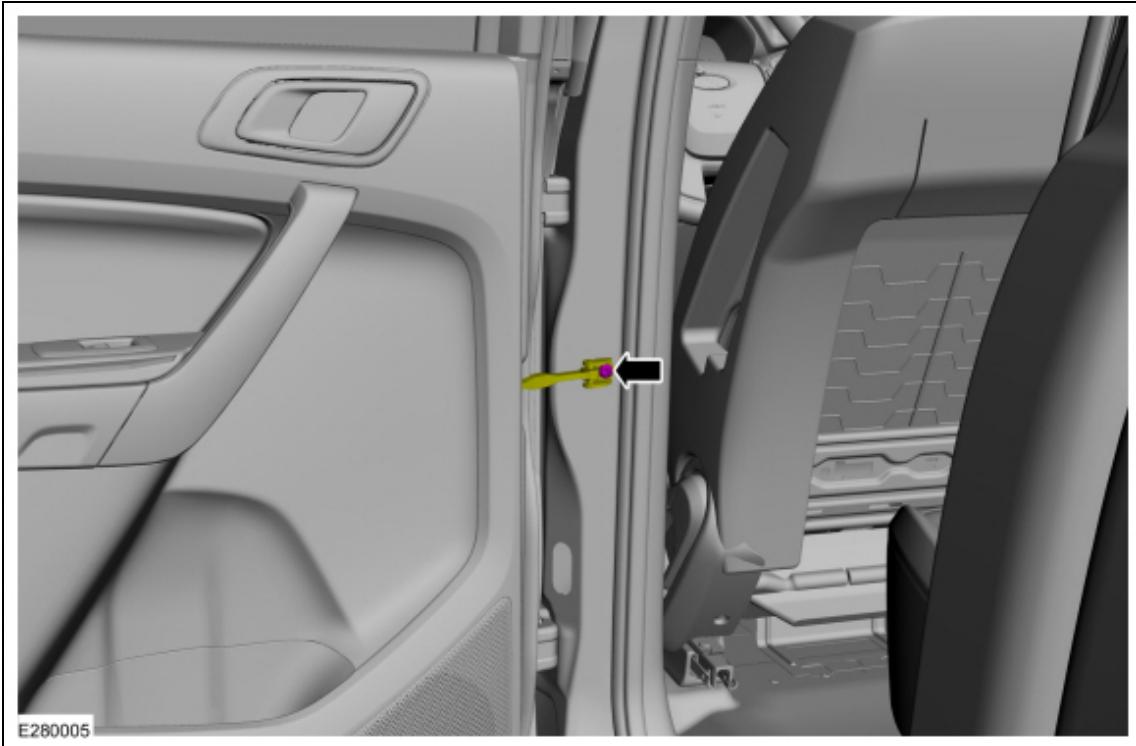


3. Disconnect the electrical connector.

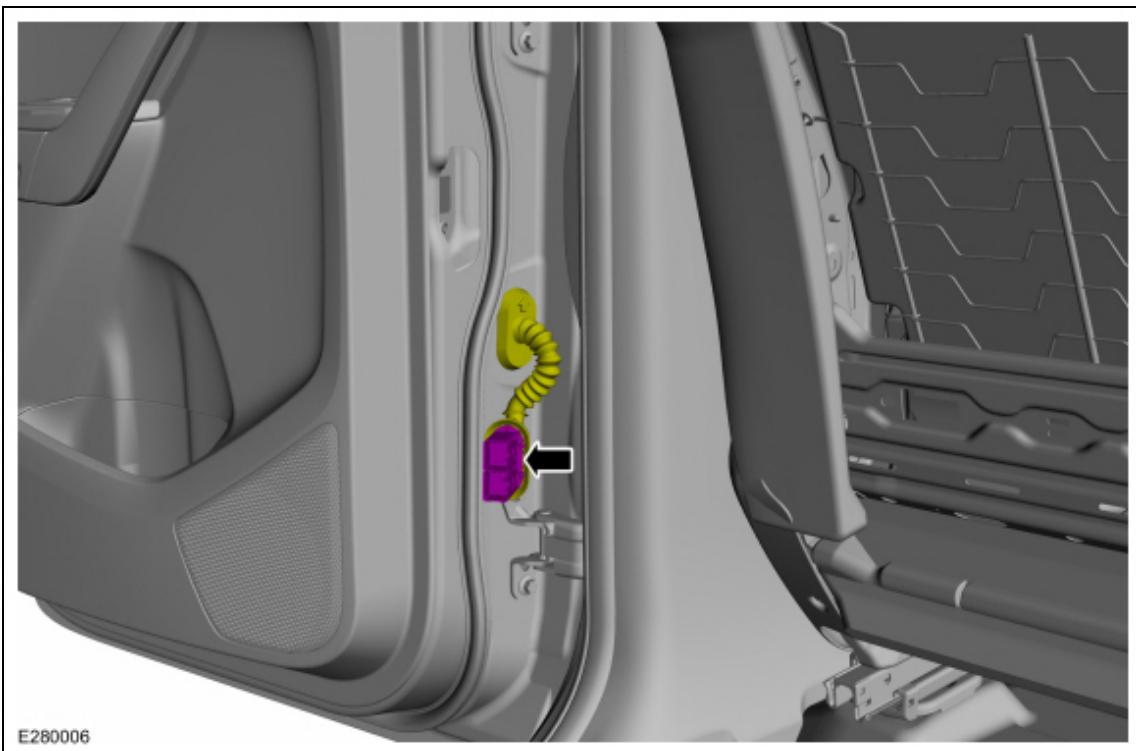

4. **NOTE:** This step requires the aid of another technician.

 - Remove the door hinge bolts.
Torque: 18 lb.ft (25 Nm)
- Remove the rear door.

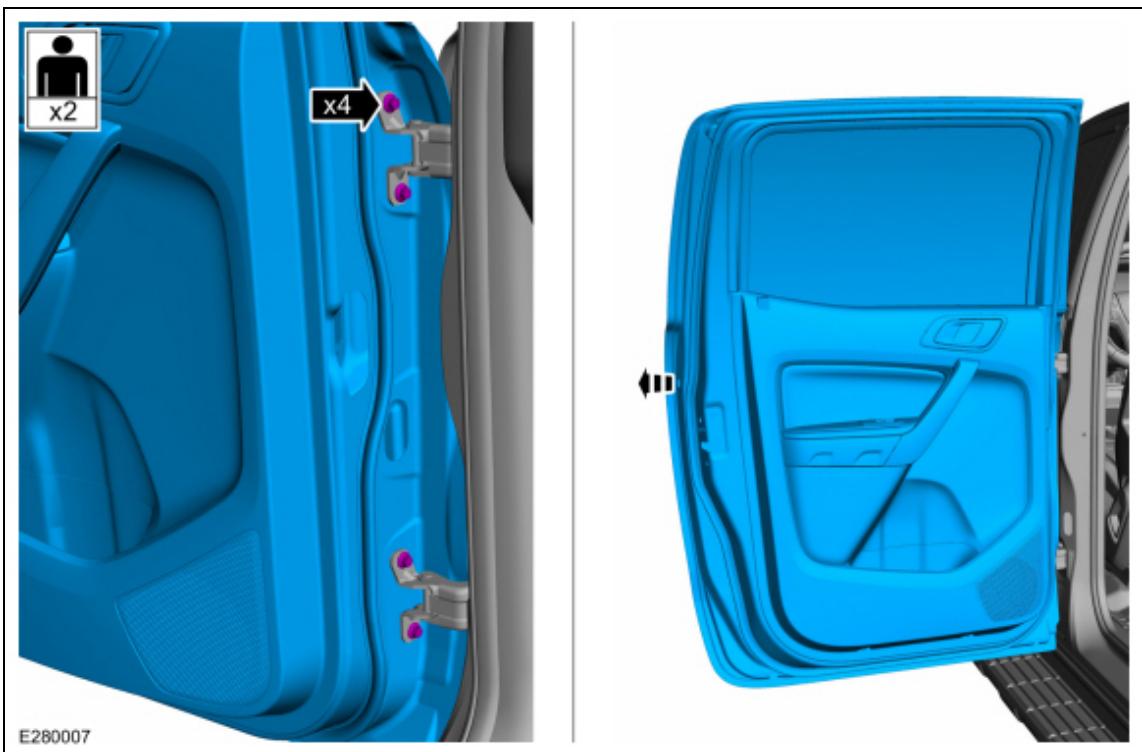

Installation

1. To install, reverse the removal procedure.
2. Check the body-to-rear door dimensions. Align the door as necessary.
Refer to: [Rear Door Alignment - Crew Cab](#) (501-03 Body Closures, General Procedures).

