

Instrument Panel

Base Part Number: S04305


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the floor console.
Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Depower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).
3. Remove the cowl side trim panel.
Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
4. Remove the A-Pillar trim panels.
Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
5. Disconnect the electrical connectors.

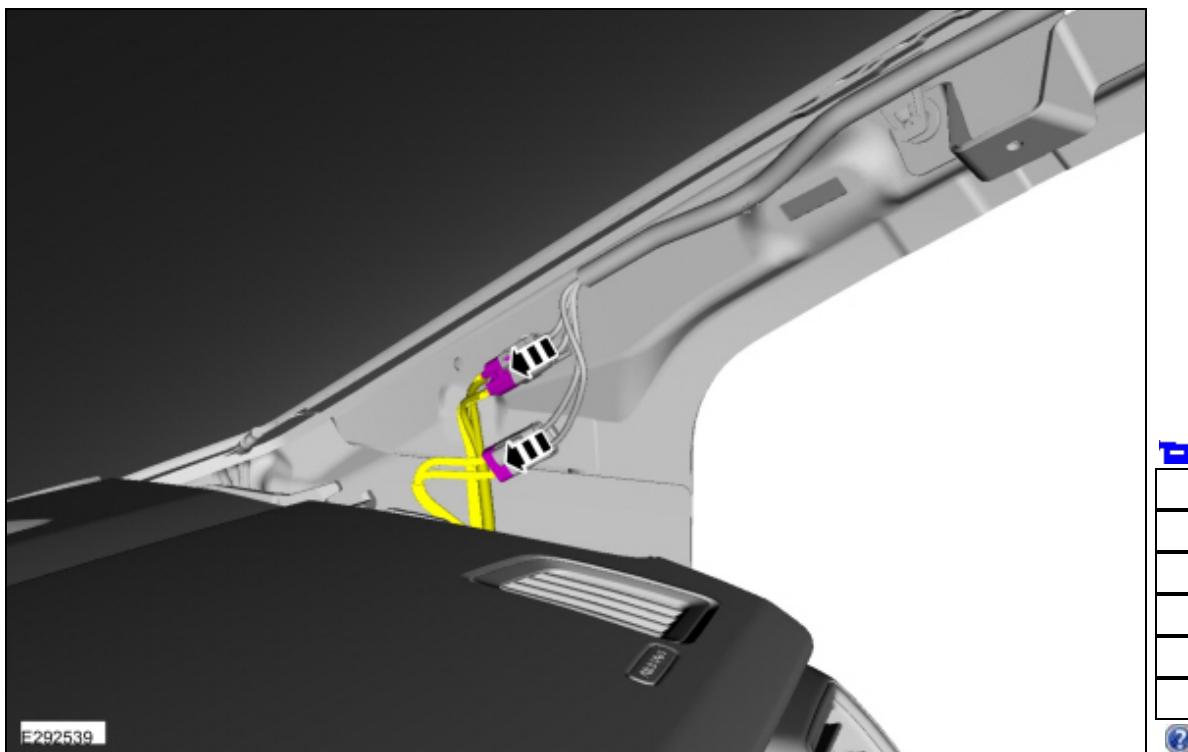


6. Disconnect the electrical connectors.

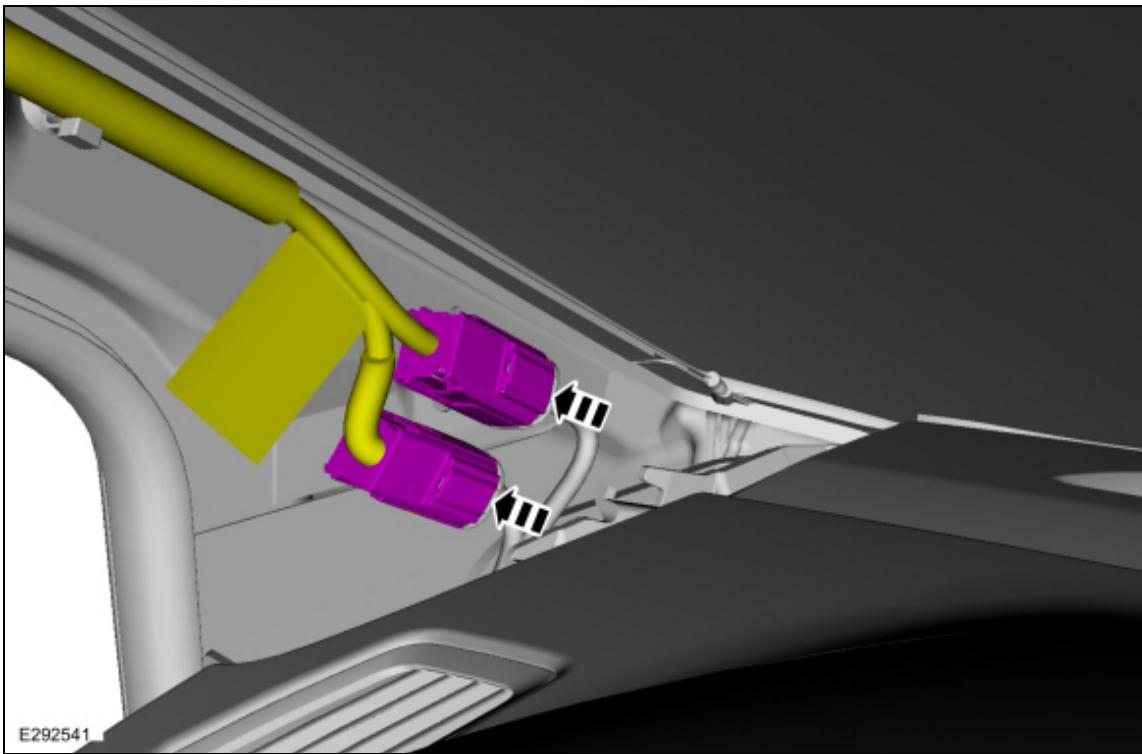

7. Release the clips, push pins and remove steering column opening trim panel.
Use the General Equipment: Interior Trim Remover

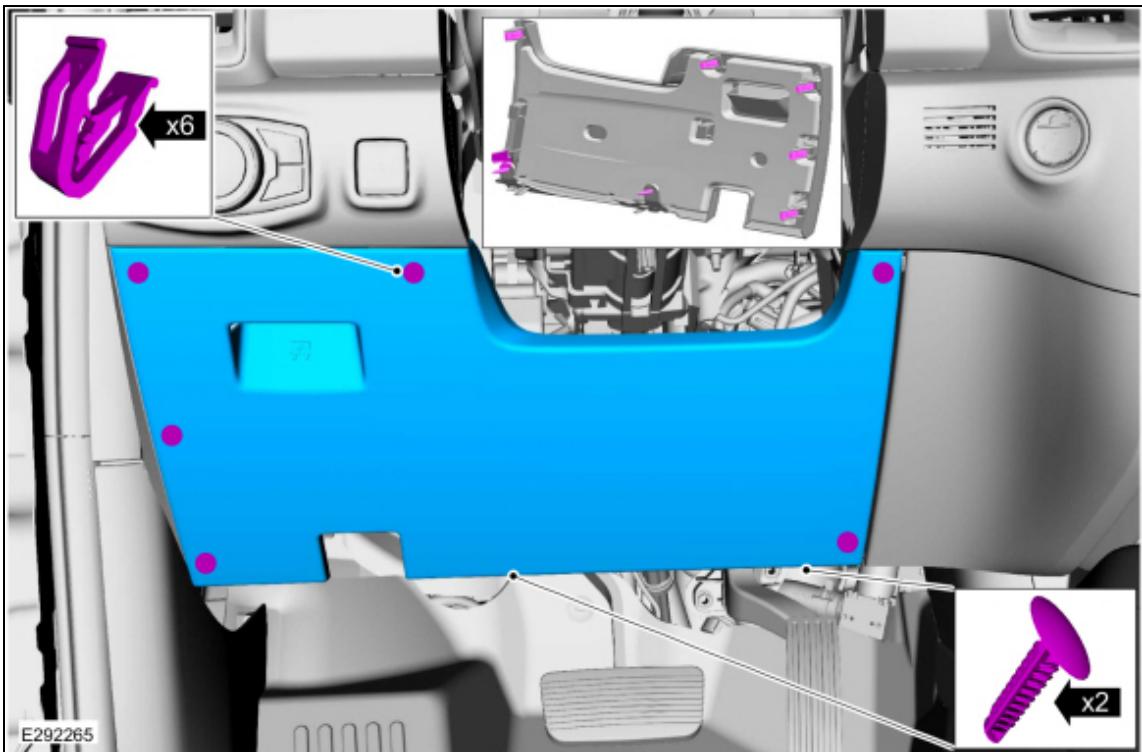


8. Remove the steering column opening reinforcement panel.
Torque: 97 lb.in (11 Nm)

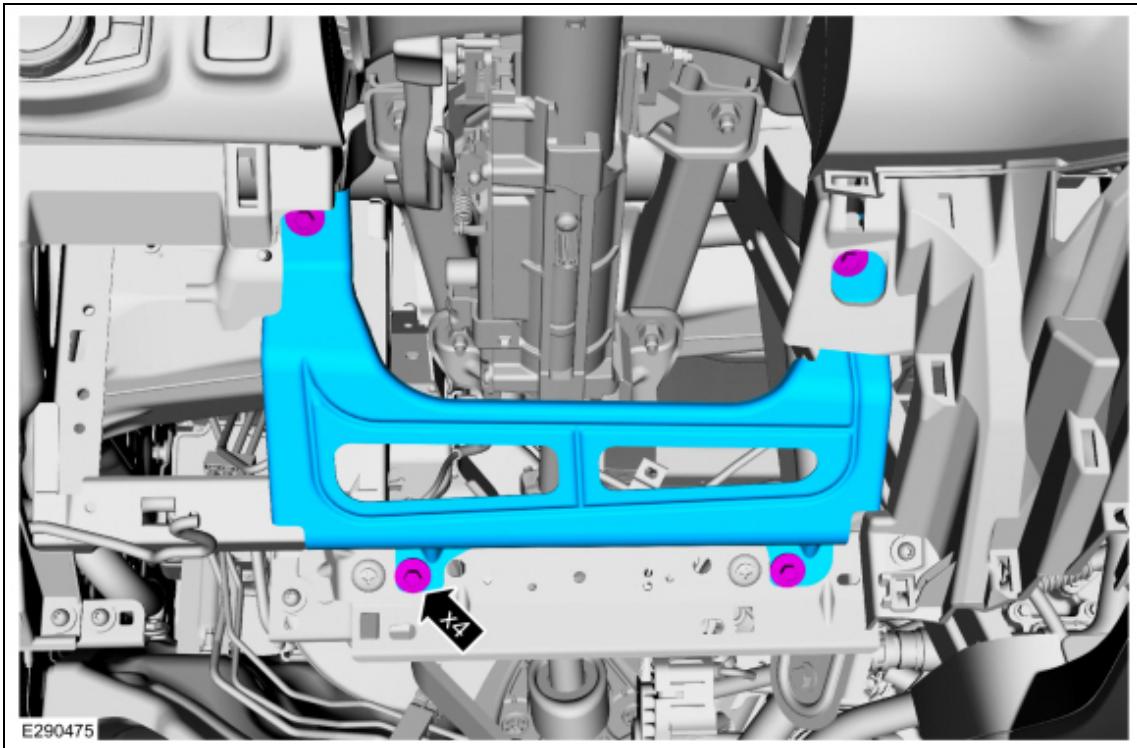


9. **⚠️ WARNING:** Do not reuse steering column shaft bolts. This may result in fastener failure and steering column shaft detachment or loss of steering control. Failure to follow this instruction may result in serious injury to vehicle occupant(s).


Disconnect the steering column shaft and secure the steering wheel to prevent movement.

1. Remove and discard the steering column shaft coupler bolt.
Torque: 150 lb.in (17 Nm)
2. Separate the steering column from the upper steering column shaft coupler.

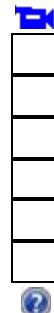

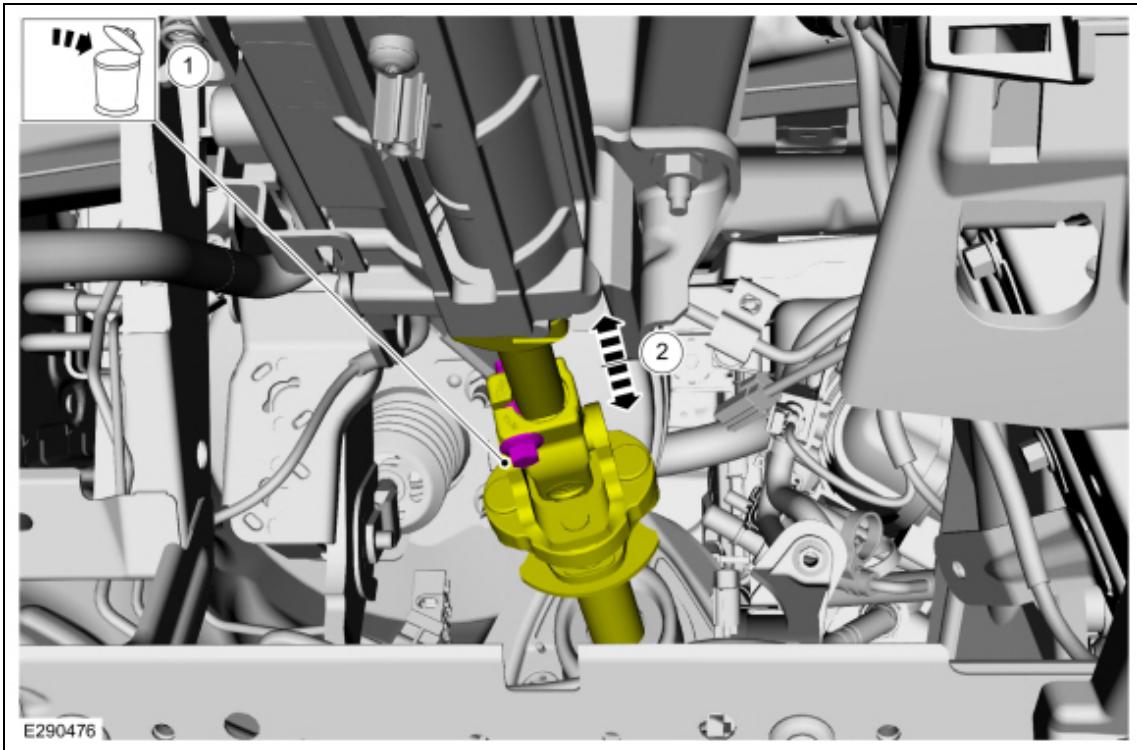


10. Disconnect the electrical connectors.

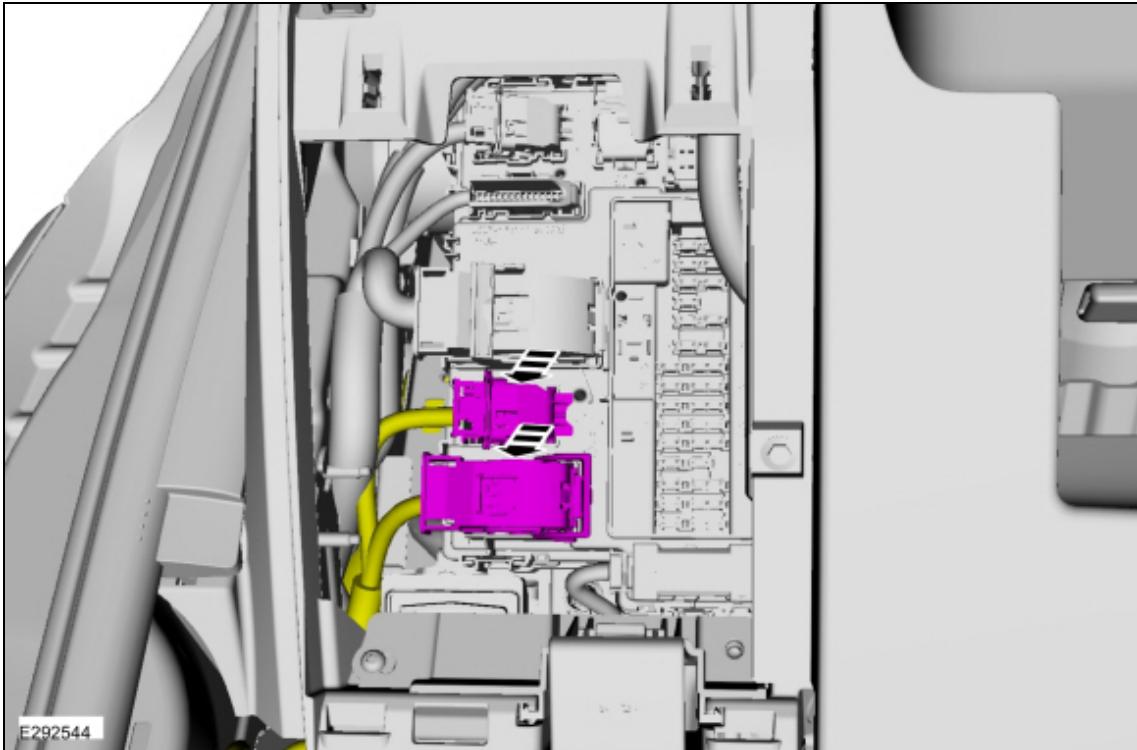


11.

Remove the hood latch release handle.


1. Release the hood latch release handle retaining tabs from the instrument panel.
2. Release the hood latch release cable from the hood latch release handle mounting bracket.
3. Remove the hood latch release cable eyelet from the hood latch release handle.

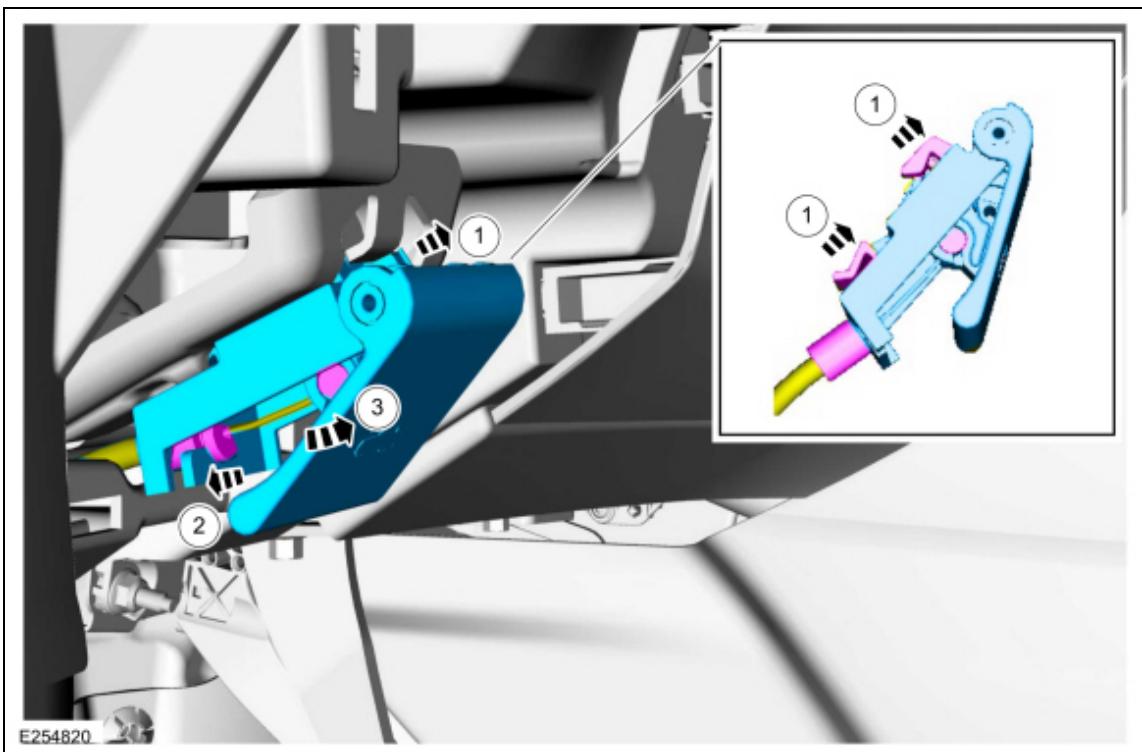


12. Disconnect the electrical connectors and remove the bolt.

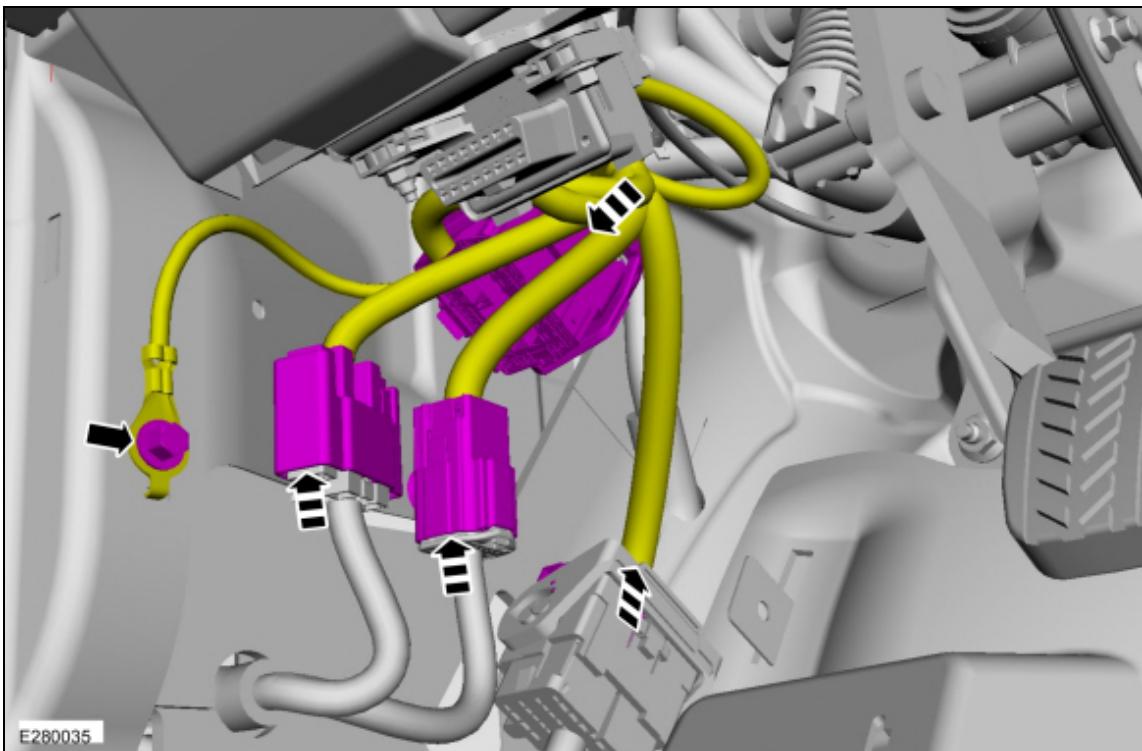


13. Disconnect the electrical connectors and release the harness retainer.

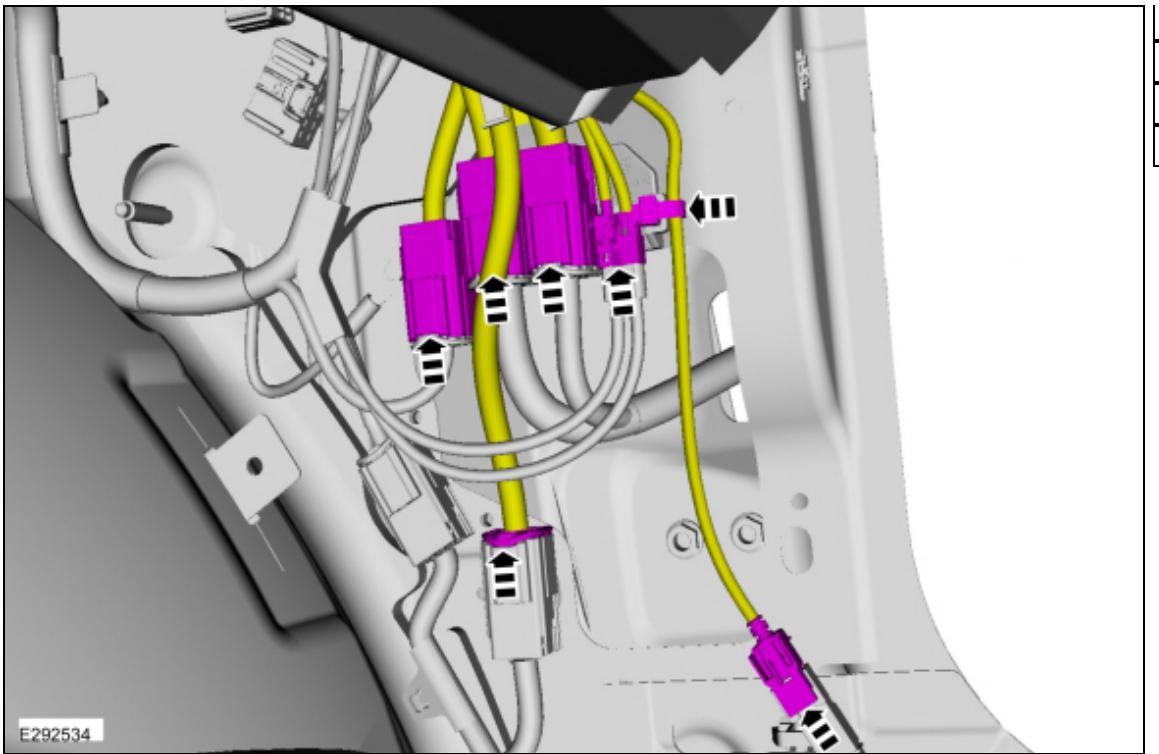

14. Disconnect the electrical connectors.

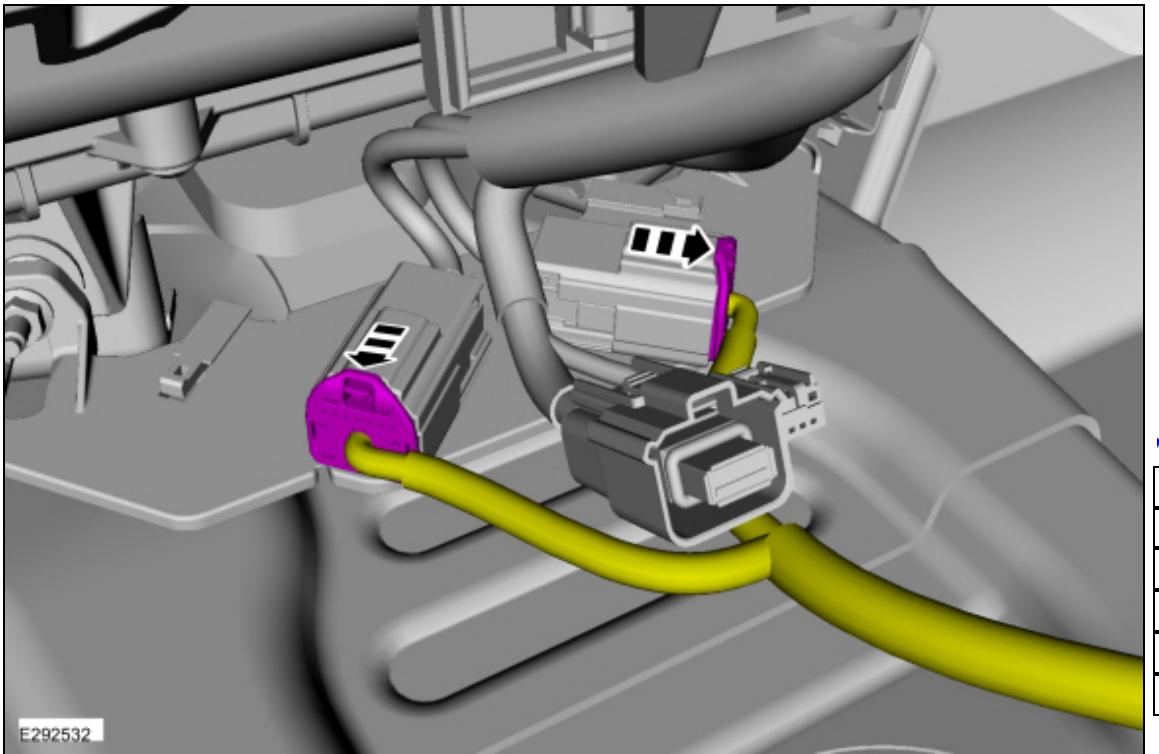


15. Remove the nuts and position aside the electrical connector mounting plate.
Torque: 30 lb.in (3.4 Nm)

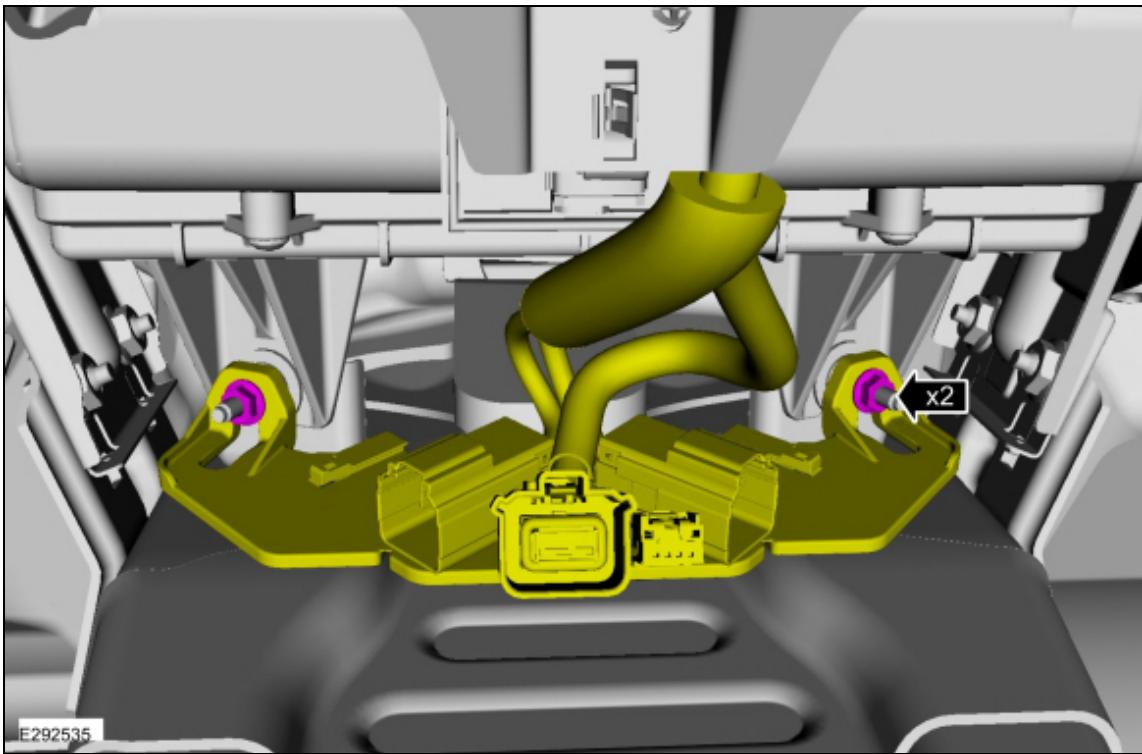

16. Remove the bolts and position the selector lever on its side.


Torque: 97 lb.in (11 Nm)

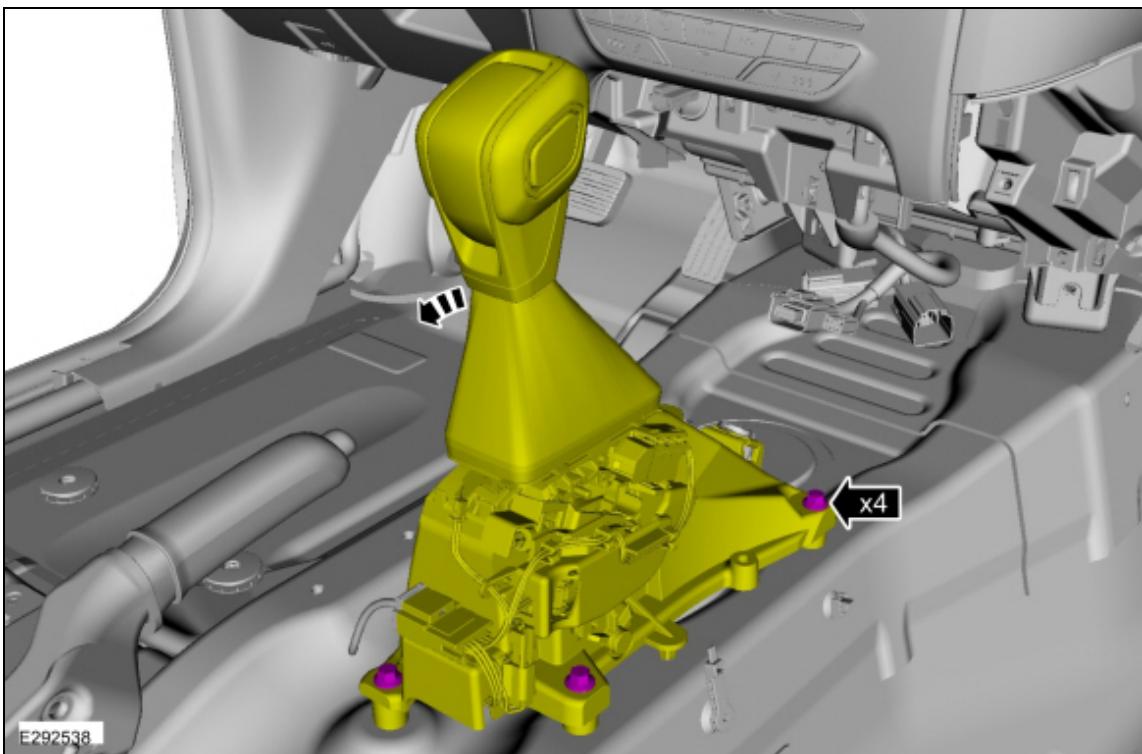

17. Remove the bolt.


Torque: 22 lb.ft (30 Nm)



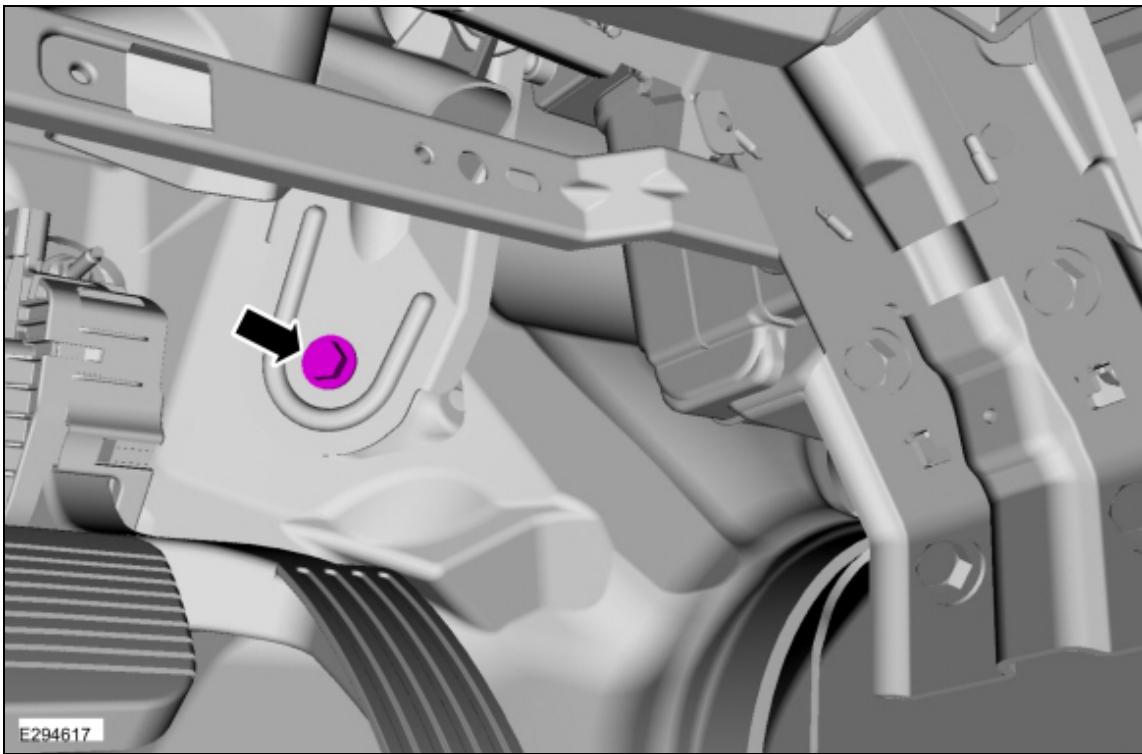


18. Remove the bolts and the LH bracket.

Torque: 22 lb.ft (30 Nm)

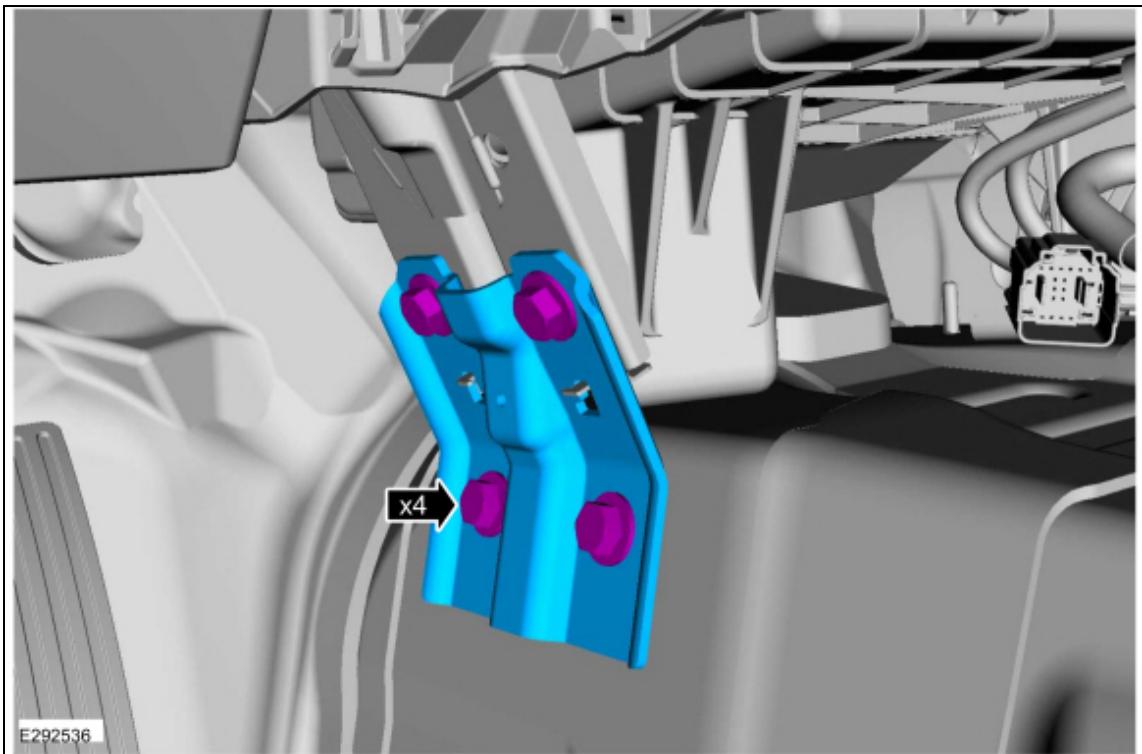


19. Remove the bolts and the RH bracket.

Torque: 22 lb.ft (30 Nm)

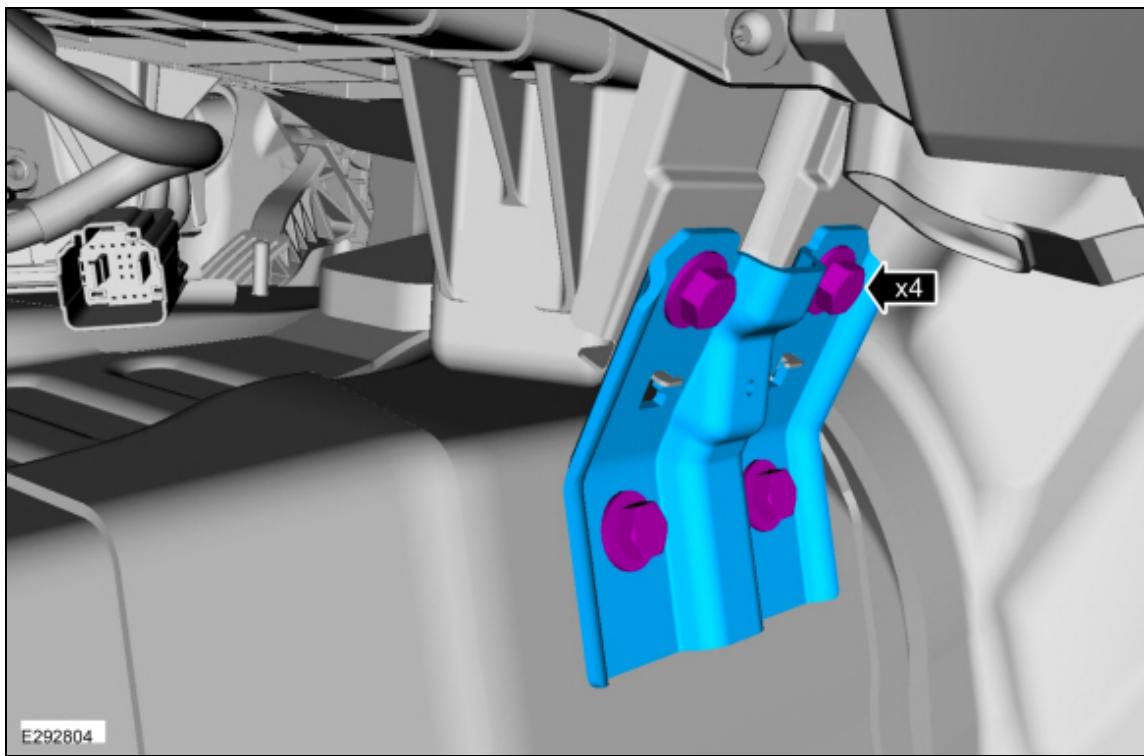


20. Release the retainers and remove the center trim panel.
Use the General Equipment: Interior Trim Remover

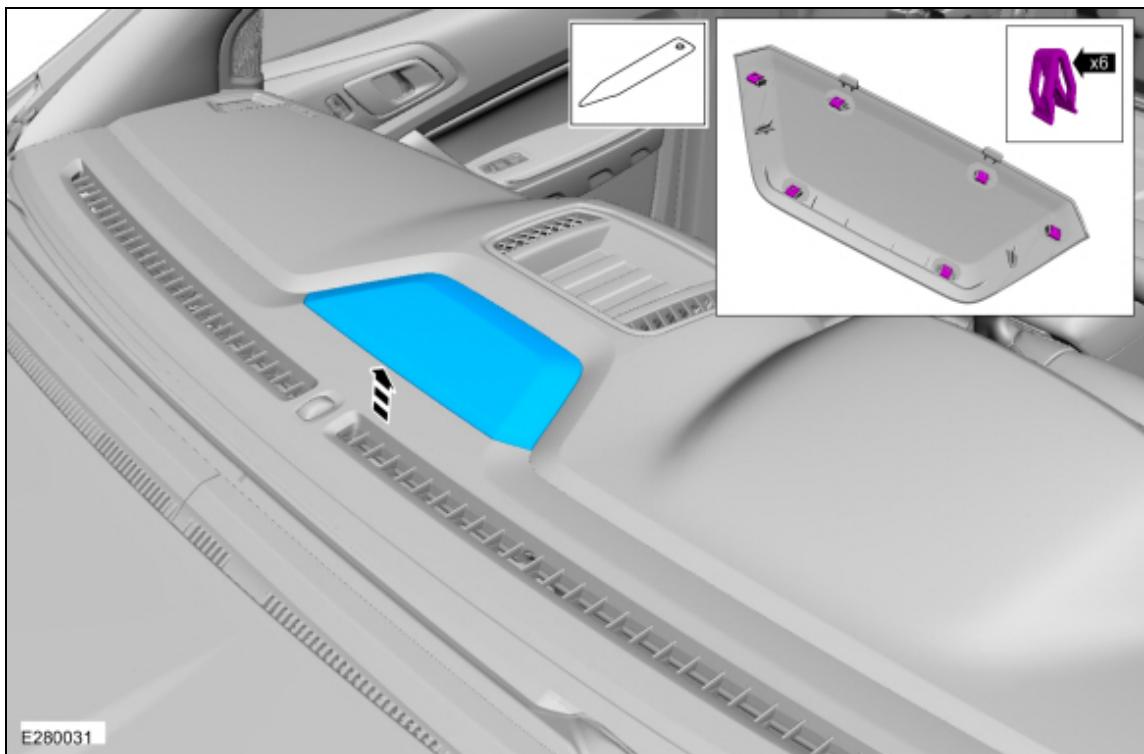

21.


1. Release the retainers and remove the defroster grille panel.
Use the General Equipment: Interior Trim Remover
2. Disconnect the electrical connector.

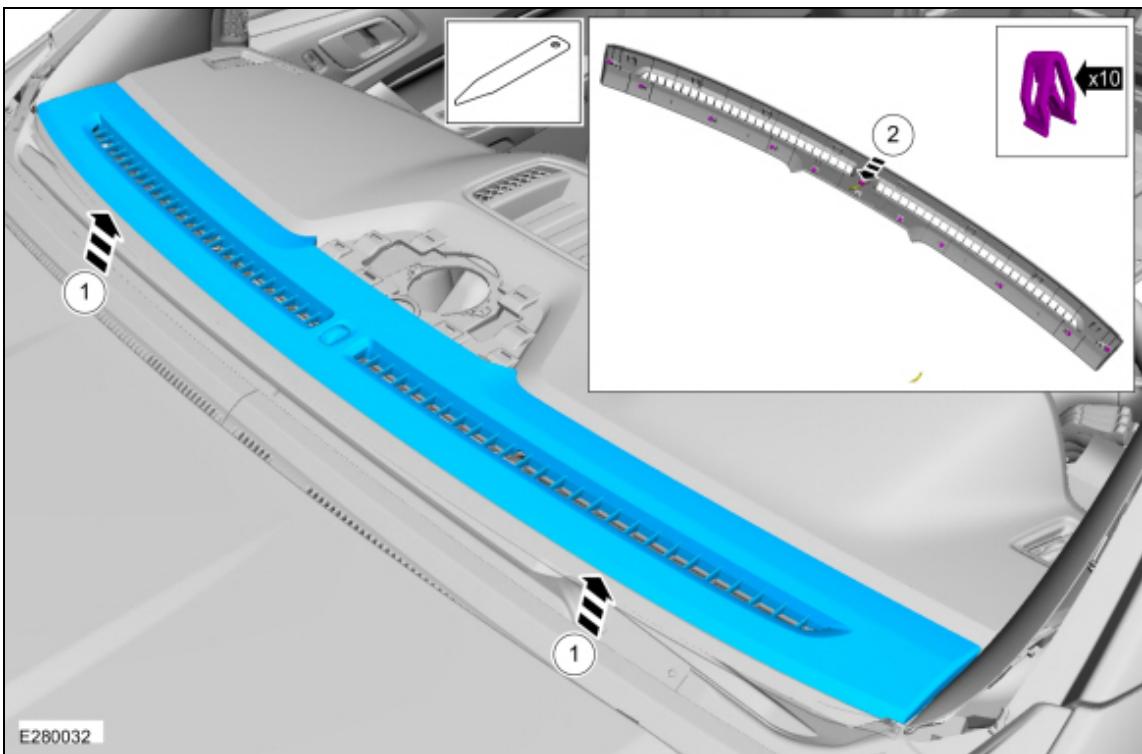

22. **NOTE:** Do not fully tighten until the instrument panel is fully installed in the vehicle.


Remove the bolt.

Torque: 97 lb.in (11 Nm)

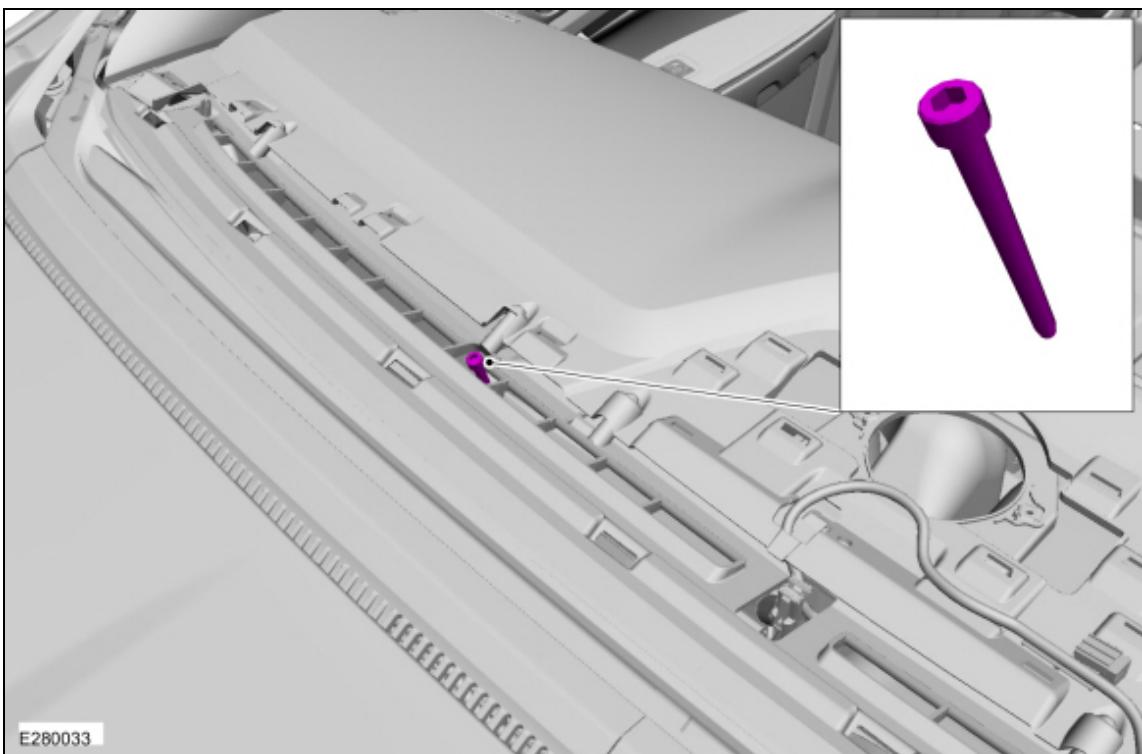


23. Remove the RH trim panel.

Use the General Equipment: Interior Trim Remover

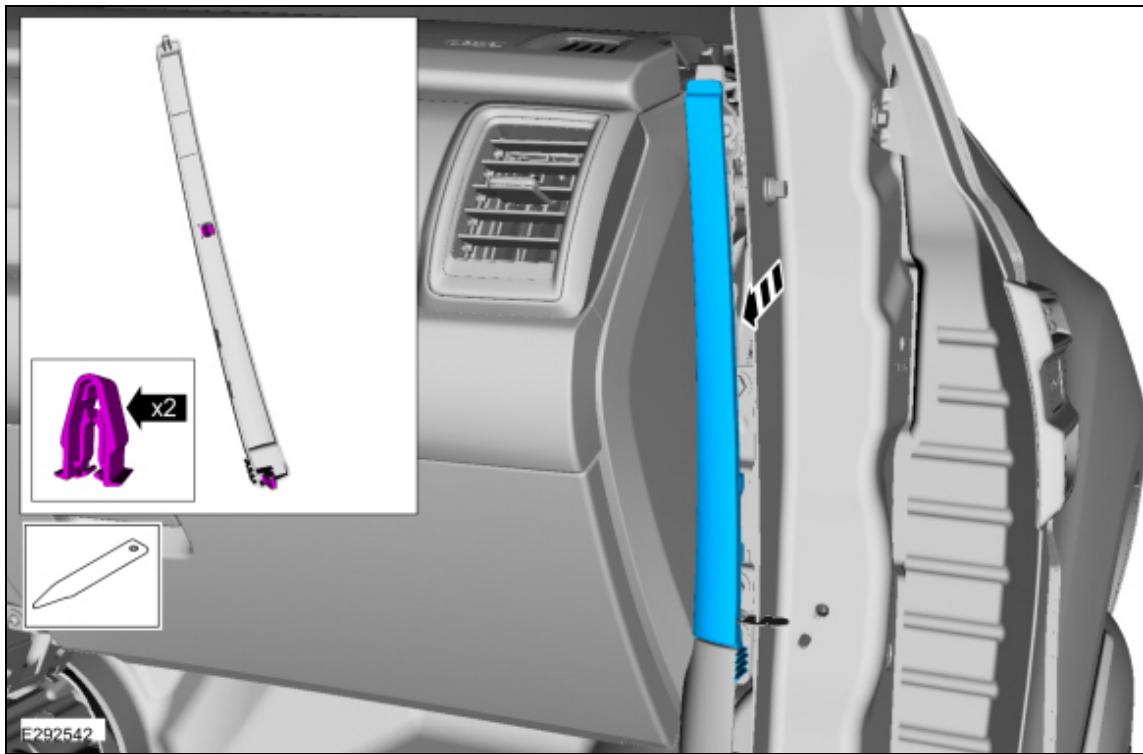


24.

1. Remove the bolt,
Torque: 22 lb.ft (30 Nm)
2. Remove the bolts.
Torque: 22 lb.ft (30 Nm)

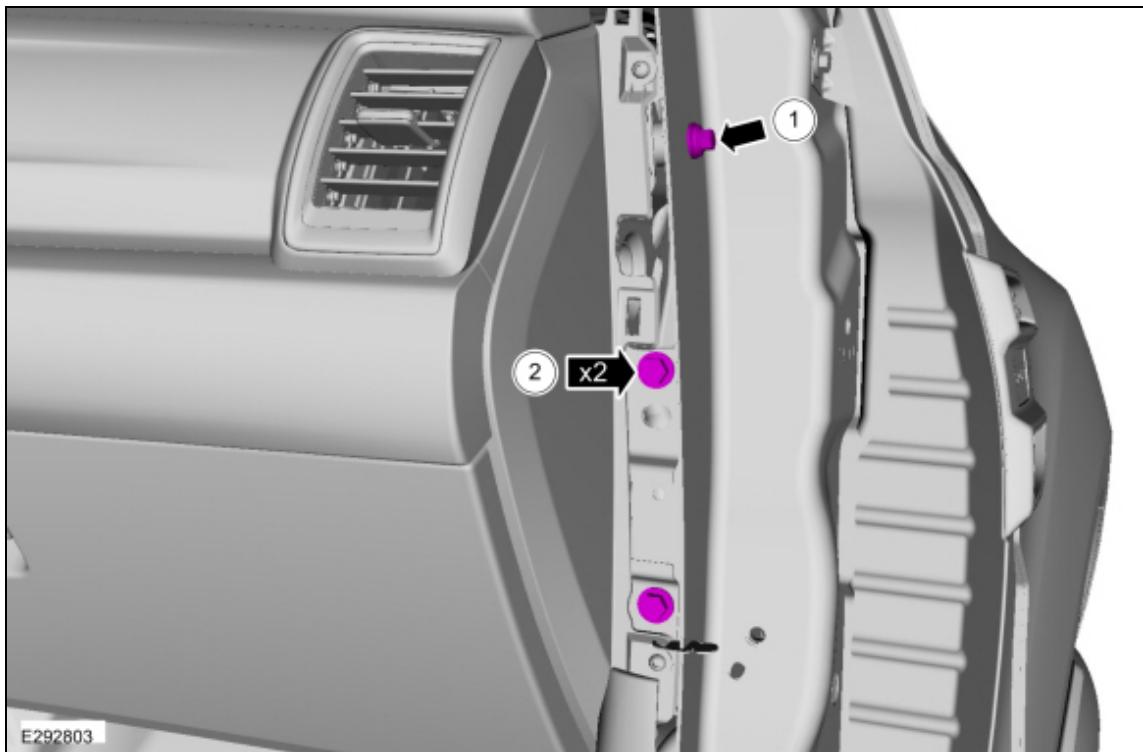


25. Remove the LH trim panel.

Use the General Equipment: Interior Trim Remover

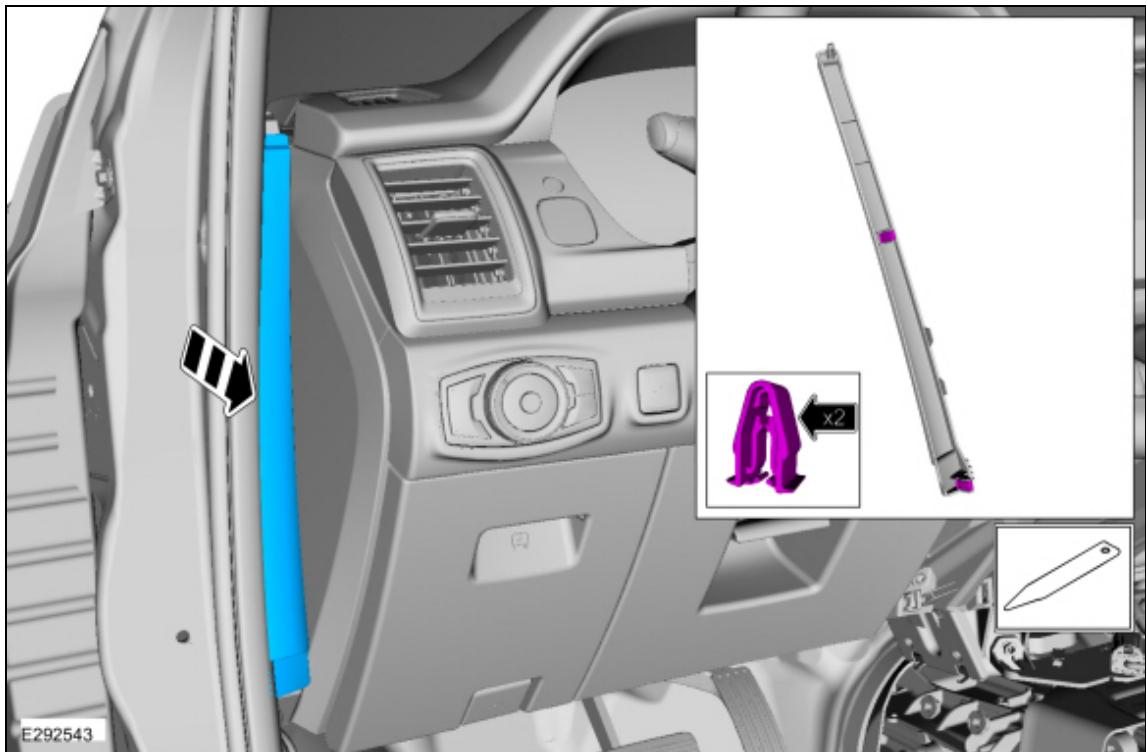

26.

1. Remove the bolt.
Torque: 22 lb.ft (30 Nm)
2. Remove the bolts.
Torque: 22 lb.ft (30 Nm)

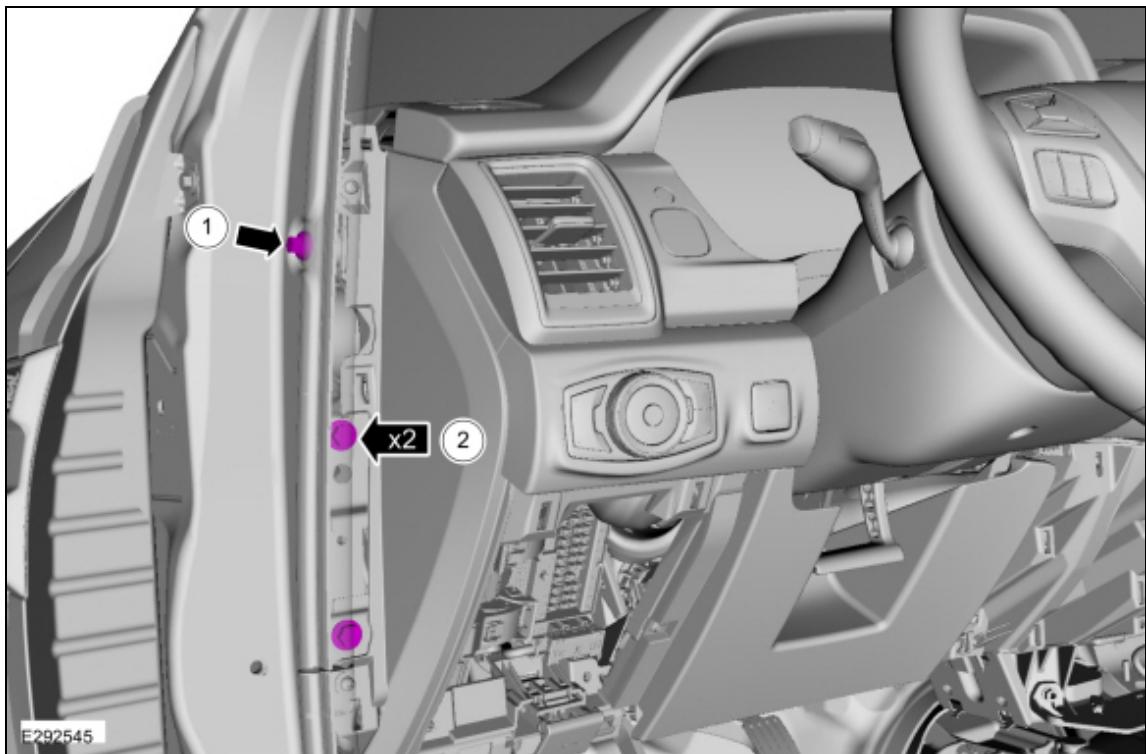


27. **NOTE:** To avoid damaging the instrument panel, an assistant is required when carrying out this step.

NOTE: Make sure not to damage the instrument panel when removing the instrument panel from the vehicle.

NOTE: Make sure that all electrical connector and wiring and not hindered before removing the instrument panel or damage to the components may occur.

Remove the instrument panel through the door opening.

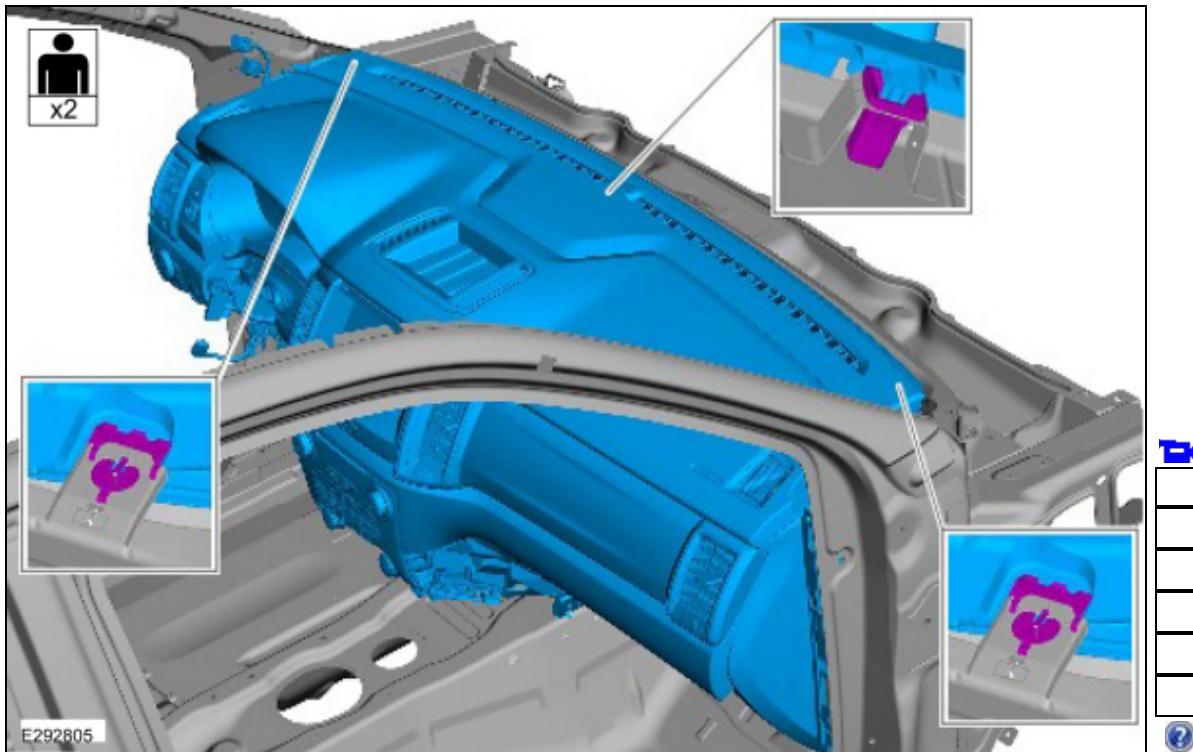


Installation

1. **NOTE:** Make sure that that adjuster is correctly aligned.

NOTE: Make sure that the three locking positions are locked correctly.

Install the instrument panel.



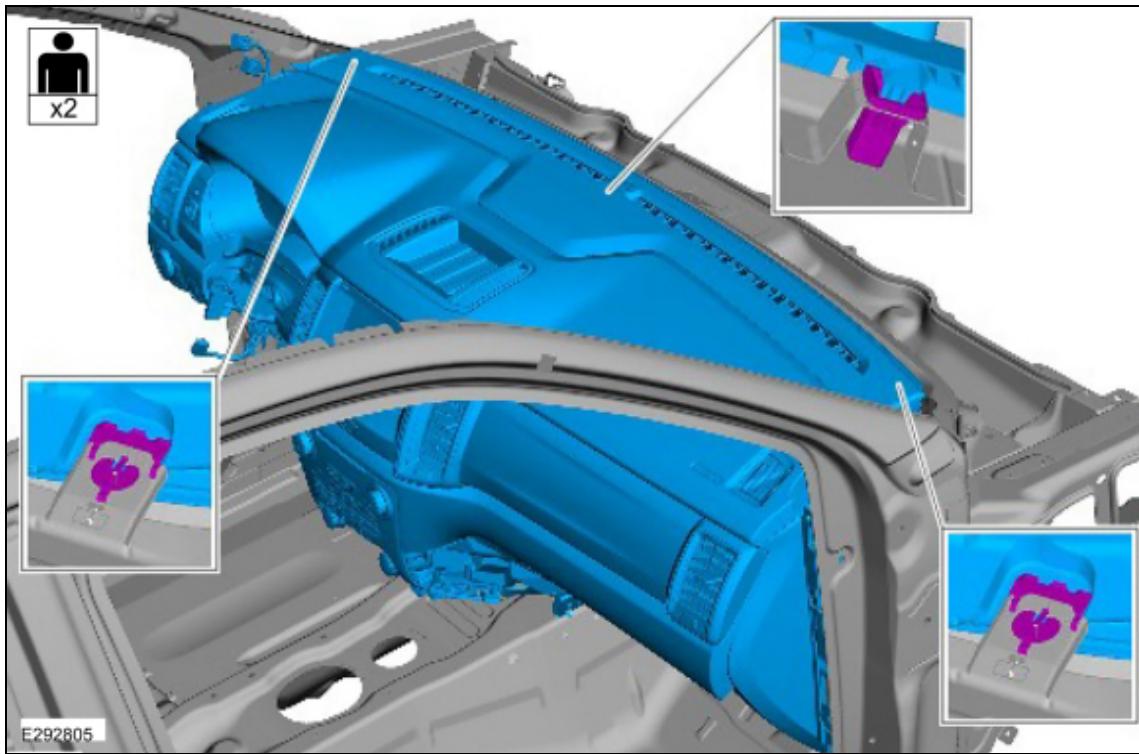

2. To install, reverse the removal procedure.
3. Repower the SRS
Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).

