

Staged Unlock Programming

Programming

1.  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. With the ignition in OFF, press the lock and unlock buttons on the RKE transmitter simultaneously for 4 seconds.
3. The turn signals flash twice to indicate the mode change.
4. Repeat Step 2 to enable/disable the staged unlocking feature.