

## Door Lock Cylinder

### Removal

**NOTE:** LHD shown, RHD similar.

**NOTE:** LH side shown, RH side similar.

**NOTE:** Removal steps in this procedure may contain installation details.


**NOTE:** Repair individual door lock cylinders by discarding the inoperative door lock cylinder and building a new door lock cylinder using the appropriate lock repair service kit. The lock repair service kit includes a detailed instruction sheet to build the new lock to match the key cut pattern for the vehicle, thus allowing for single point replacement without needing to replace or reprogram other locks or keys.

1. Remove the exterior front door handle access plug.



2. Remove the door lock cylinder.
  1. Turn the release screw enough to release the door lock cylinder.  
*Torque: 62 lb.in (7 Nm)*
  2. Remove the door lock cylinder.



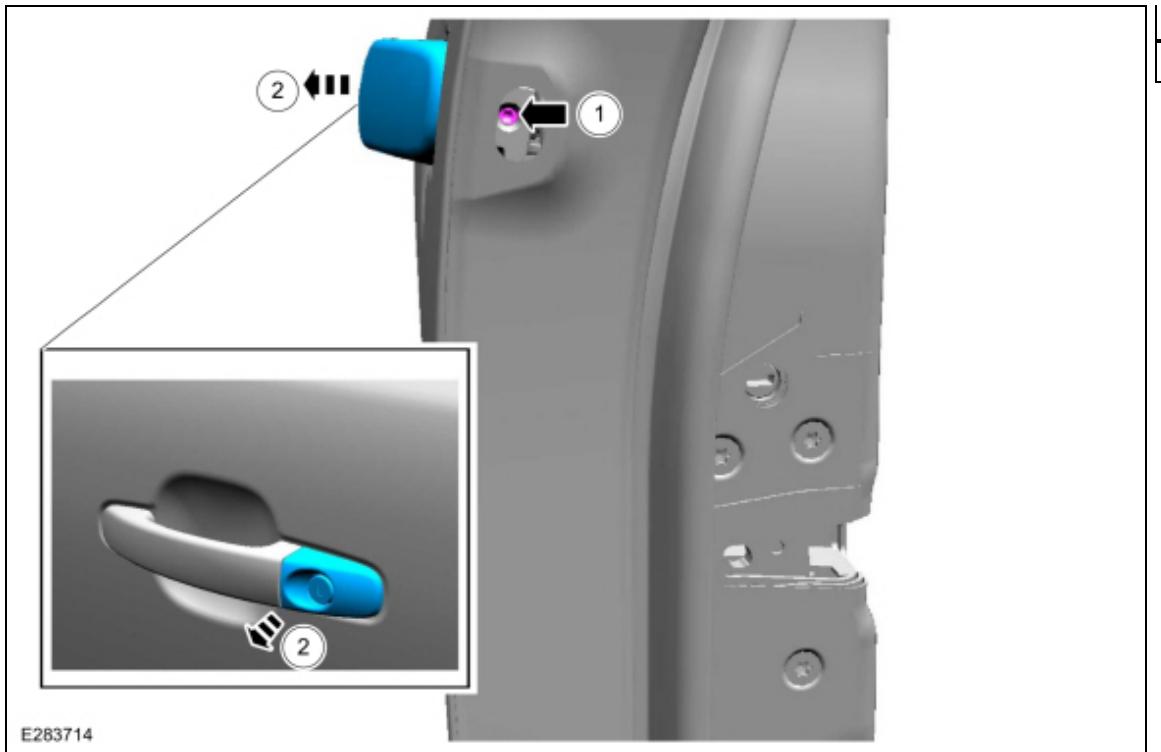

## Installation

1. To install, reverse the removal procedure.
2. Rotate the key to check for correct operation.

