

Exterior Front Door Handle Reinforcement

Removal

NOTE: LHD shown, RHD similar.


NOTE: LH side shown, RH side similar.

1. Remove the front door latch.
Refer to: [Front Door Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. **NOTE:** *This step is only necessary when installing a new component.*

If equipped.

Remove the exterior front door handle reinforcement wiring harness.

1. If equipped.
Release the electrical connector from the door latch assembly.
2. If equipped.
Release wiring harness routing clips from the door latch assembly.
3. If equipped.
Release the electrical connector from the exterior front door handle reinforcement.

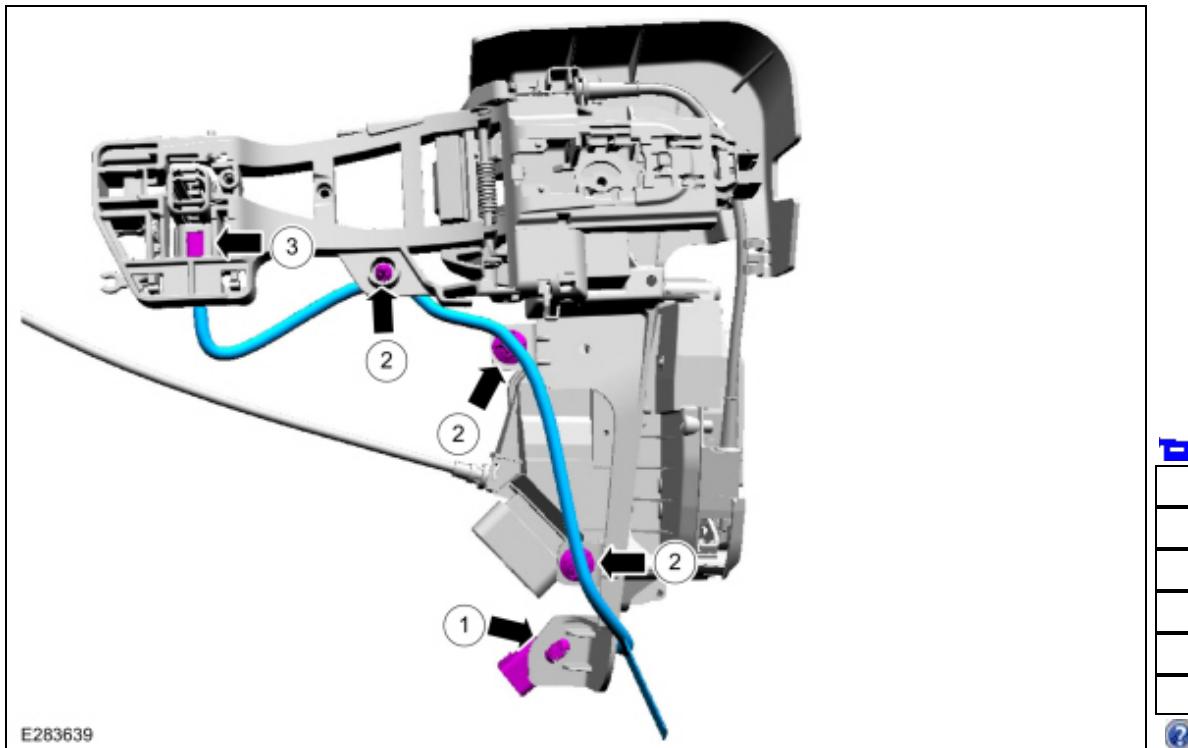


3. **NOTE:** *This step is only necessary when installing a new component.*

Remove the exterior front door handle reinforcement.

1. Detach the cable from the exterior front door handle reinforcement.
2. Remove the cable eyelet from the lever.

3. Press the locking tabs down and detach the exterior front door handle reinforcement.
4. If equipped.
Disconnect the door lock cylinder rod.
5. Remove the exterior front door handle reinforcement.

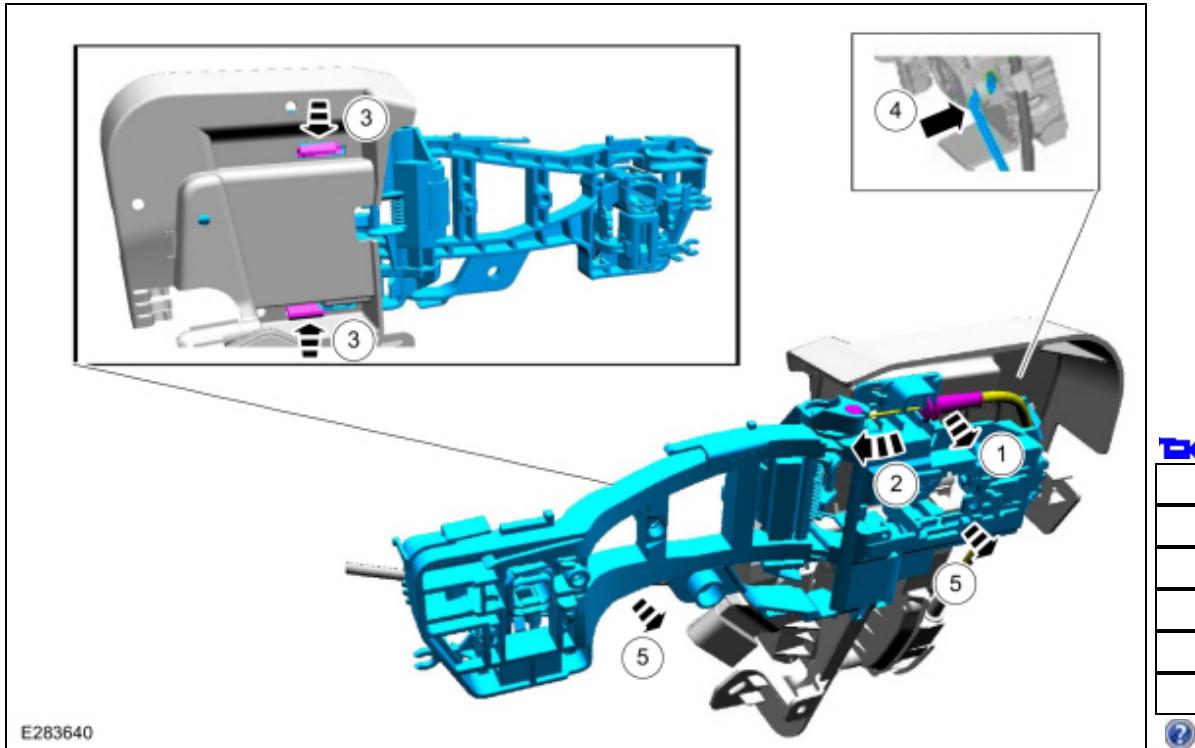

Installation

All vehicles

1. To install, reverse the removal procedure.

Vehicles with power windows

2. If the door is equipped with one touch up/down.
Carry out the power door window initialization.
Refer to: [Power Door Window Initialization](#) (501-11 Glass, Frames and Mechanisms, General Procedures).

