

Exterior Front Door Handle

Base Part Number: 22404

Removal

NOTE: LHD shown, RHD similar.

NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

 
All vehicles


1. Remove the exterior front door handle access plug.



Doors with lock cylinders


2. Remove the door lock cylinder.
 1. Turn the release screw enough to release the door lock cylinder.
Torque: 62 lb.in (7 Nm)
 2. Remove the door lock cylinder.



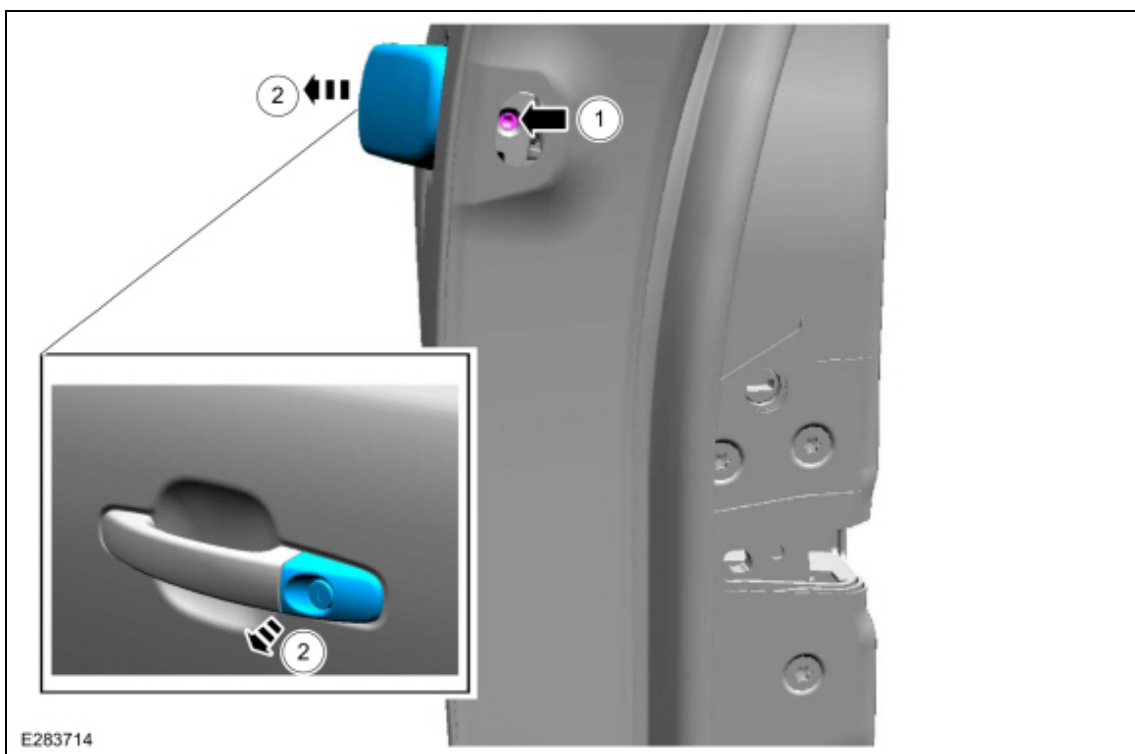


Doors without lock cylinders

3. Remove the exterior front door handle trim cover.
 1. Turn the release screw enough to release the exterior front door handle trim cover.
Torque: 62 lb.in (7 Nm)
 2. Remove the exterior front door handle trim cover.

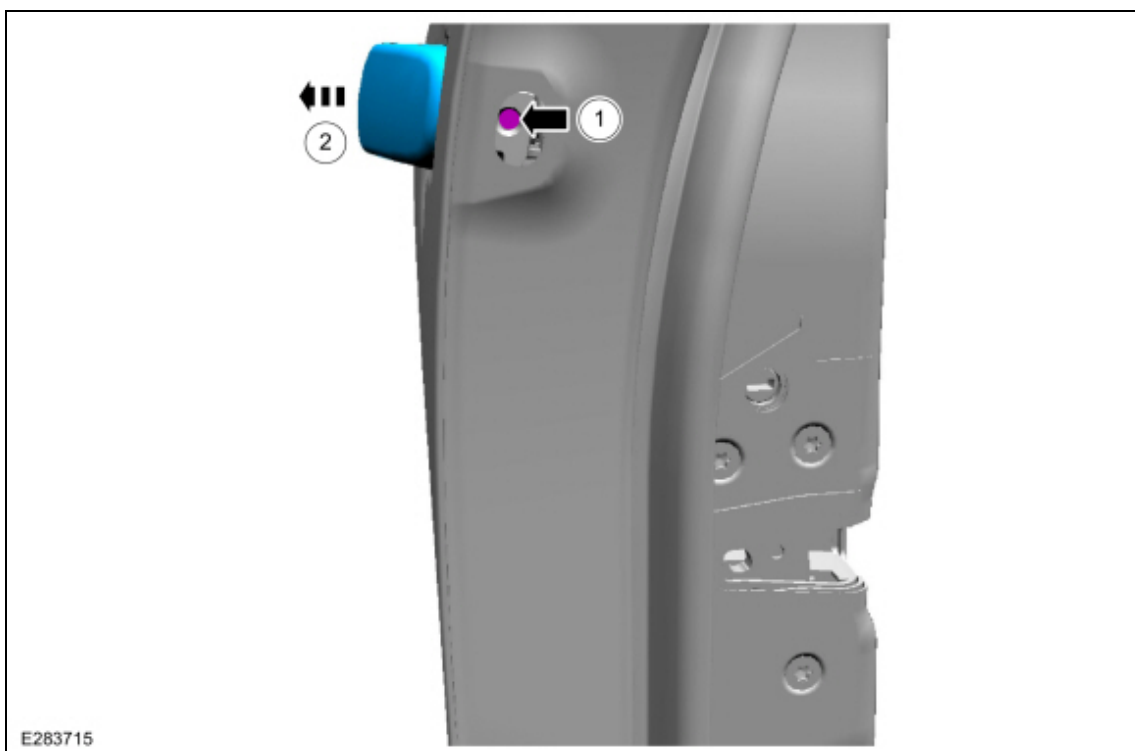


Vehicles without passive entry

4. Remove the exterior front door handle.

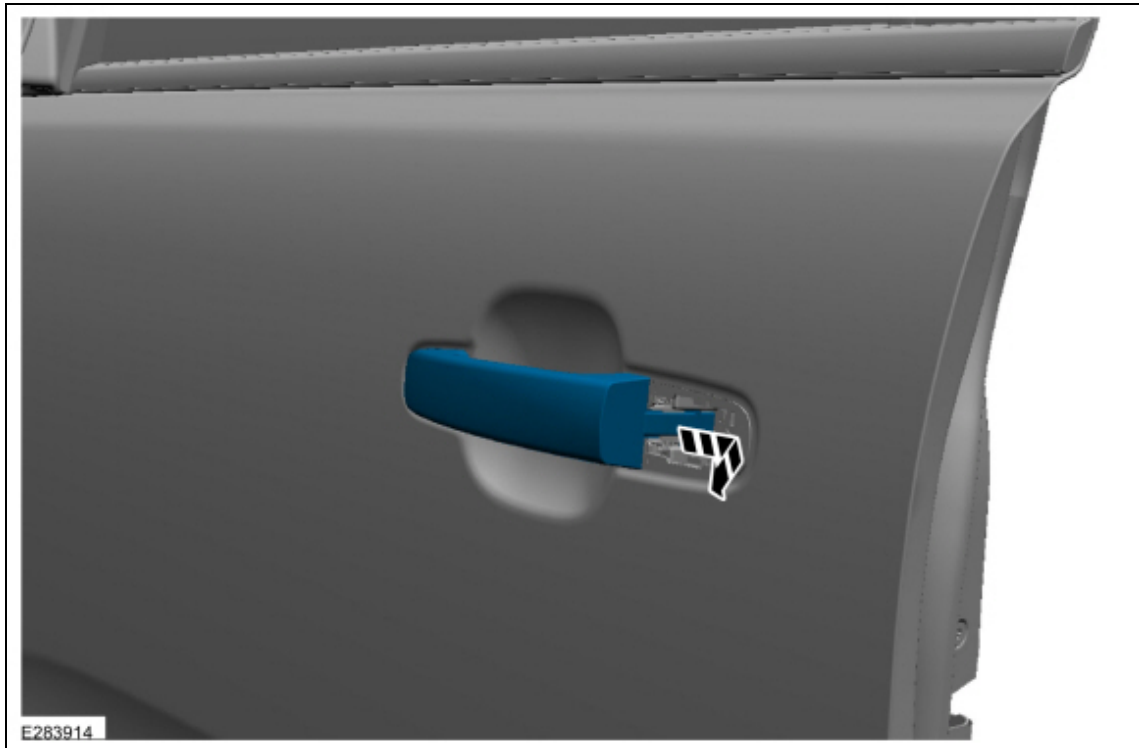


5. Remove the exterior front door handle gaskets.

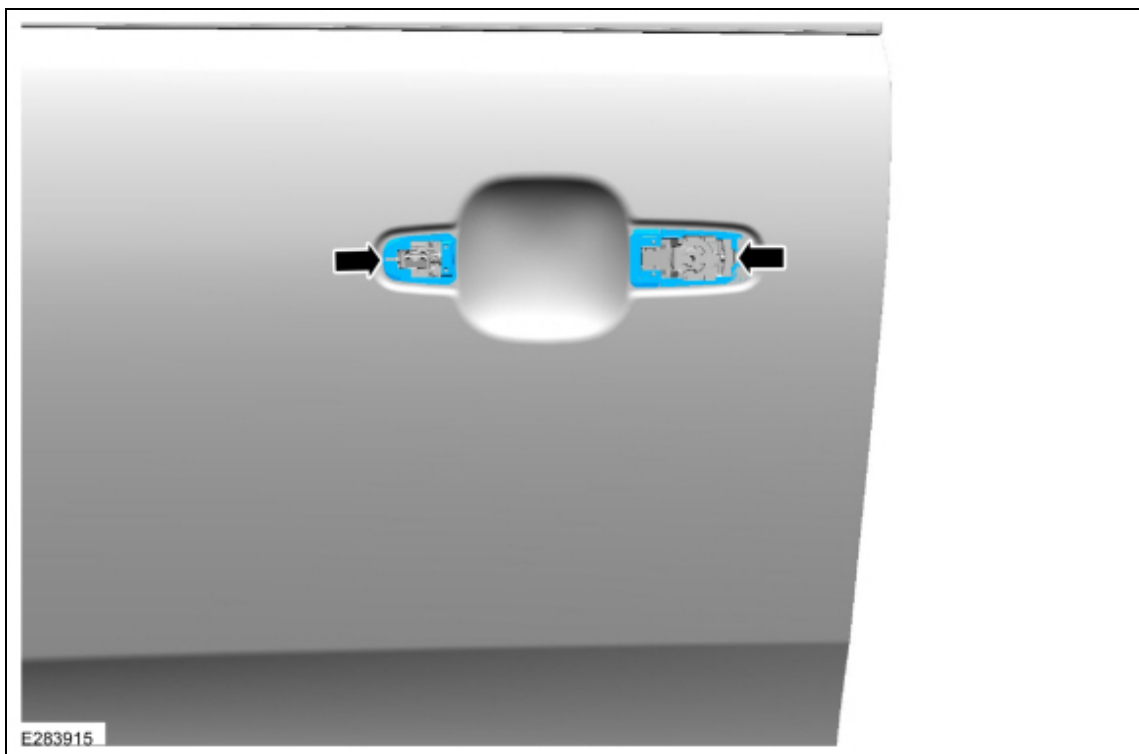

Vehicles with passive entry

6. **NOTICE:** Do not pull the door handle out of the door too far without disconnecting the handle from the connector. Damage to the harness will occur.


Partially remove the exterior front door handle.

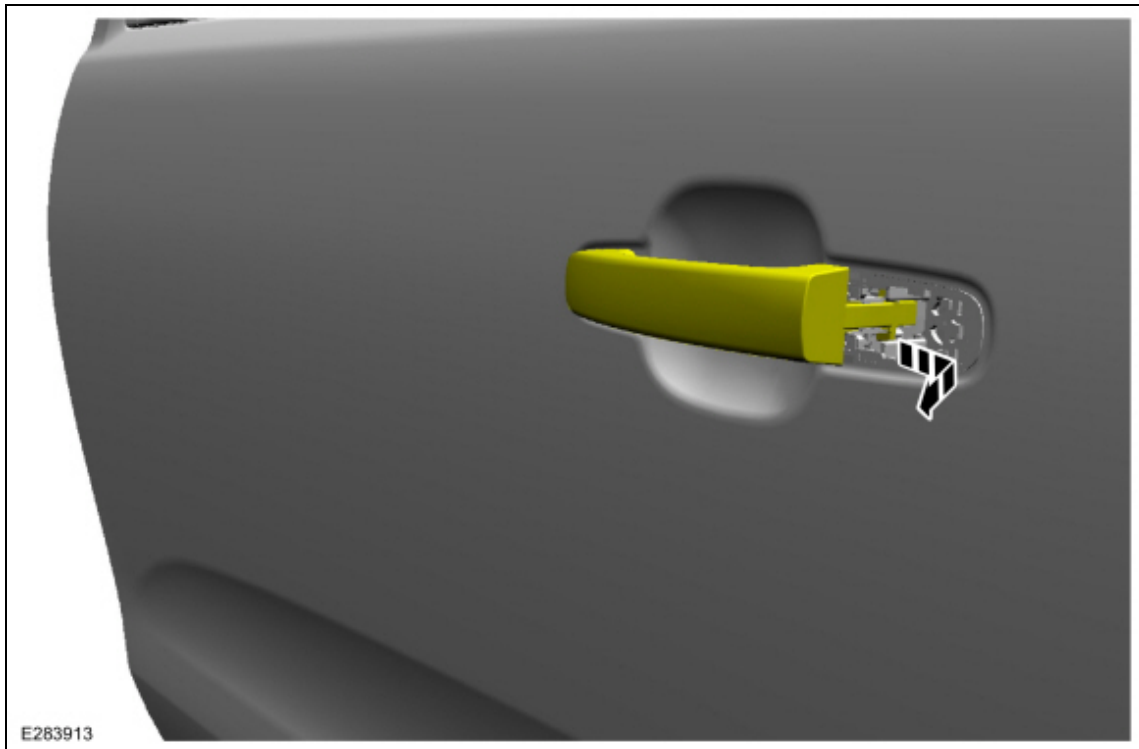


7. **NOTICE:** Do not pull the door handle out of the door too far without disconnecting the handle from the connector. Damage to the harness will occur.

Remove the exterior front door handle and gaskets.

 1. Disconnect the electrical connector from the exterior front door handle.
2. Remove the exterior front door handle gaskets.



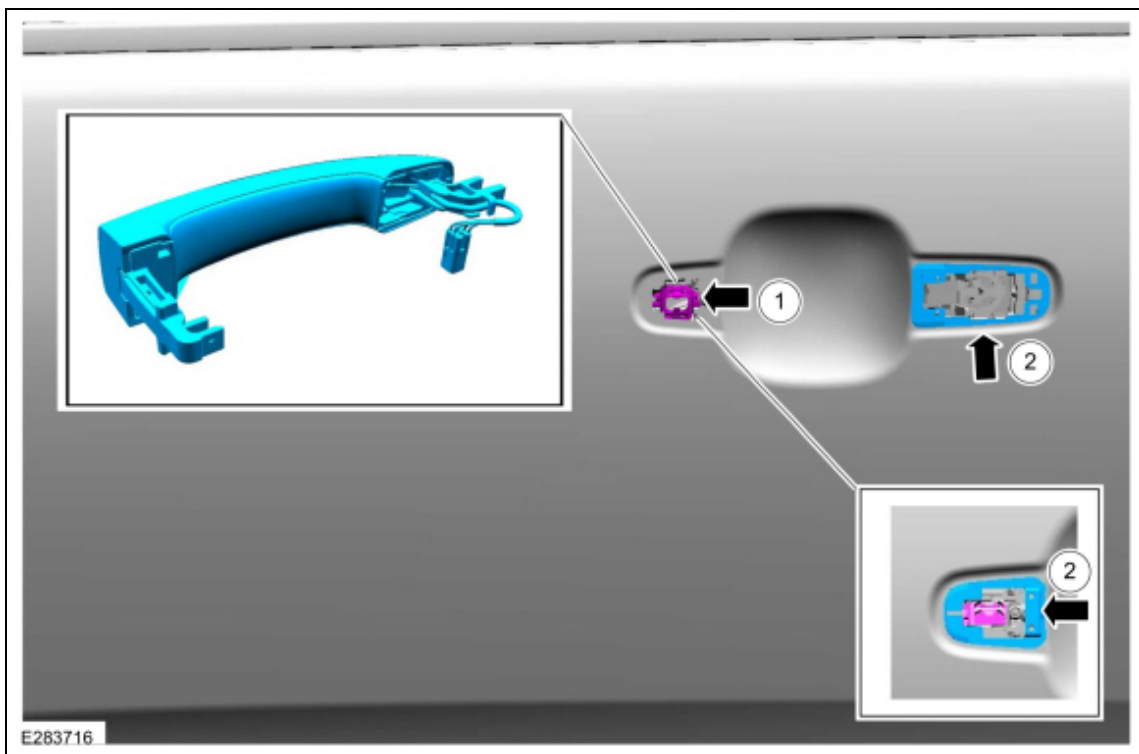

Installation

1. To install, reverse the removal procedure.

