


Front Door Lock Control Switch

Removal

NOTE: RH side shown, LH side similar.

1. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the front door lock control switch.
 1. Release the retaining clips.
 2. Remove the front door lock control switch.

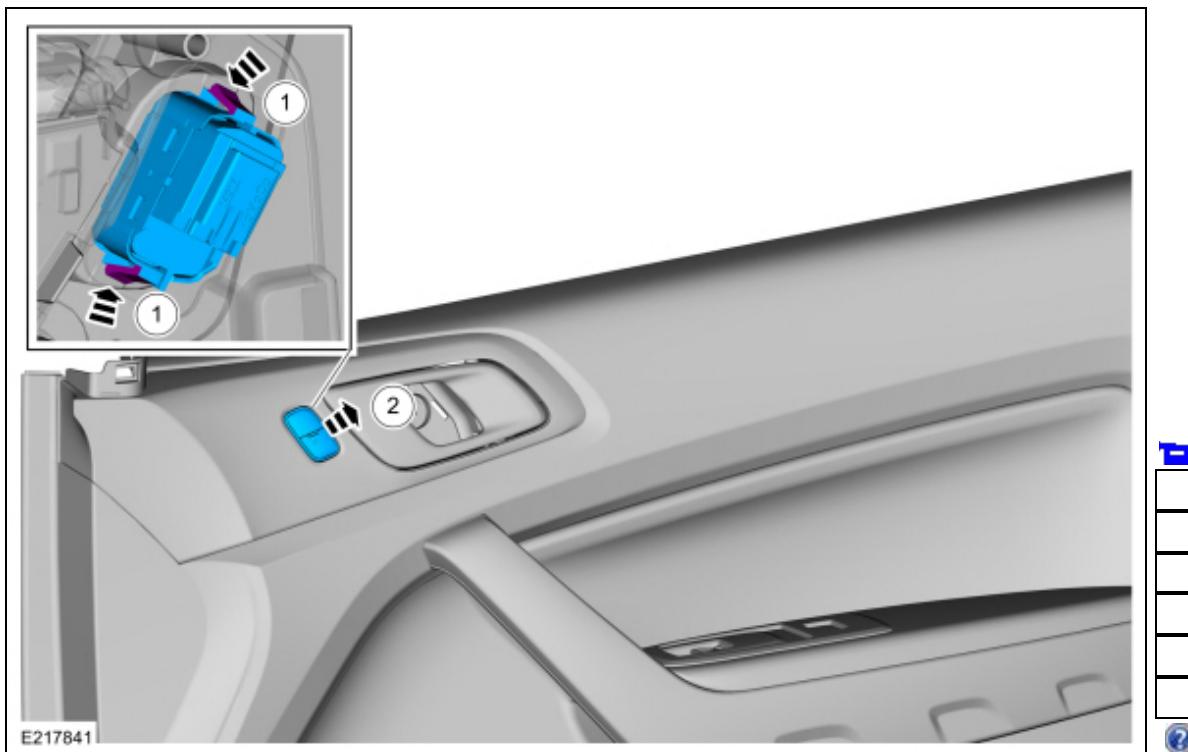

Installation

1. To install, reverse the removal procedure.

