


Hood Latch Release Cable - LHD

Base Part Number: 16916


Removal

1. Remove the battery.
Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).
2. Remove the LH headlamp assembly.
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
3. Remove the hood latch.
Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
4. Remove the hood latch release handle.
Refer to: [Hood Latch Release Handle - LHD](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
5. Route the hood latch release cable through the cowl.

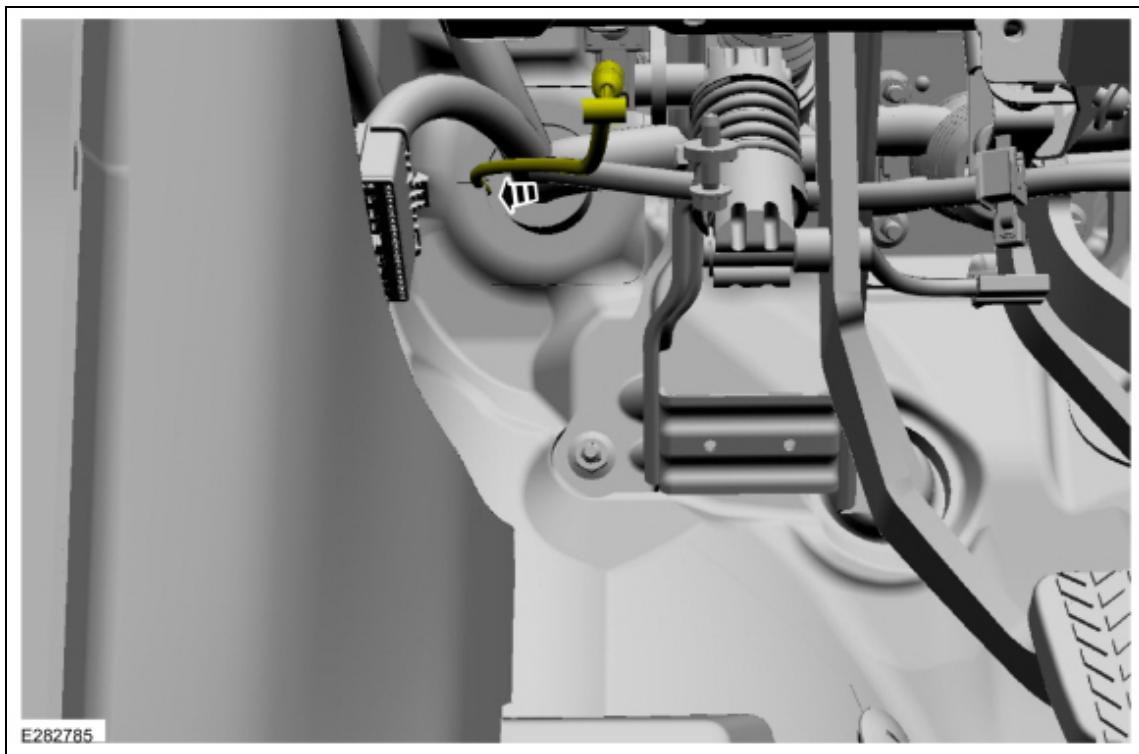


6. Remove the hood latch release cable.
 1. Route the hood latch release cable through the cowl.
 2. Release the cable routing clips.
 3. Remove the hood latch release cable.



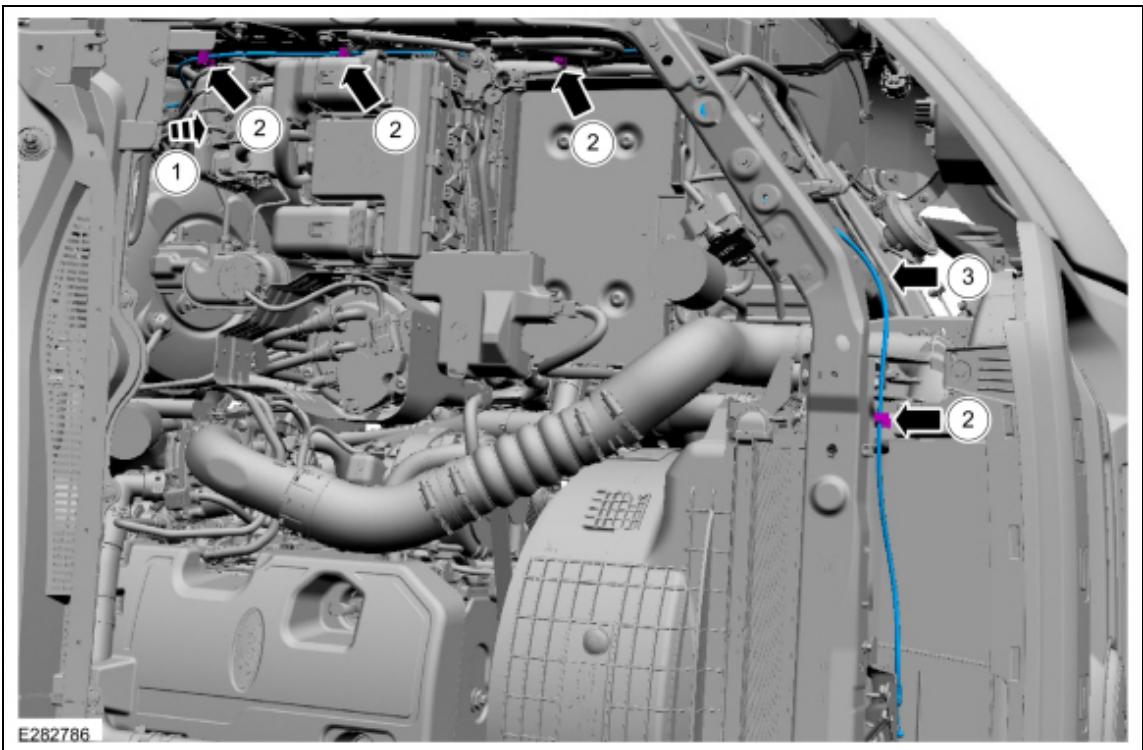

Installation

1. Route the hood latch release cable through the cowl.

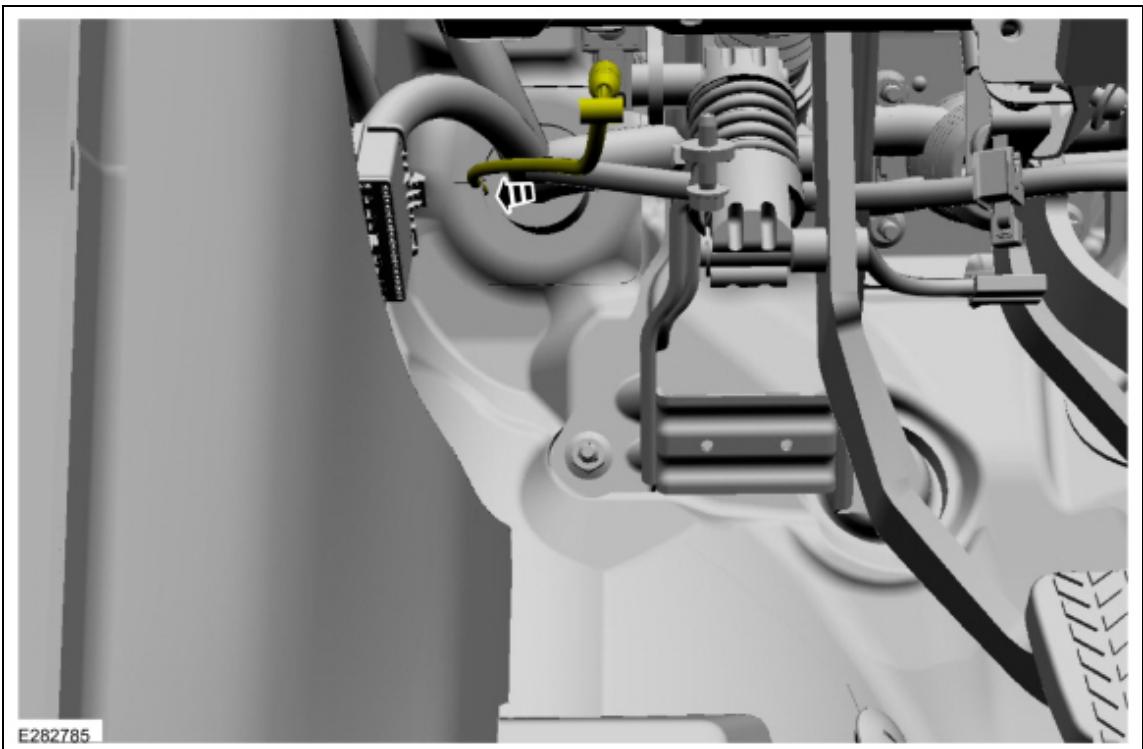


2.

Route the hood latch release cable.

1. Route the hood latch release cable through the cowl.
2. Route the hood latch release cable through the engine compartment.

3. Attach the cable routing clips.

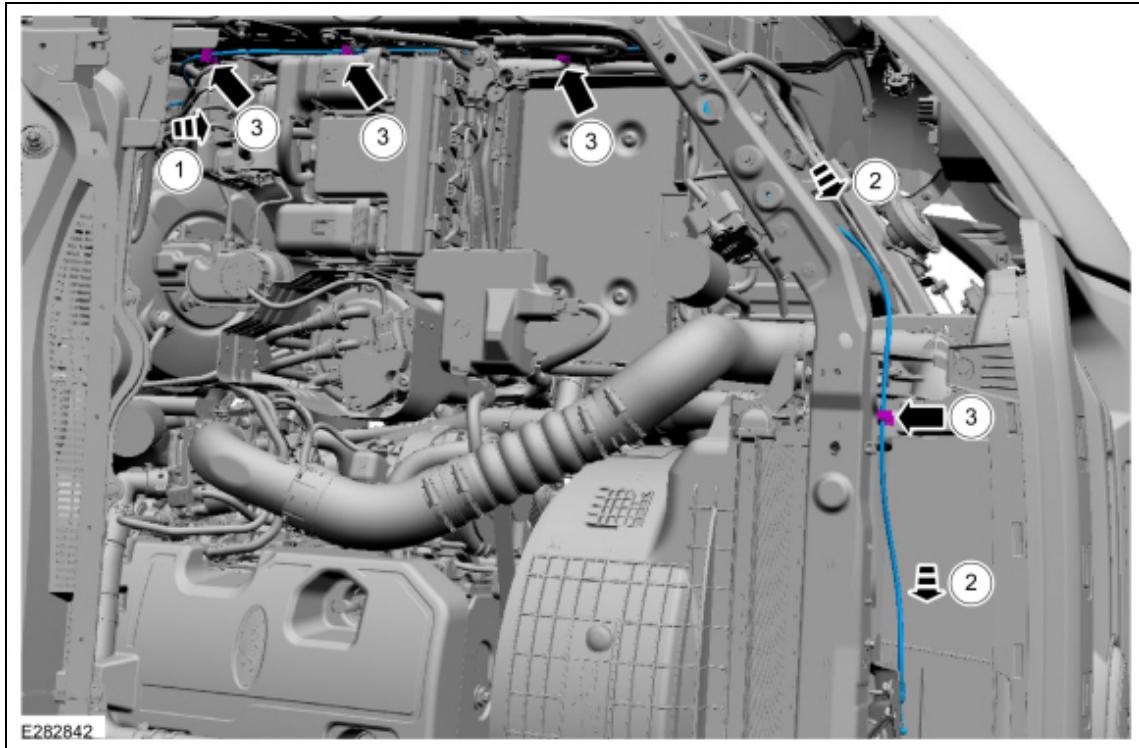

3. Install the hood latch release handle.

Refer to: [Hood Latch Release Handle - LHD](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

4. Install the hood latch.

Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

5. Install the LH headlamp assembly.

Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

6. Install the battery.

Refer to: [Battery](#) (414-01 Battery, Mounting and Cables, Removal and Installation).

