


Interior Front Door Handle

Removal


NOTE: RH side shown, LH side similar.

1. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the interior front door handle pivot pin.
 1. Release the spring.
 2. Remove the interior front door handle pivot pin and discard.

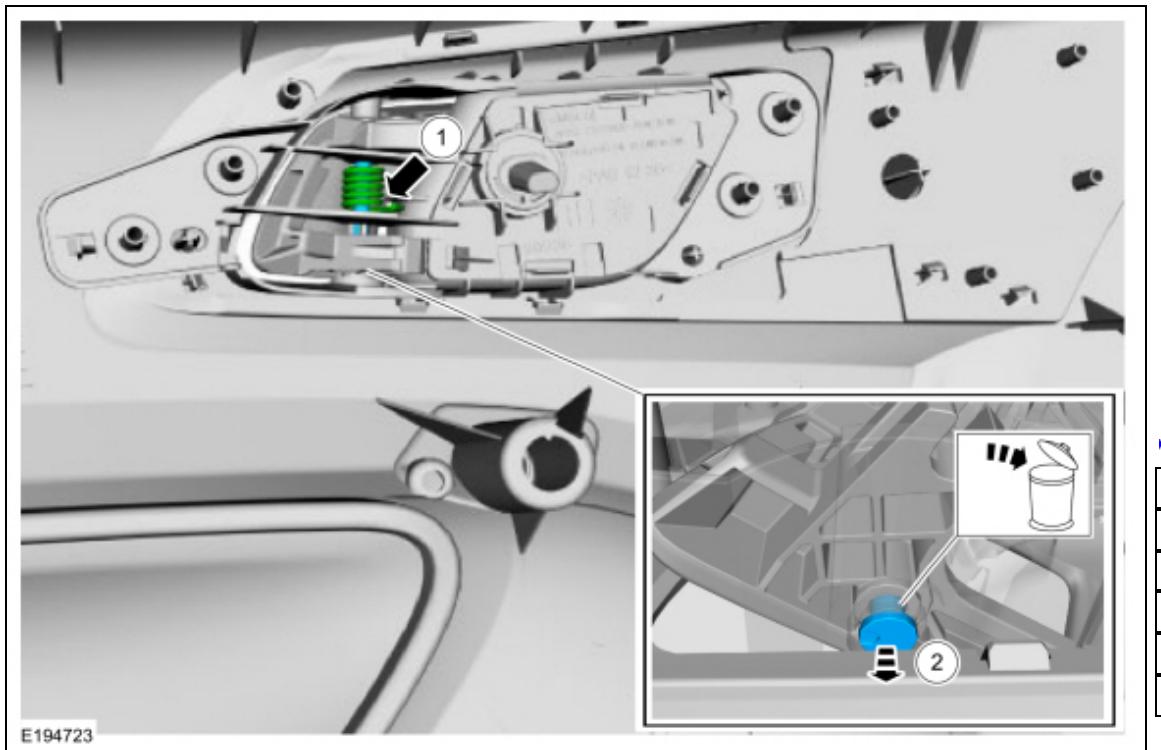


3. Remove the interior front door handle.



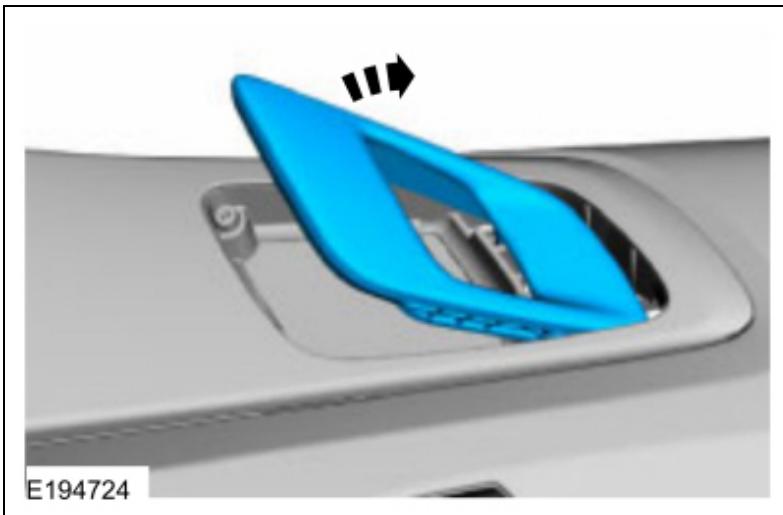

Installation

1. Install the interior front door handle.

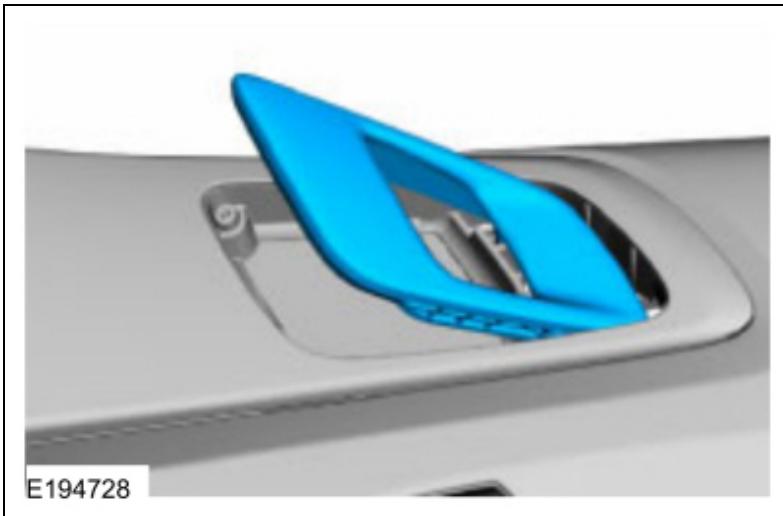


2. **NOTE:** Make sure that a new pivot pin is installed.

Install the interior front door handle pivot pin.

1. Position the interior front door handle.
2. Install the spring.
3. Install the interior front door handle pivot pin.



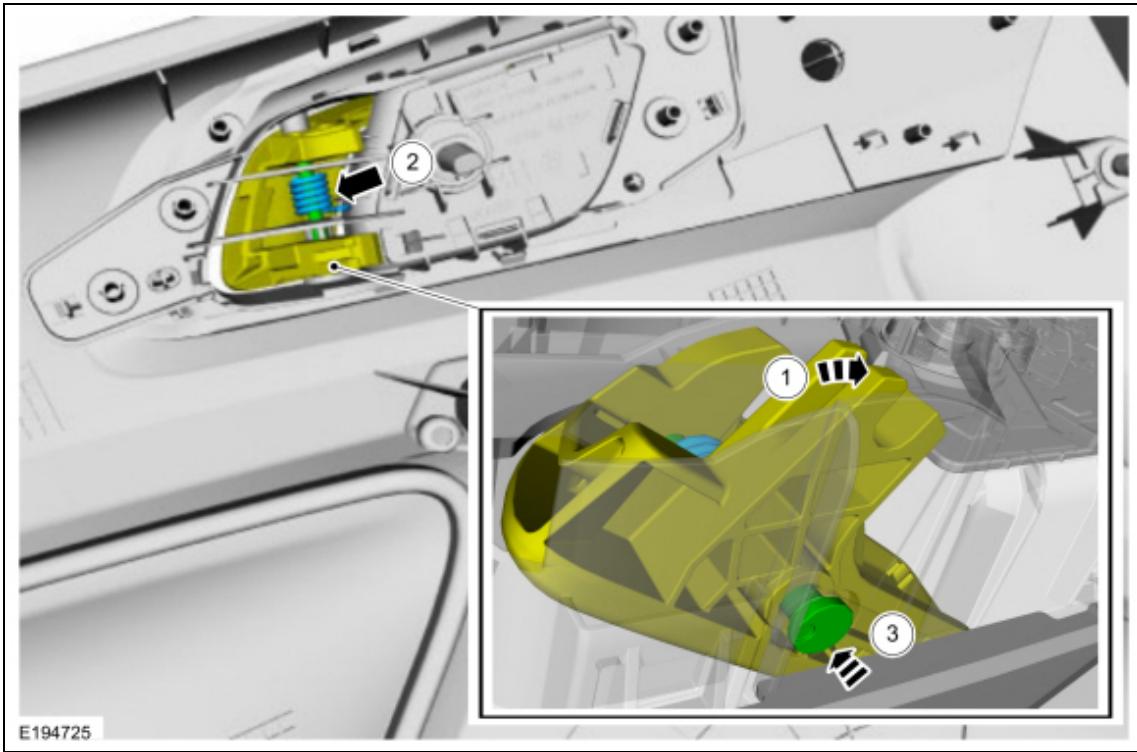

3. Install the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

