

Tailgate Latch Actuator

Removal

NOTE: *The tailgate latch actuator is serviced as an assembly with the tailgate latch control assembly.*

1. Remove the tailgate latch control assembly.
Refer to: [Tailgate Latch Control Assembly](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

Installation

1. To install, reverse the removal procedure.