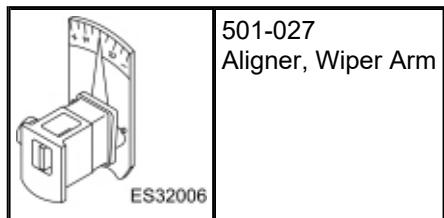


Windshield Wiper Blade and Pivot Arm Adjustment**Special Tool(s) / General Equipment****Adjustment**


1. **NOTICE:** Make sure that the wiper motor is in the park position.

Remove the wiper blade.

2. **NOTE:** The angle of the wiper on the scale must point from the zero centre line to the centre of the windshield/rear window. The alignment tool shows positive (+) for RHD.
3. **NOTE:** Make sure that the special tool is in full contact with the glass.

Using the special tool, record the angle between the wiper arm and the glass.

Use Special Service Tool: 501-027 Aligner, Wiper Arm.

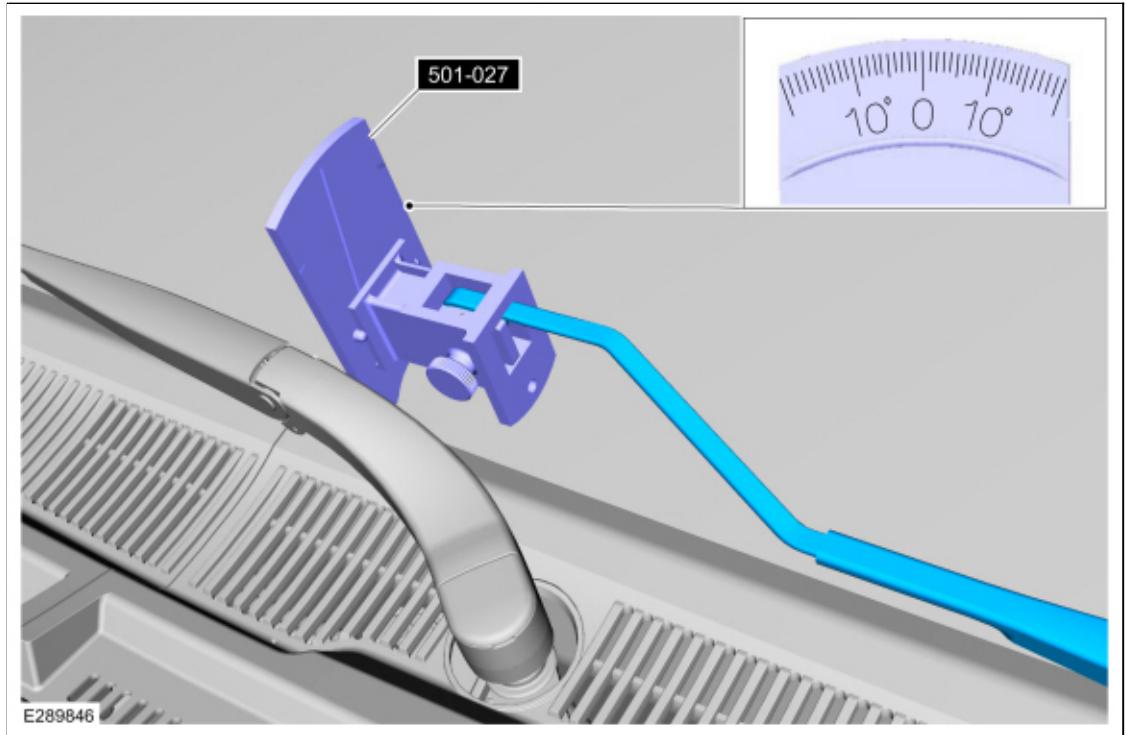


4. **NOTICE: Make sure that the special tool is lifted off the glass while adjusting the angle.**

Use the adjusting tools to adjust the pivot arm until within specifications.

- Driver side : $6^\circ \pm 3^\circ$
- Passenger side $6.5^\circ \pm 2.5^\circ$

Use Special Service Tool: 501-027 Aligner, Wiper Arm.

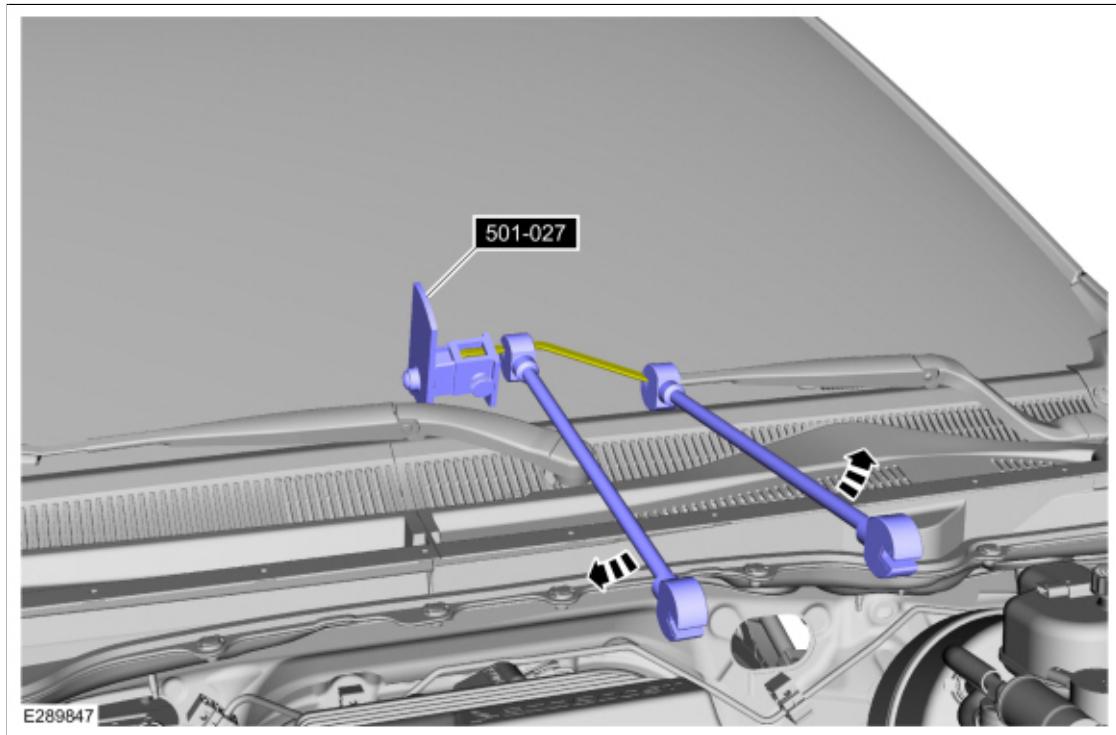

Copyright © 2019 Ford Motor Company

