



Wiper Park Position Adjustment**Special Tool(s) / General Equipment****Two Leg Puller****Adjustment****NOTICE: Make sure that the motor is in the park position.**

1. On both sides.
Remove the windshield wiper pivot arm nut cover.

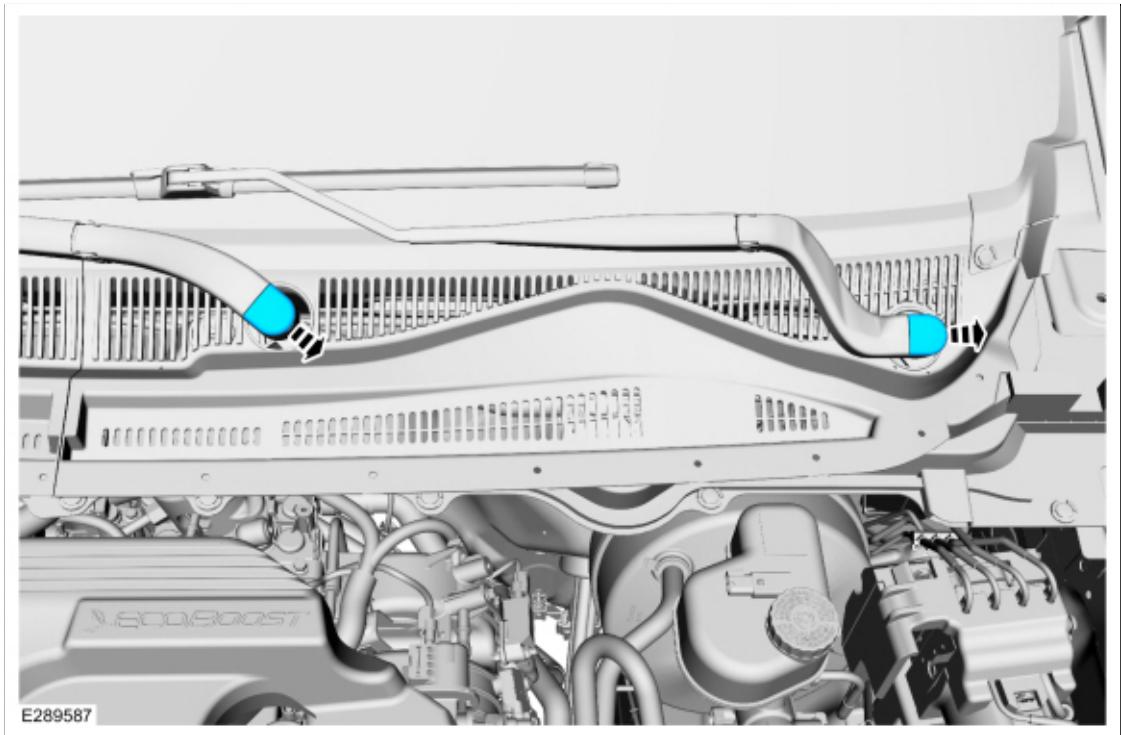

2. On both sides.
Remove the windshield wiper pivot arm nut.

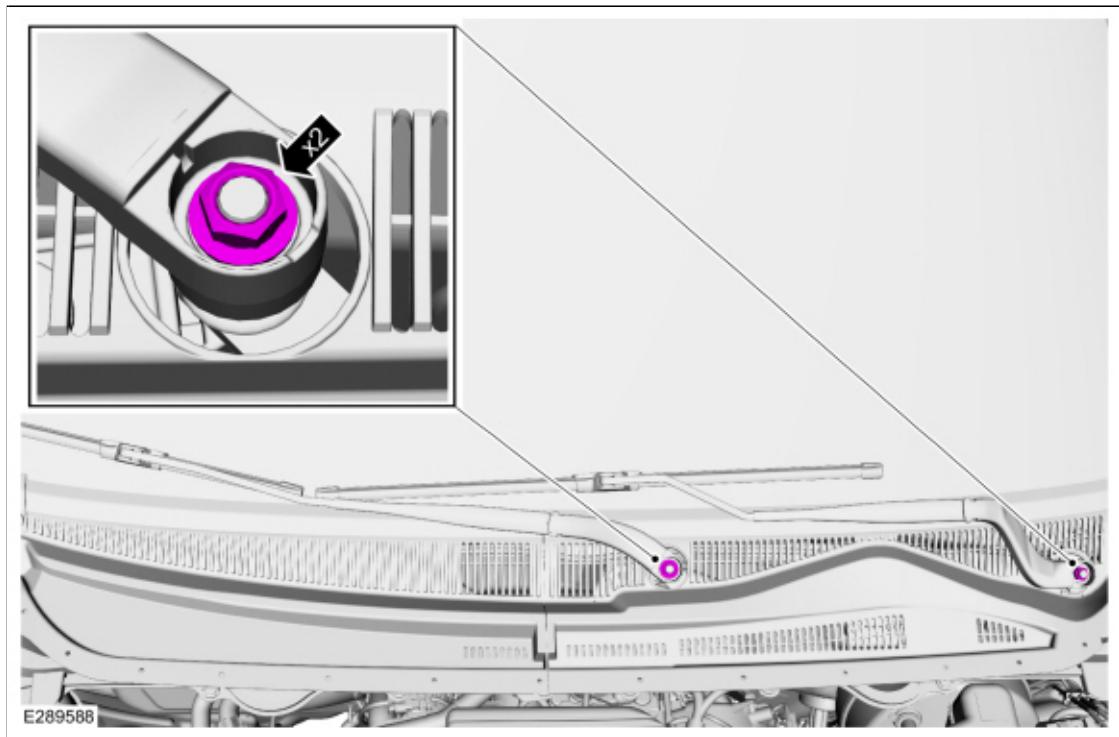


3. **NOTE:** Note the position of the components before removal.

On both sides.


Remove the windshield wiper pivot arm.

Use the General Equipment: Two Leg Puller

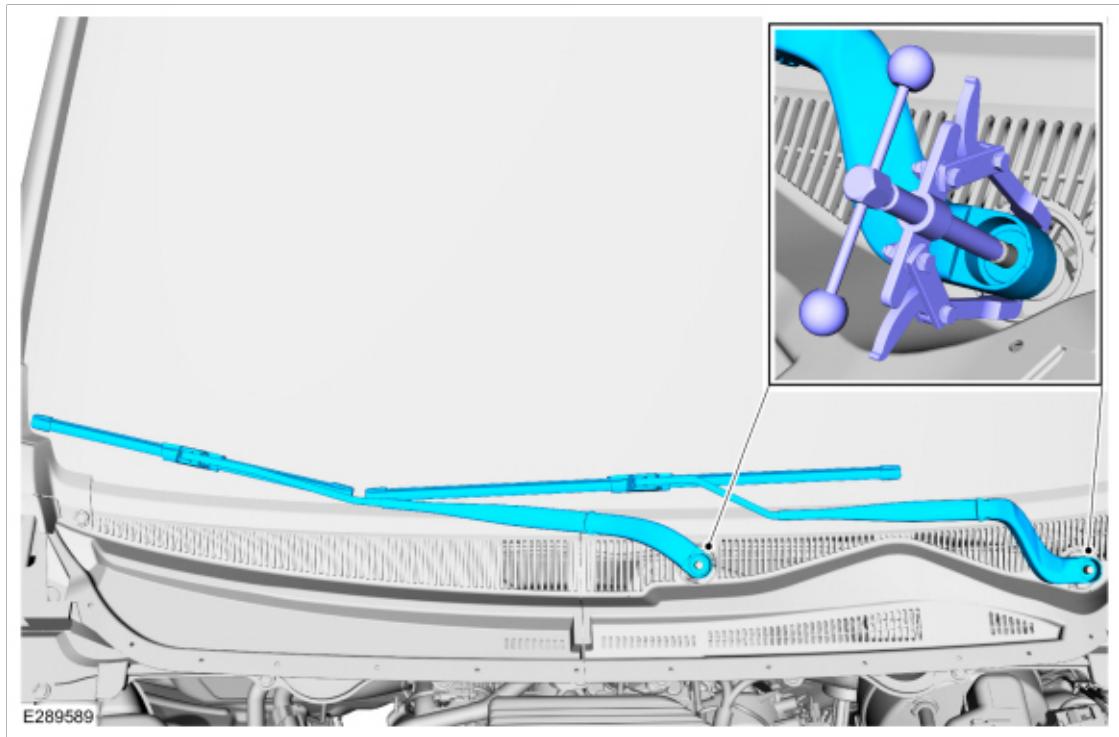

4. **NOTICE: Make sure that the component aligns with the installation mark.**

Align the wiper blade with the installation mark.

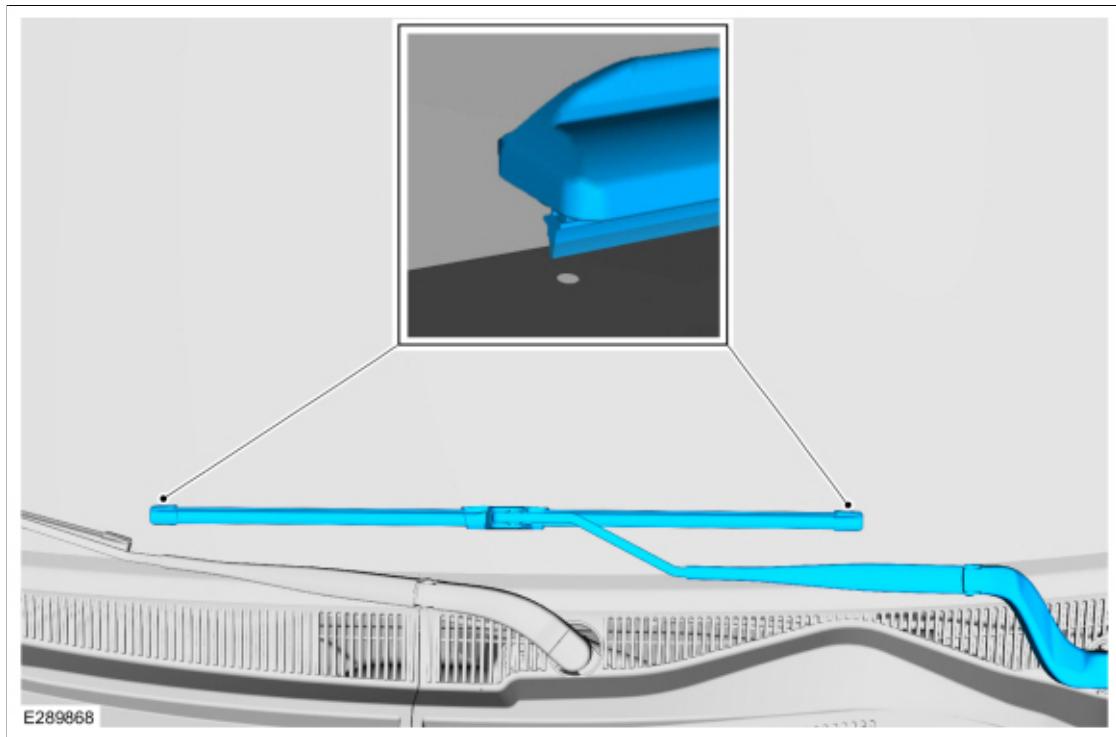


5. On both sides.


Install the windshield wiper pivot arm nut.

Torque: 18 lb.ft (25 Nm)



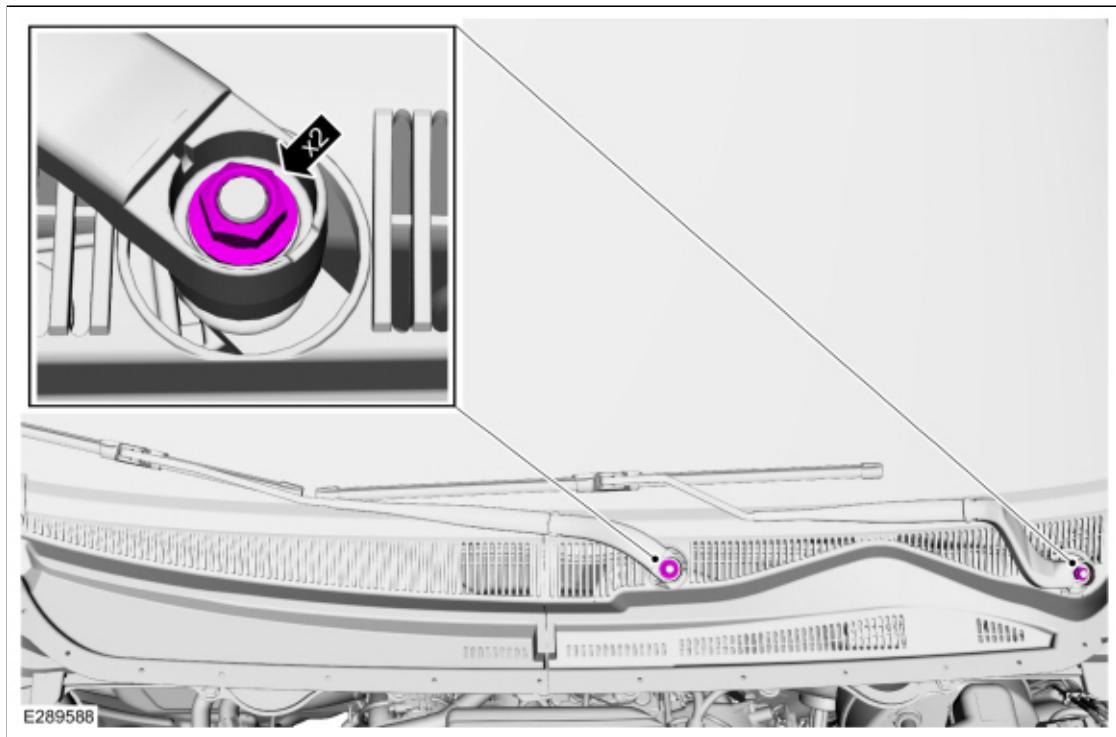

6. On both sides.
Install the windshield wiper pivot arm nut cover.

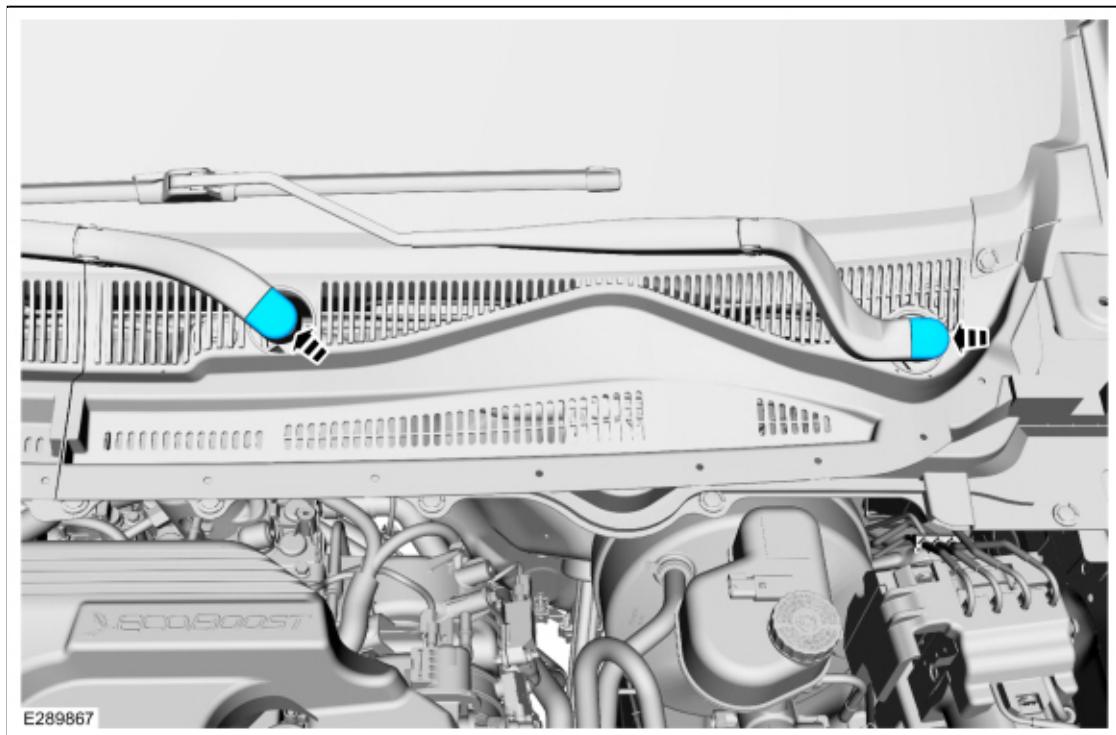

7. If necessary, adjust the wiper blade and pivot arm.
Refer to: [Windshield Wiper Blade and Pivot Arm Adjustment](#) (501-16 Wipers and Washers, General Procedures).

Copyright © 2019 Ford Motor Company
