


### Windshield Washer Pump

#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


1. Remove the wheel and tire.  
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the retainers and position the fender splash shield aside to access the windshield washer reservoir.

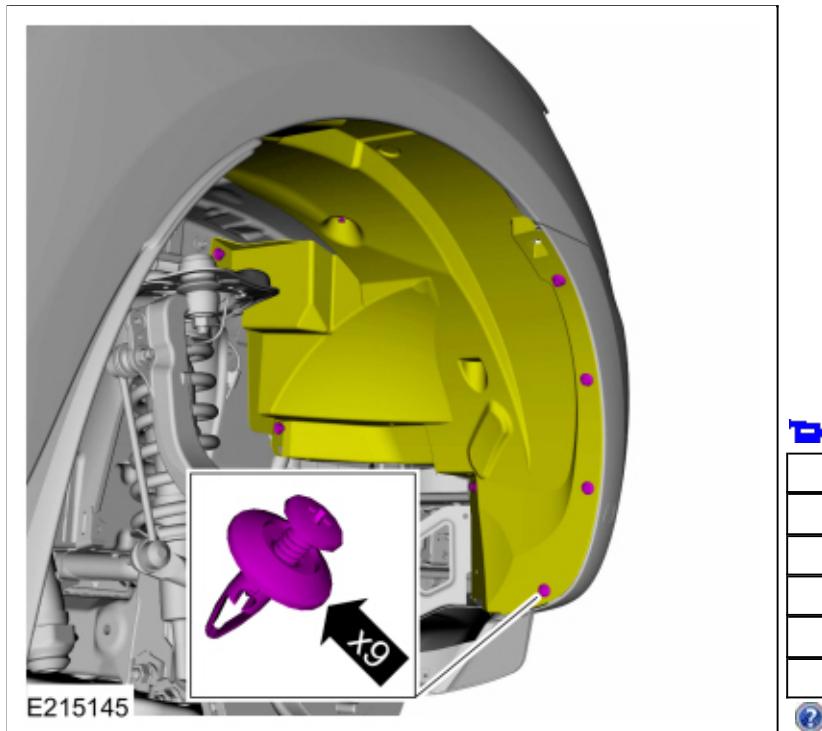

3. **NOTICE:** Be careful not to damage the windshield washer pump seal while removing and installing the windshield washer pump.

**NOTE:** Be prepared to collect escaping fluid.

1. Disconnect the electrical connector.
2. Disconnect the washer hose.
3. Release the clip and remove the windshield washer pump.

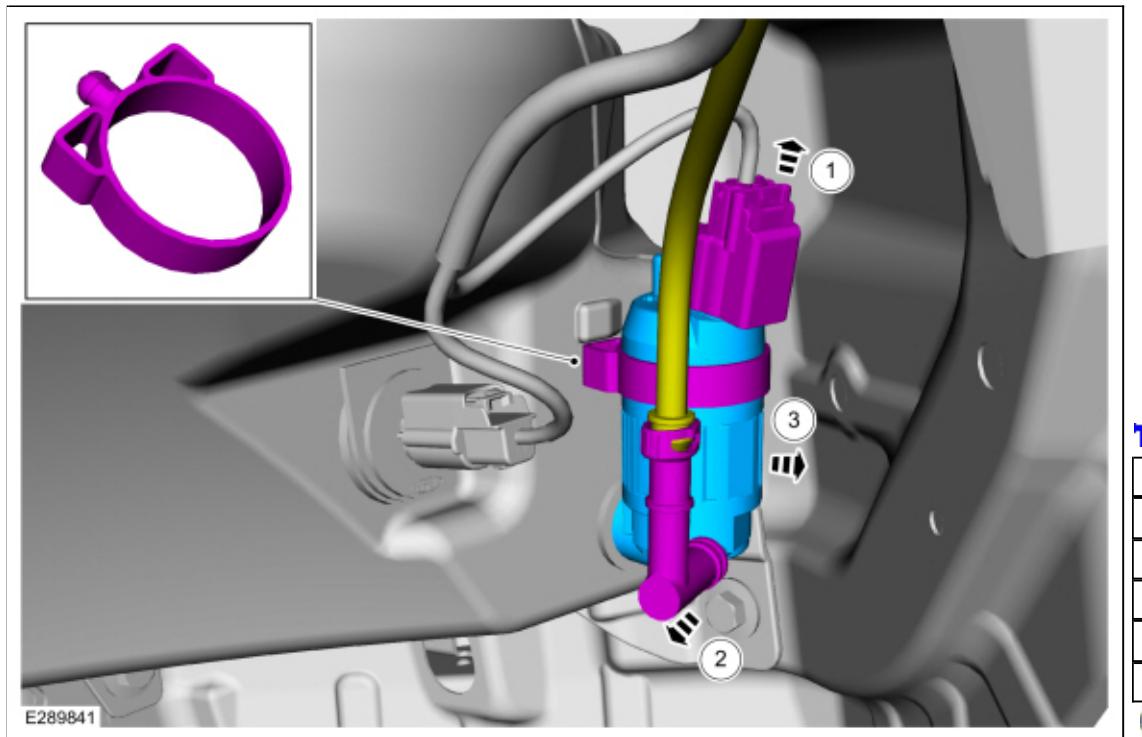

## Installation

1. **NOTICE: Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.**

To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

