


Windshield Washer Reservoir

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the retainers and position the fender splash shield aside to access the windshield washer reservoir

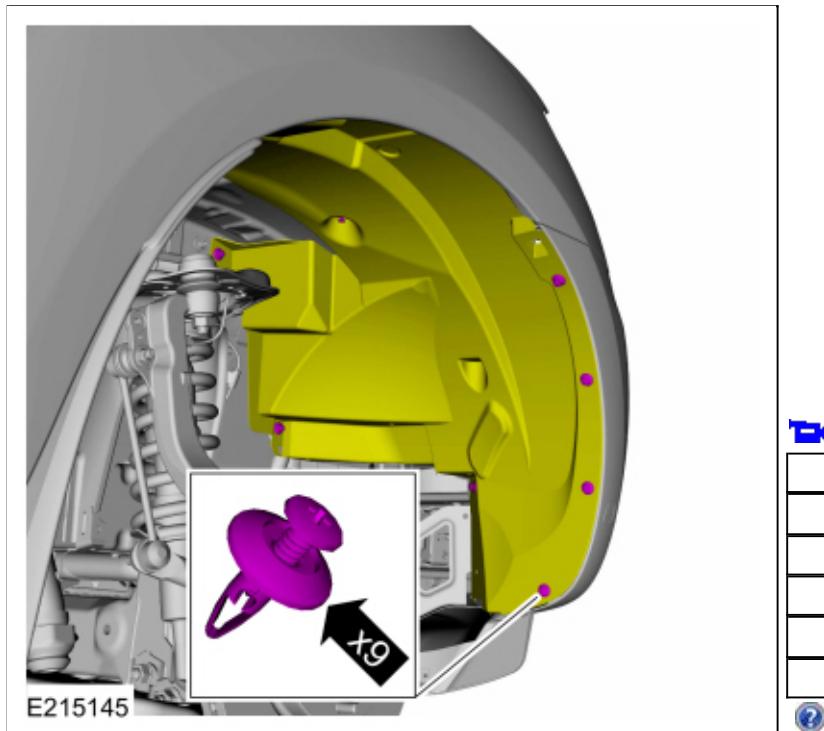

3.
 1. Disconnect the electrical connectors.
 2. **NOTE:** Be prepared to collect escaping fluid.

Disconnect the washer hose.

3. Remove the bolts, nut and the windshield washer fluid reservoir.
Torque: 42 lb.in (4.8 Nm)

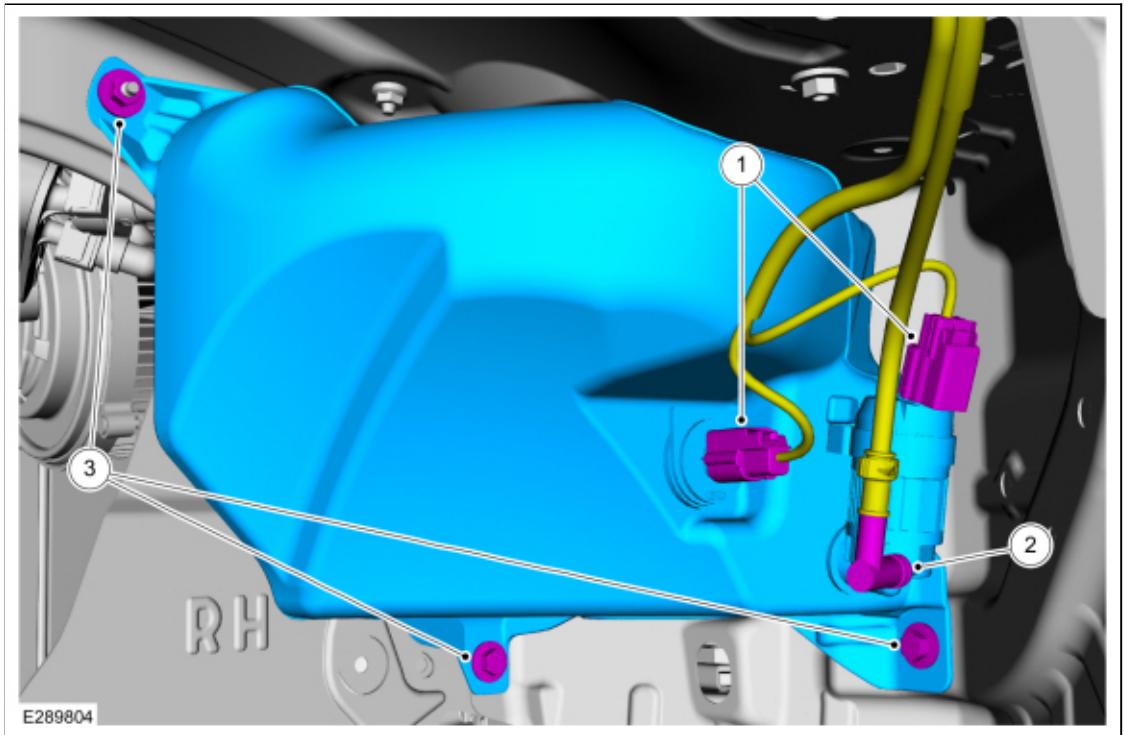

Installation

1. **NOTICE: Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.**

To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

