


### Wiper Linkage Assembly

#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the cowl panel grill.  
Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).
2. Remove the wiper linkage assembly.
  1. Disconnect the electrical connector.
  2. Remove the nut.  
*Torque: 97 lb.in (11 Nm)*
  3. Remove the bolts.  
*Torque: 97 lb.in (11 Nm)*

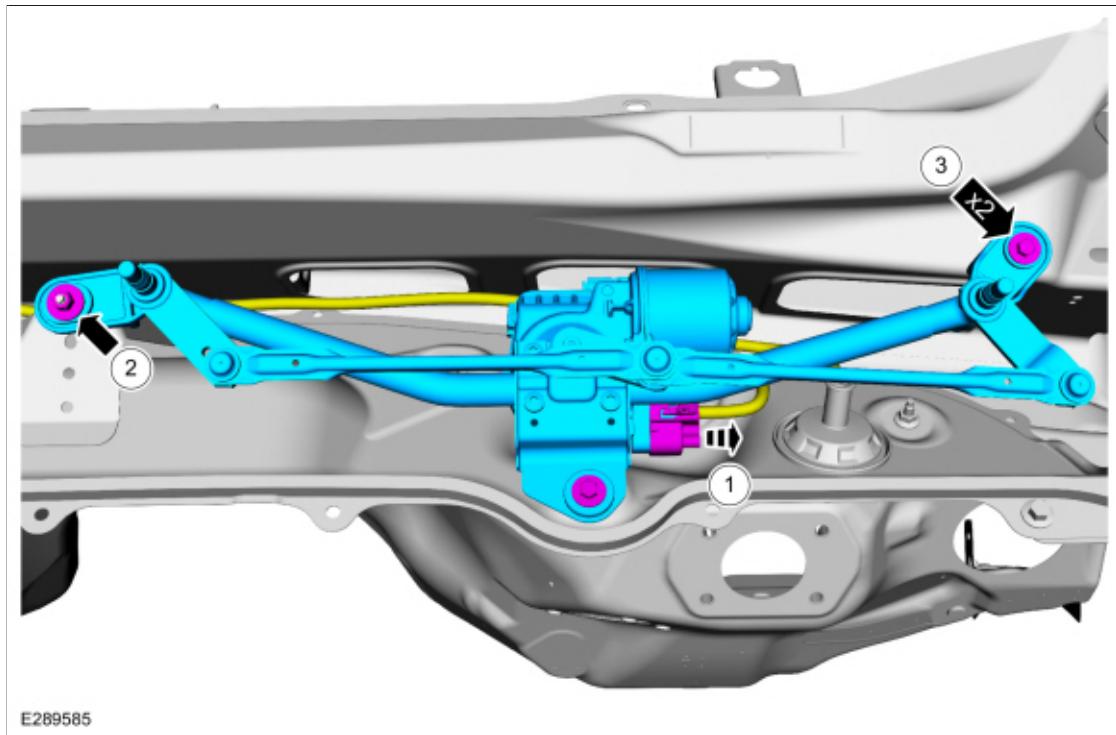

#### Installation

1. To install, reverse the removal procedure.

