


**Windshield Wiper Pivot Arm****Special Tool(s) / General Equipment****Two Leg Puller****Removal**


**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** The hood is removed for clarity.

1. On both sides.  
Remove the windshield wiper pivot arm nut cover.

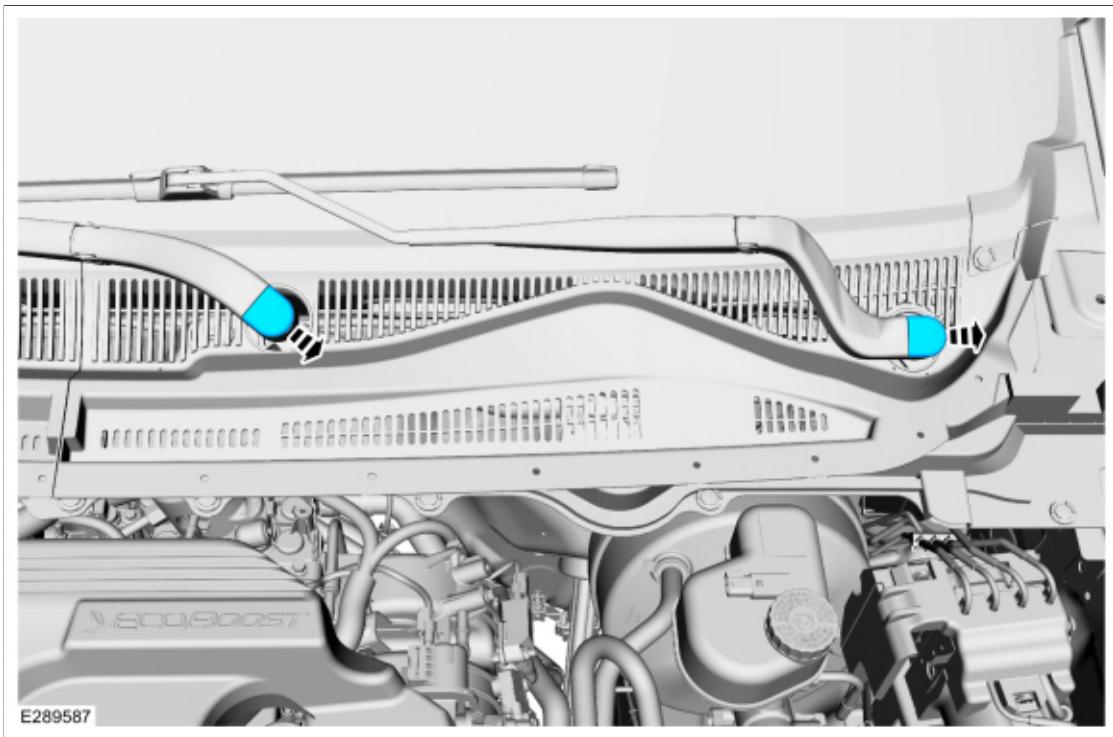

2. On both sides.  
Remove the windshield wiper pivot arm nut.  
*Torque: 18 lb.ft (25 Nm)*

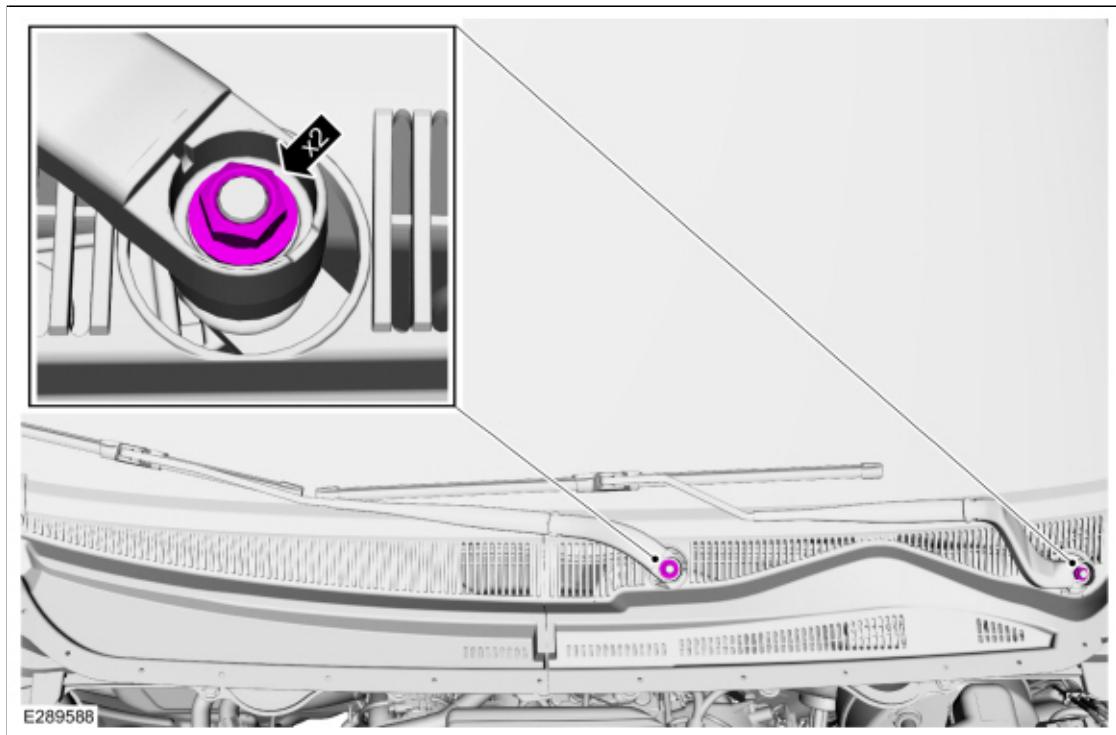


3. **NOTE:** Note the position of the components before removal.

On both sides.

Remove the windshield wiper pivot arm.

Use the General Equipment: Two Leg Puller

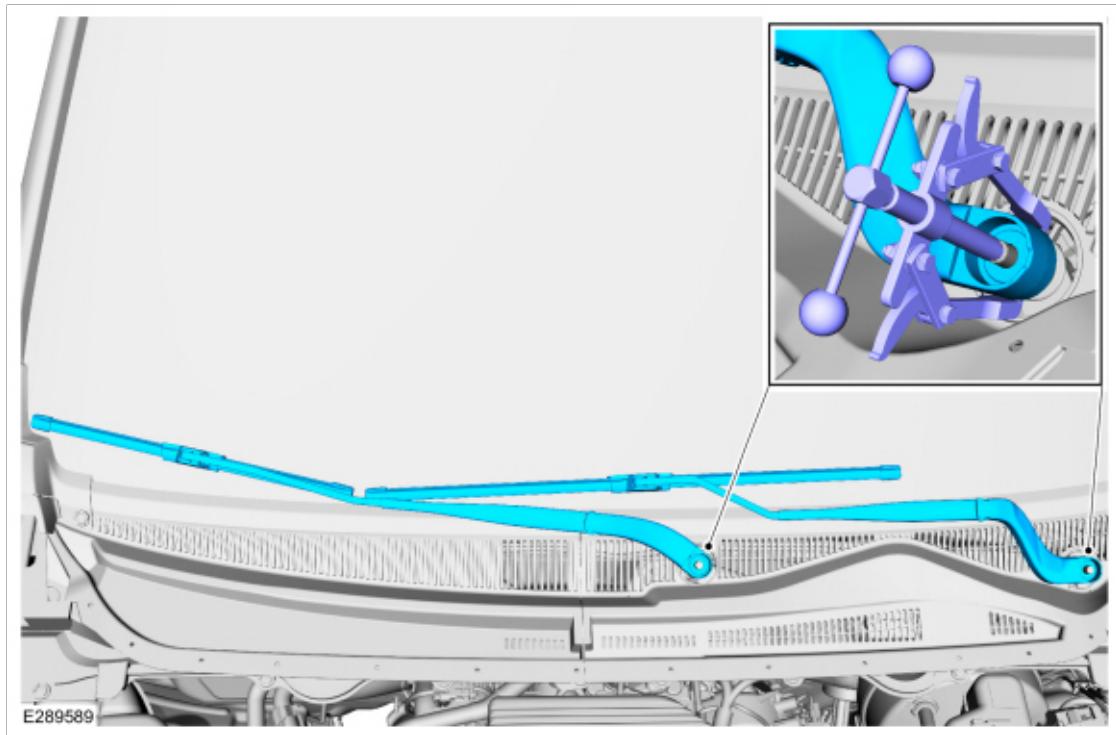

## Installation

1. **NOTE:** Before installing the windshield wiper pivot arm(s), make sure that the windshield wiper motor is in the PARK position.
  - Turn the ignition to the ON position.
  - Switch the wipers to the LOW position and allow to cycle.
  - Switch the wipers to the OFF position.
  - Turn the ignition to the OFF position.
2. **NOTICE:** Make sure that the component aligns with the installation mark.

To install, reverse the removal procedure.

Refer to: [Windshield Wiper Blade and Pivot Arm Adjustment](#) (501-16 Wipers and Washers, General Procedures).

Refer to: [Wiper Park Position Adjustment](#) (501-16 Wipers and Washers, General Procedures).

---

Copyright © 2019 Ford Motor Company