

Rear Bumper

Base Part Number: 17F838


Removal

All vehicles


1. Raise the vehicle on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

Vehicles with light duty package

2. If equipped.
Disconnect the rear bumper wiring harness connector.

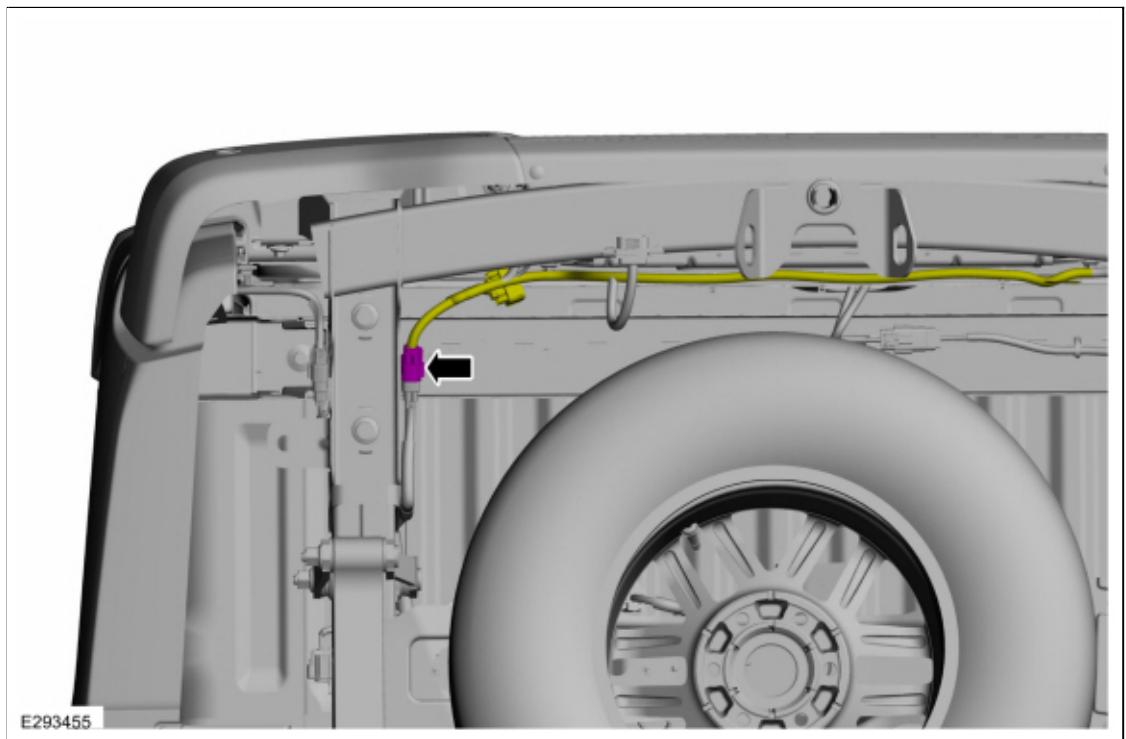


3. Partially lower the vehicle.
4. With the help of an assistant.
Remove the bolts and the rear bumper assembly.
Torque: 148 lb.ft (200 Nm)

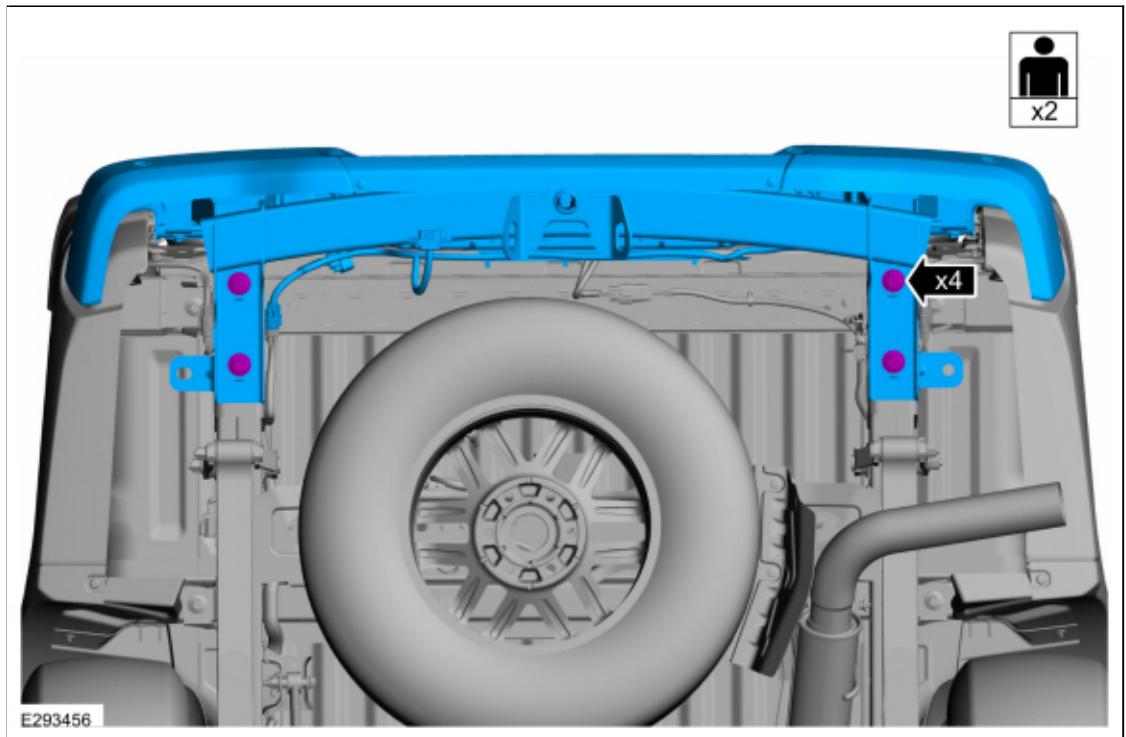


Vehicles with heavy duty package

5. If equipped.
Disconnect the rear bumper wiring harness connector.

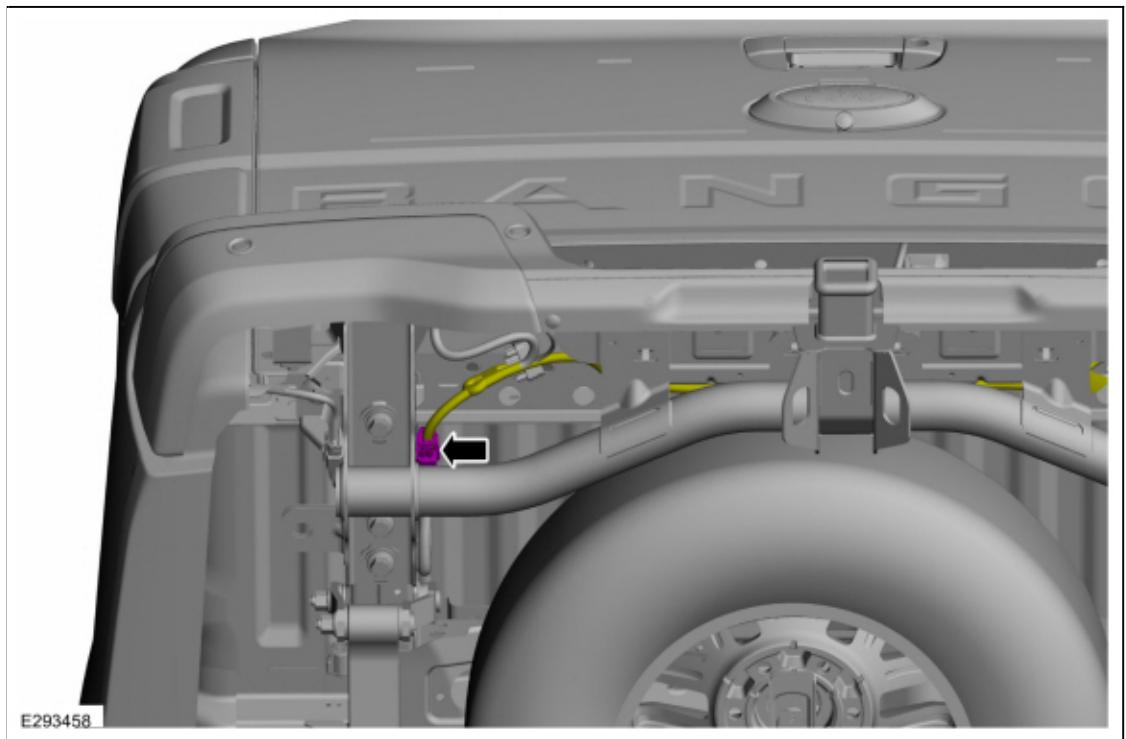

6. Partially lower the vehicle.

7. With the help of an assistant.
Remove the bolts and the rear bumper assembly.
Torque: 148 lb.ft (200 Nm)

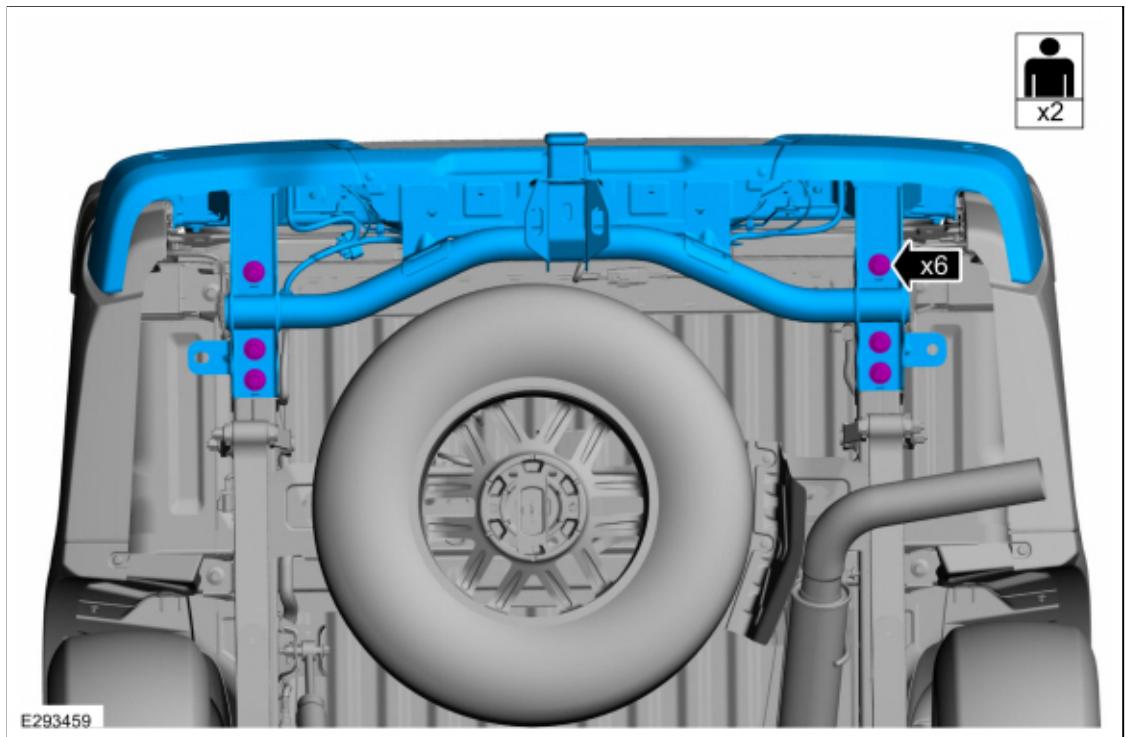


Installation

Vehicles with light duty package

1. With the help of an assistant.
1. Using the 20mm pins, align the rear bumper assembly to datum slots of frame.
2. Hand tighten the rear bumper assembly bolts.




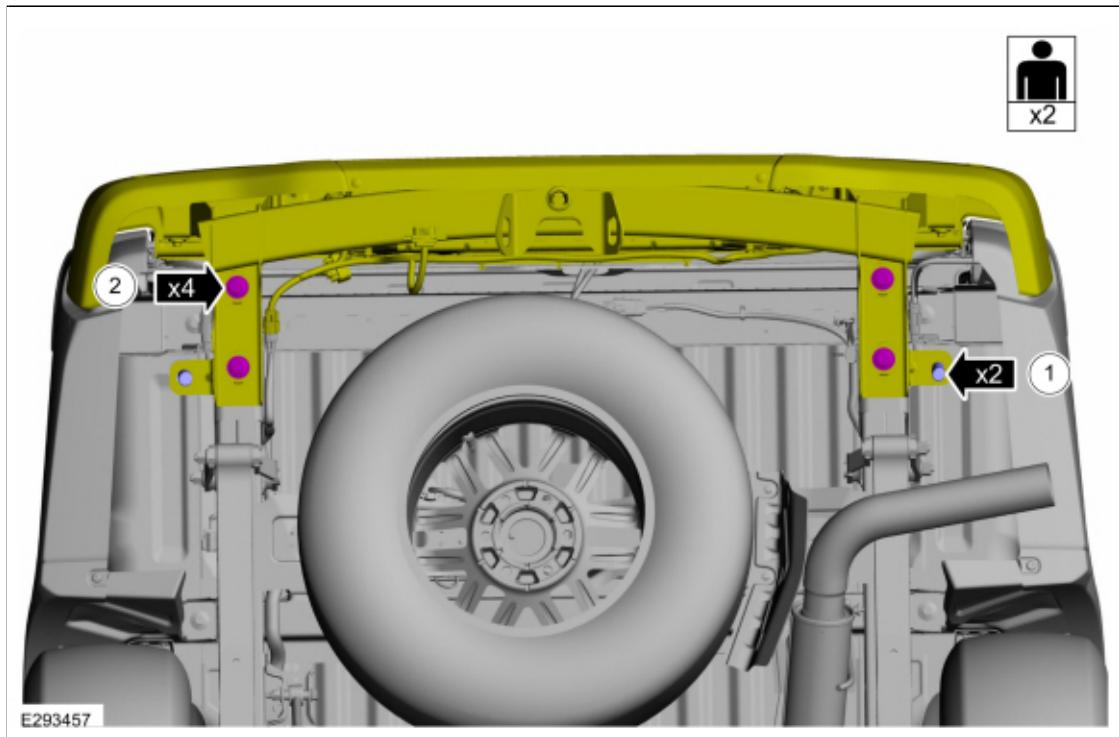


2. To install, reverse the removal procedure.

Vehicles with heavy duty package

 3. With the help of an assistant.
 1. Using the 20mm pins, align the rear bumper assembly to datum slots of frame.
 2. Hand tighten the rear bumper assembly bolts.



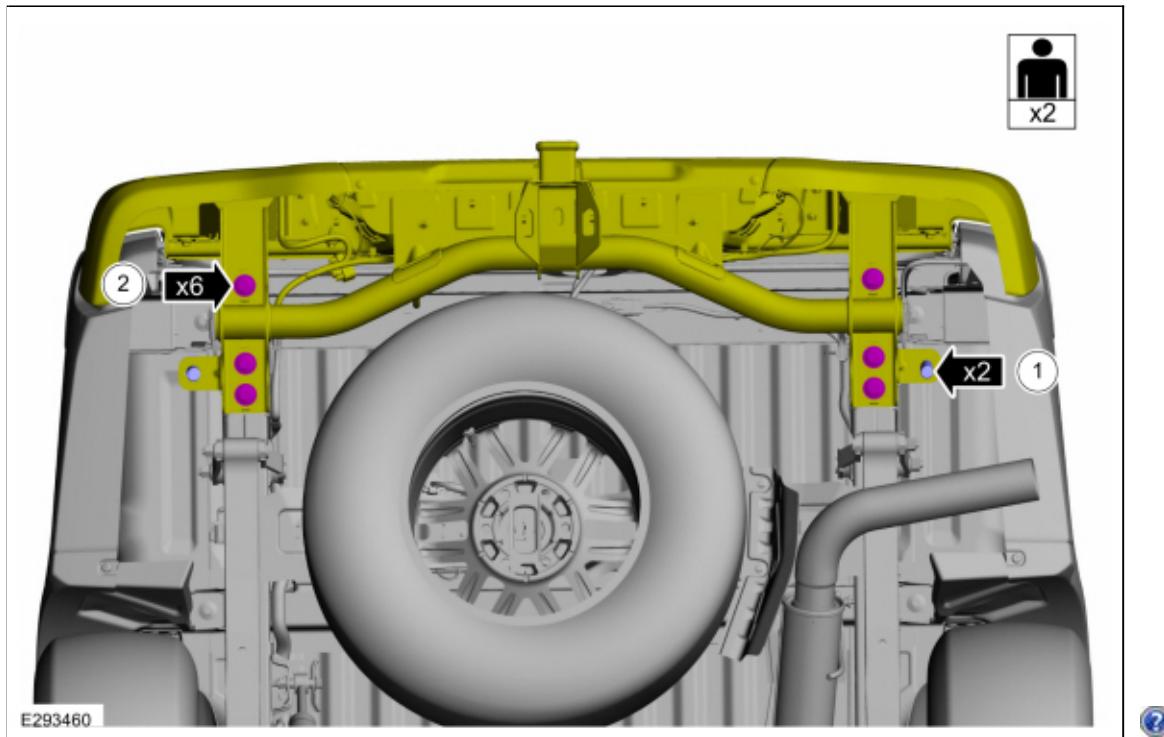

4. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

