


Cylinder Head Temperature 2 (CHT2) Sensor

Materials


Name	Specification
Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A

Removal

1. **NOTICE: Do not pull the engine appearance cover forward or sideways to remove. Failure to press straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.**
 1. Remove the engine appearance cover nut.
 2. Place your hand under the engine appearance cover at each grommet location and pull straight up to release each grommet from the studs.
 3. After all of the grommets have been released from the studs, remove the appearance cover from the engine.

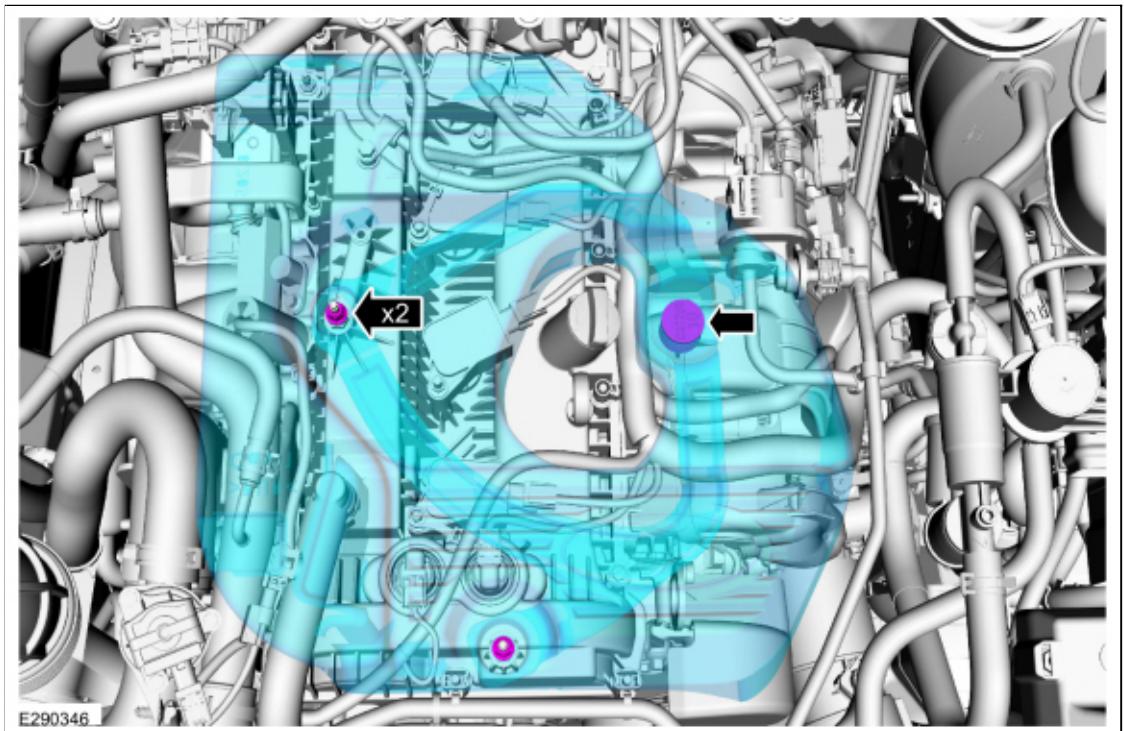


2.
 - Position aside the cover and disconnect the electrical connector and harness retainer. Remove the cylinder head temperature 2 (CHT2) sensor and heat shield.
Torque: 97 lb.in (11 Nm)

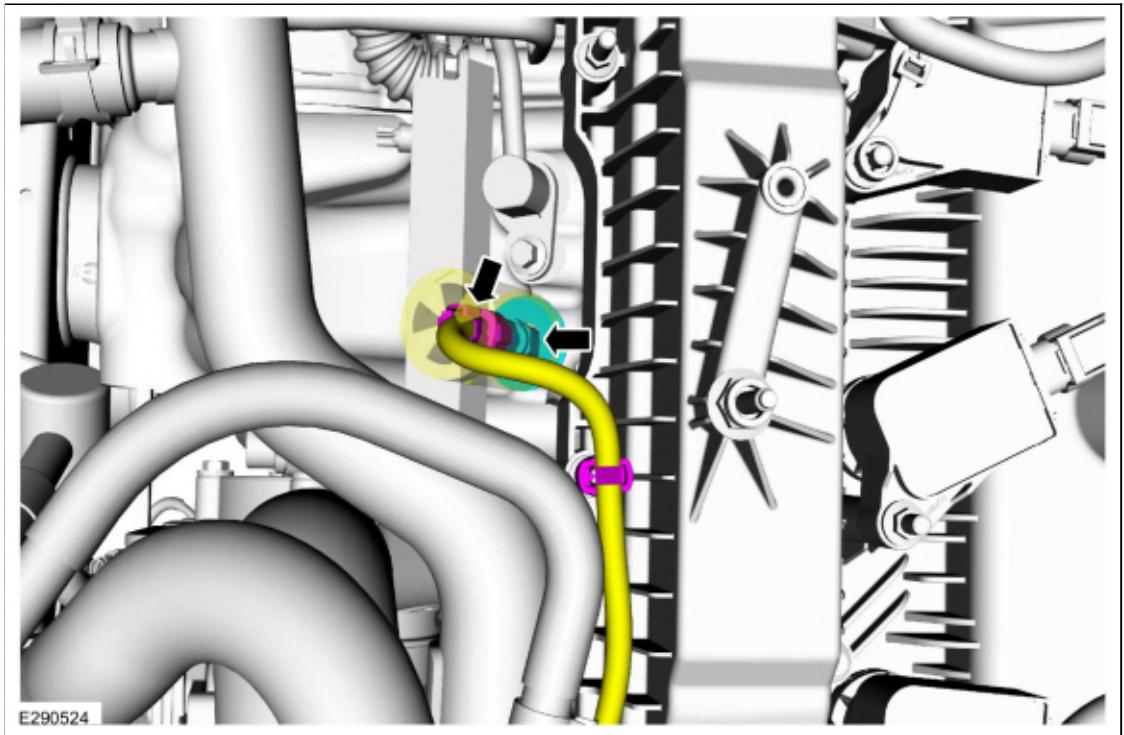

Installation

1. To install, reverse the removal procedure.
2.
 1. **NOTE:** *Lubricating the grommets with silicone grease will aid in the installation of the engine appearance cover, and any future removal and installation of the cover.*
Lubricate each grommet with silicone grease.
Material: Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound / XG-3-A (ESE-M1C171-A)
 2. Position the engine appearance cover onto engine with the grommets aligned with the studs.
 3. Press down on the engine appearance cover at each grommet location to attach the grommets onto the studs.
 4. Install the engine appearance cover nut.
Torque: 44 lb.in (5 Nm)
 5. If the engine appearance cover stud bolt is loosened or removed, it must be installed/tightened into the valve cover.
Torque: 62 lb.in (7 Nm)

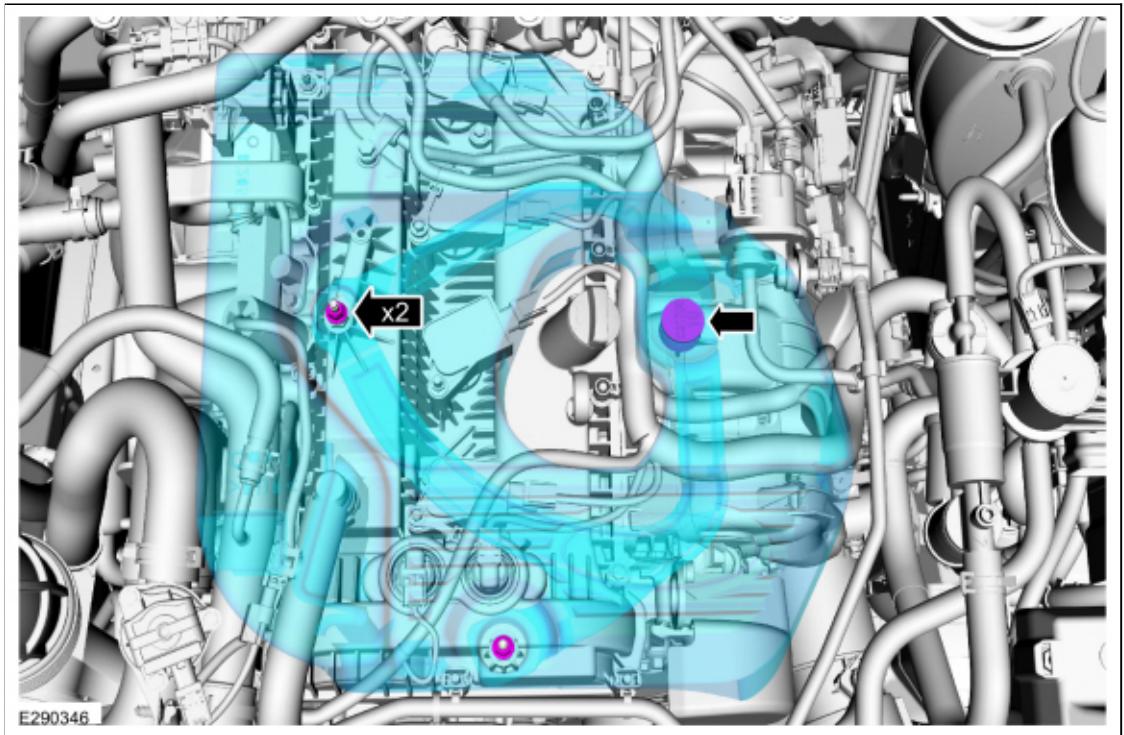

Copyright © 2019 Ford Motor Company