


**Evaporative Emission Canister Vent Solenoid**


Base Part Number: 9F945

**Removal****NOTE:** Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the EVAP canister electrical connector.

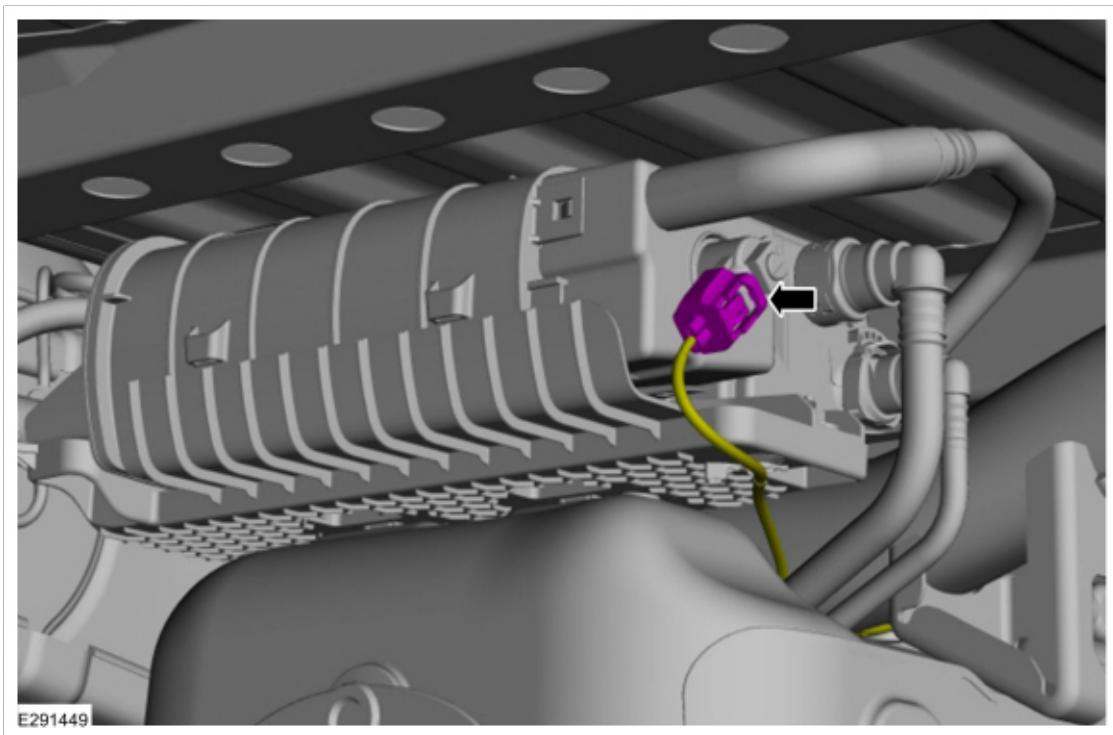

3. Rotate the EVAP canister solenoid clockwise and remove the EVAP canister solenoid.

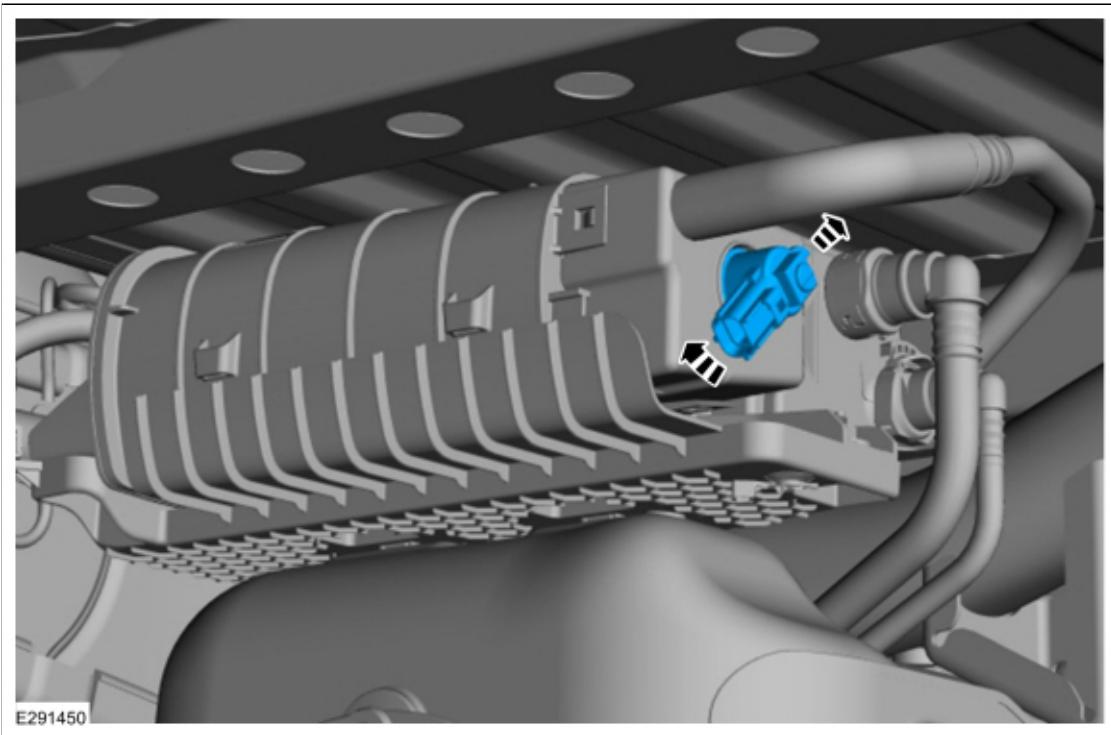

## Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

