

**Evaporative Emission Canister**

Base Part Number: 9E857

**Removal**

**WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


**WARNING:** Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

**WARNING:** Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

**NOTE:** Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2.
  - Disconnect the EVAP canister electrical connector.
  - Disconnect the vent hose.
  - Disconnect the EVAP canister quick connect couplings.  
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).



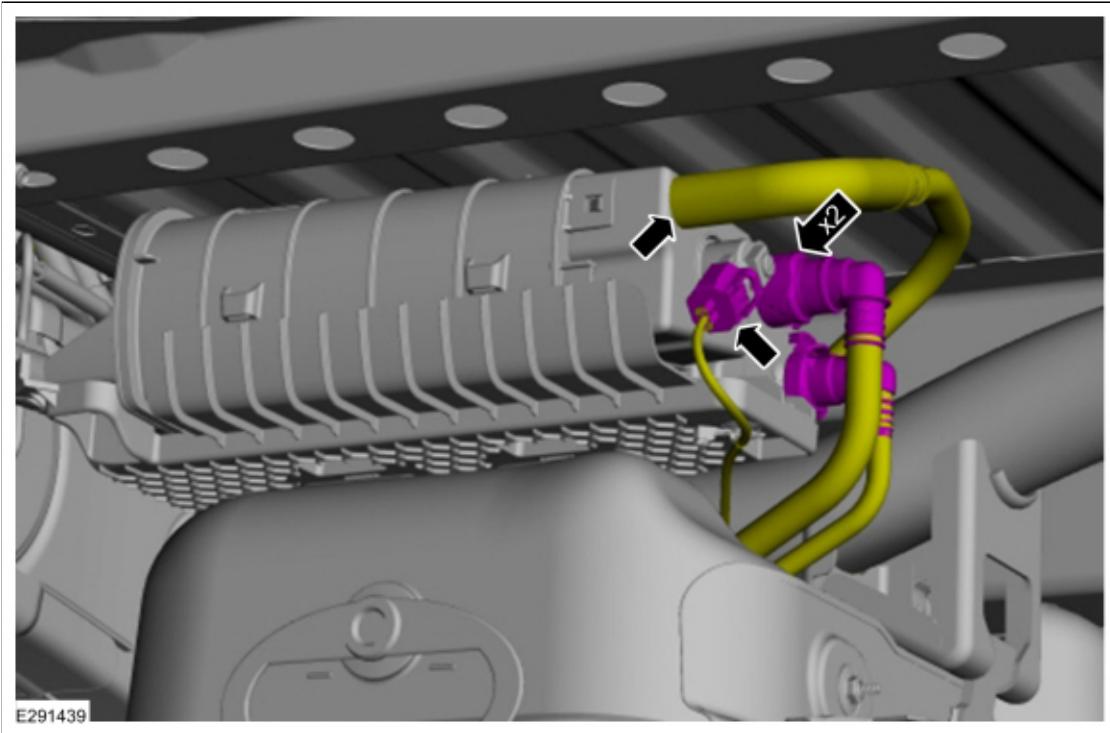

3.

1. Remove the fastener.  
*Torque: 133 lb.in (15 Nm)*
2. Remove the EVAP canister.

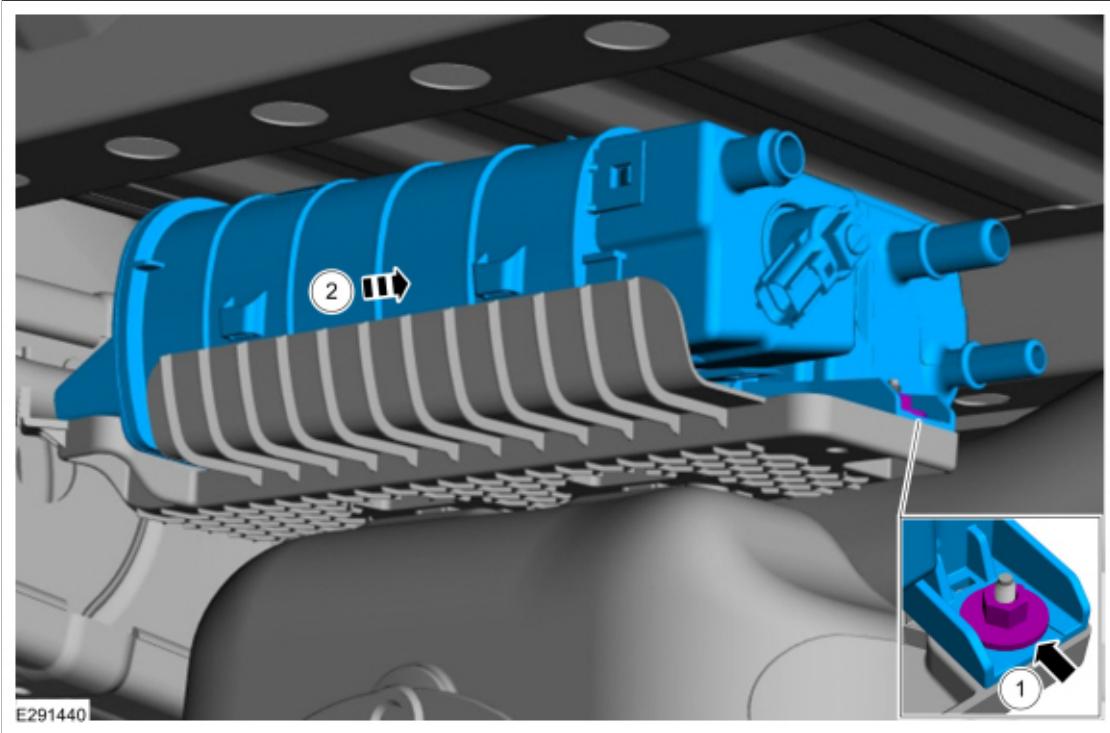

## Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

---