

Automotive Audio Bus (AAB) Cable**Removal****Instrument panel automotive audio bus (AAB) cable**

NOTE: The original equipment automotive audio bus (AAB) cable(s) are part of the wiring harness and cannot be removed. This procedure refers to replacement of the cable(s) only by overlaying the cable(s).



1. Remove the FCDIM or FDIM.

Refer to: [Front Control/Display Interface Module \(FCDIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Removal and Installation).

Refer to: [Front Display Interface Module \(FDIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Removal and Installation).

2. Remove the screws, disconnect the electrical connectors and reove the ACM.

Torque: 27 lb.in (3 Nm)

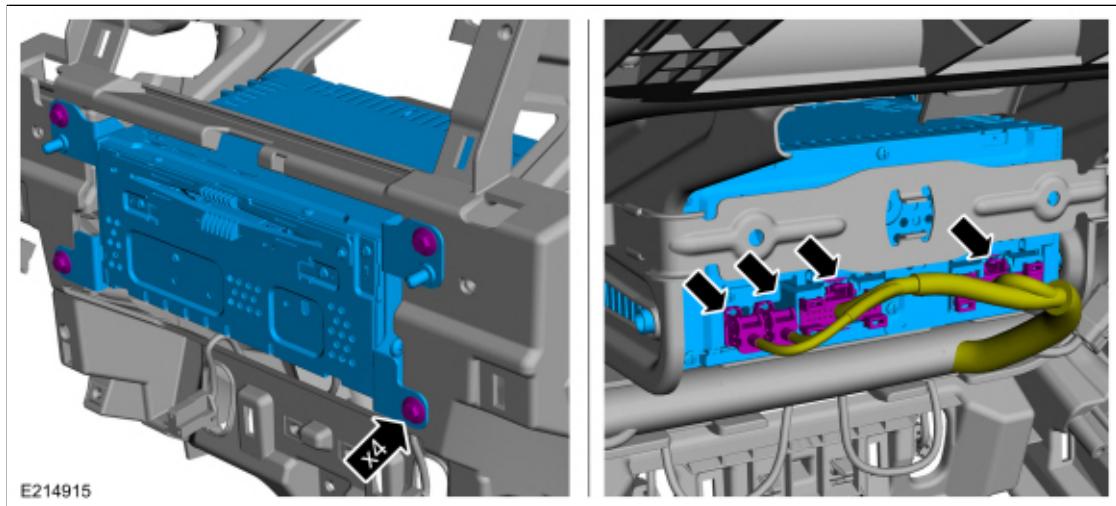

3. Remove the instrument panel upper section.

Refer to: [Instrument Panel Upper Section](#) (501-12 Instrument Panel and Console, Removal and Installation).



4. Remove the RH cowl side trim panel.

Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).



5. Remove the glove compartment.

Refer to: [Glove Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).

6. Disconnect the electrical connector.

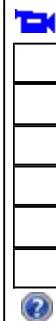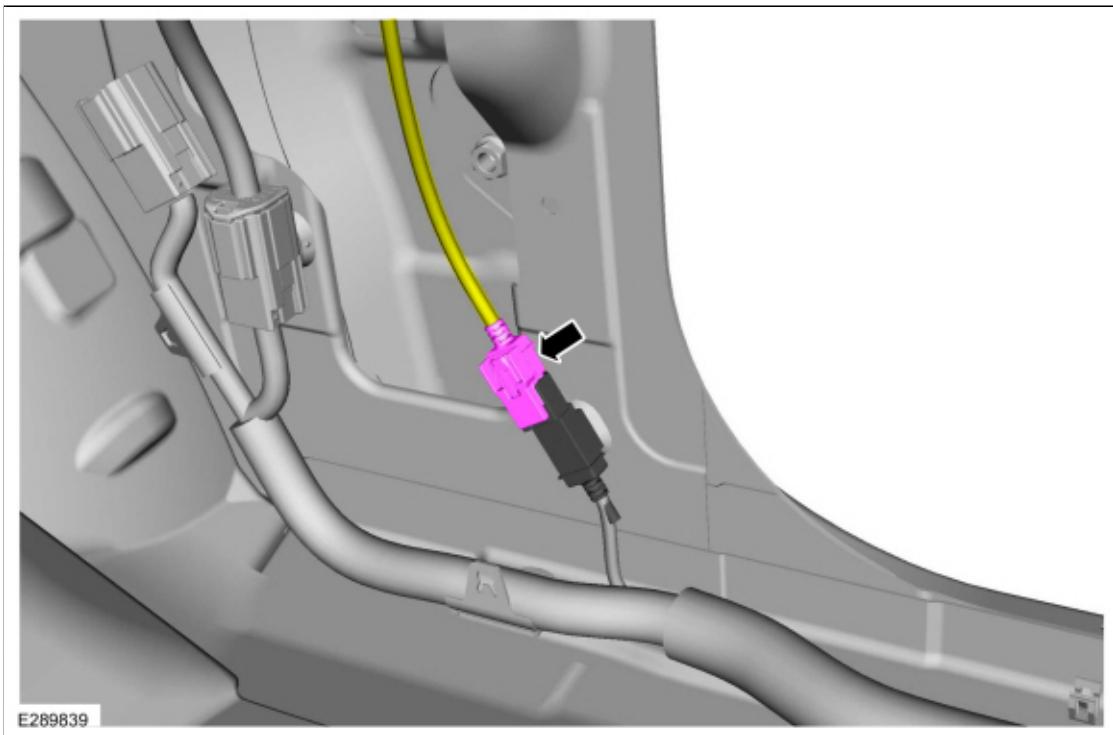

7. Trim the connectors off where the wires enter the wiring harness.

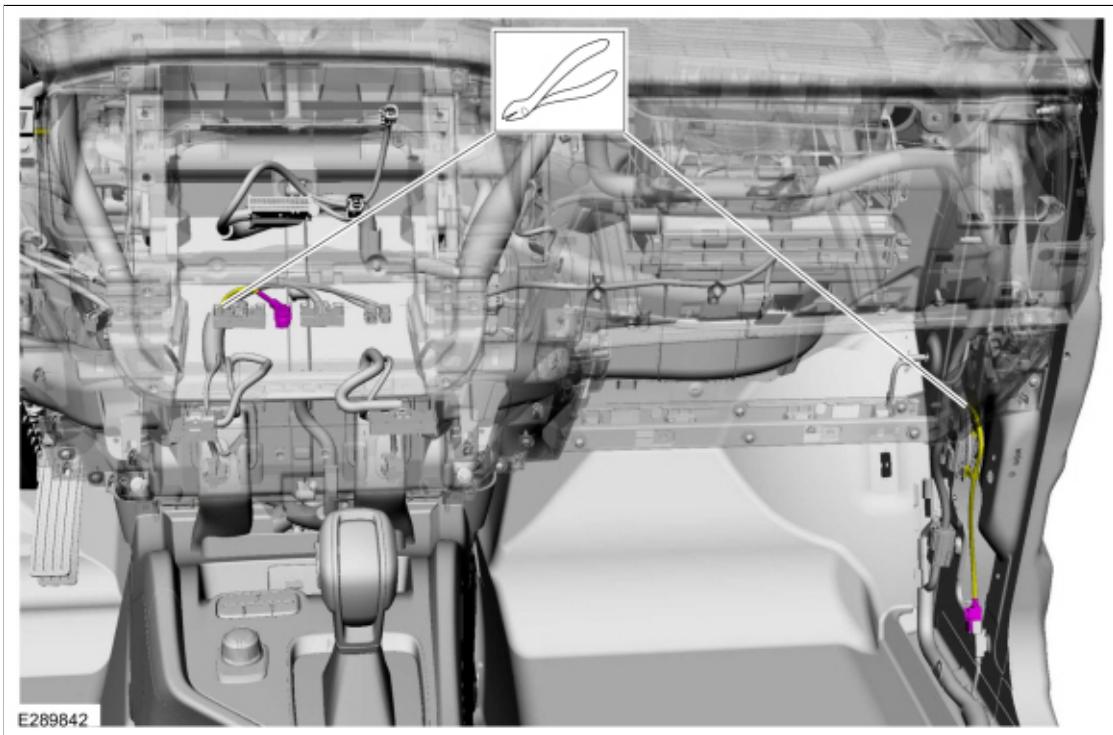

Rear automotive audio bus (AAB) cable

8. Remove the RH cowl side trim panel and the RH lower B-pillar trim panel.
Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [B-Pillar Trim Panel - Crew Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


9. Remove the rear seat.

Refer to: [Rear Seat - Crew Cab](#) (501-10B Rear Seats, Removal and Installation).


10. Remove the LH lower C-pillar trim panel.


Refer to: [C-Pillar Trim Panel - Crew Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

11. Remove the under seat storage compartment lids.

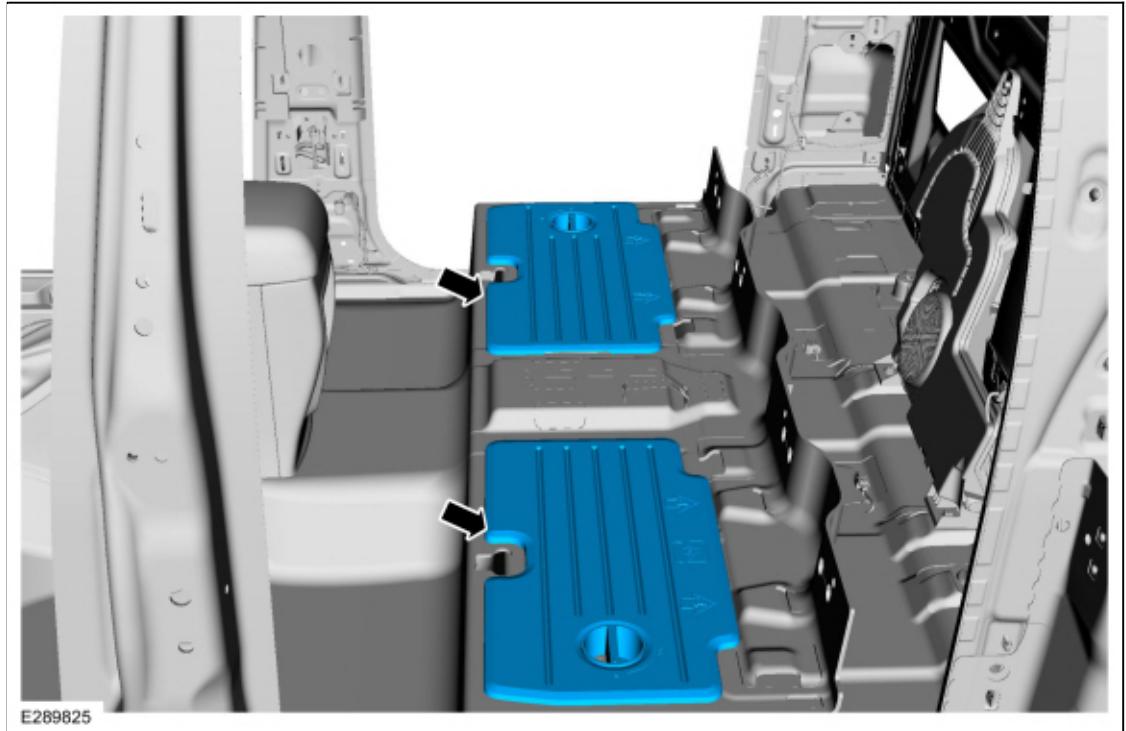


12. Remove the pin-type retainers and both under seat storage compartments.




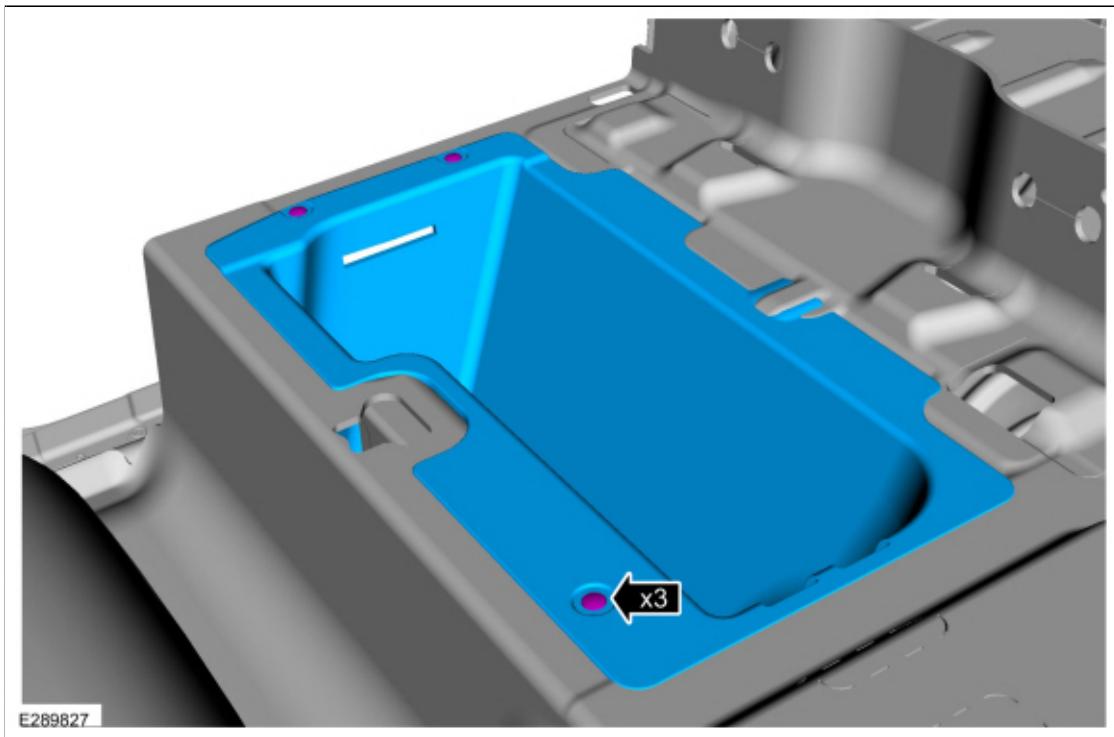

13. Disconnect and trim the electrical connector from the main body harness.

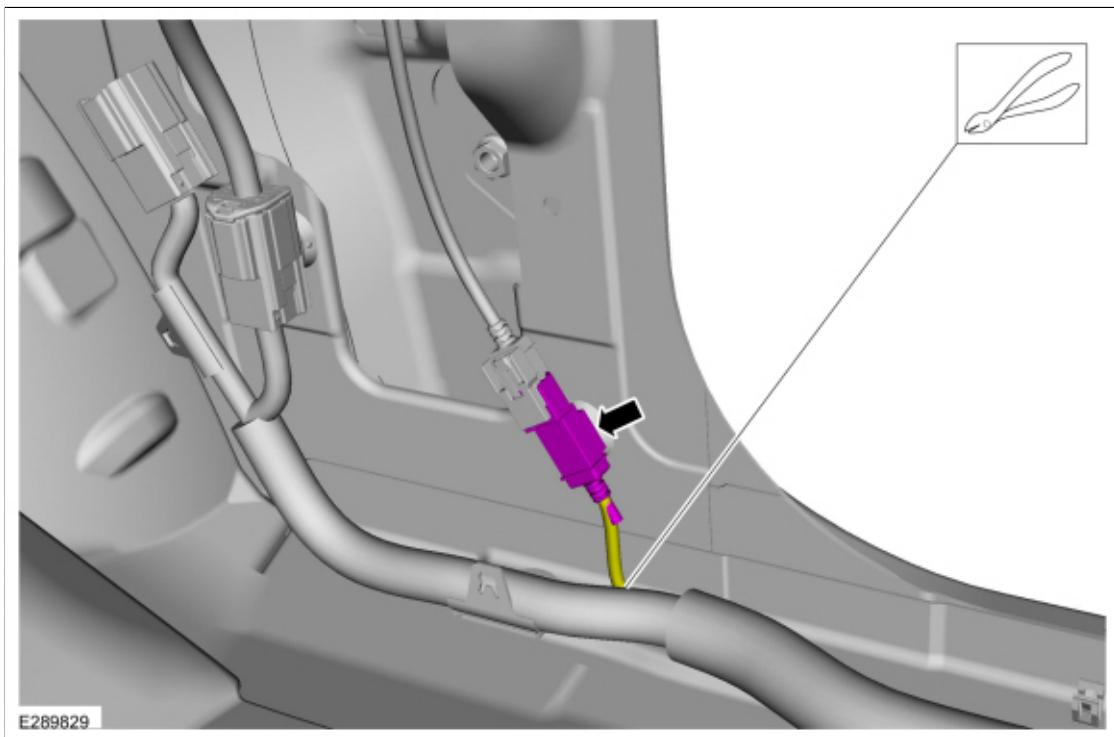

14. Disconnect and trim the electrical connector from the main body harness.

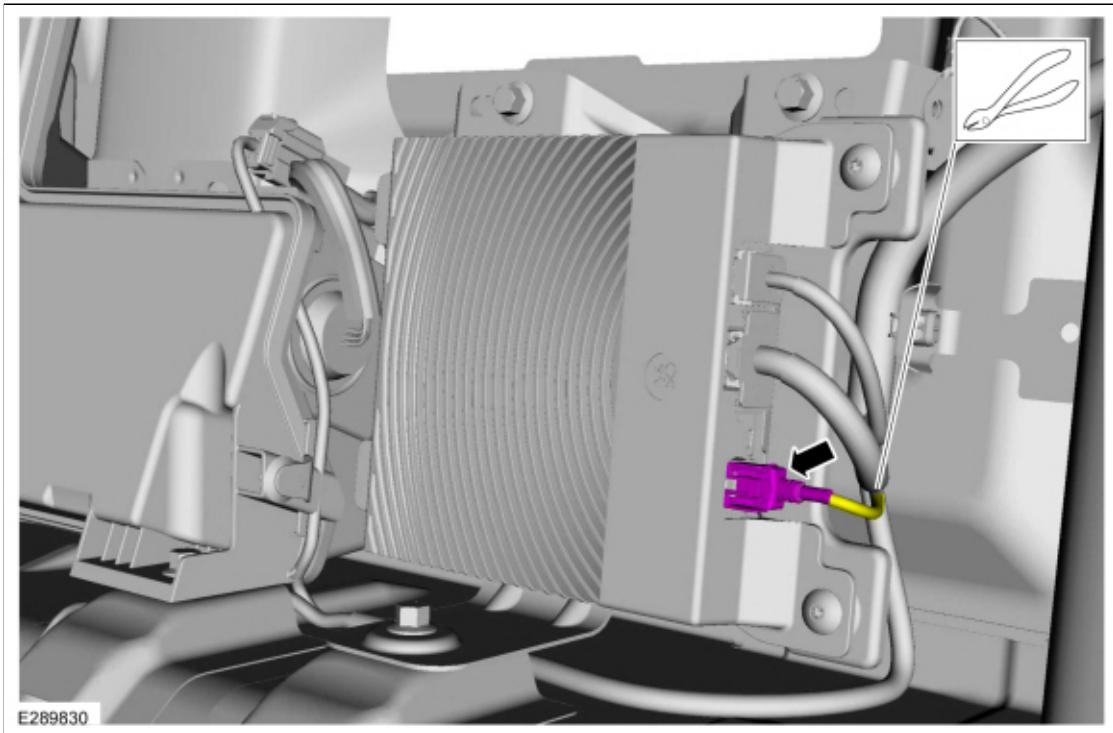


Installation

Instrument panel automotive audio bus (AAB) cable

NOTE: The original equipment automotive audio bus (AAB) cable(s) are part of the wiring harness and cannot be removed. This procedure refers to replacement of the cable(s) only by overlaying the cable(s).


1. Overlay using the routing shown and secure the new automotive audio bus (AAB) cable to the instrument panel wiring harness, as necessary to prevent NVH concerns.



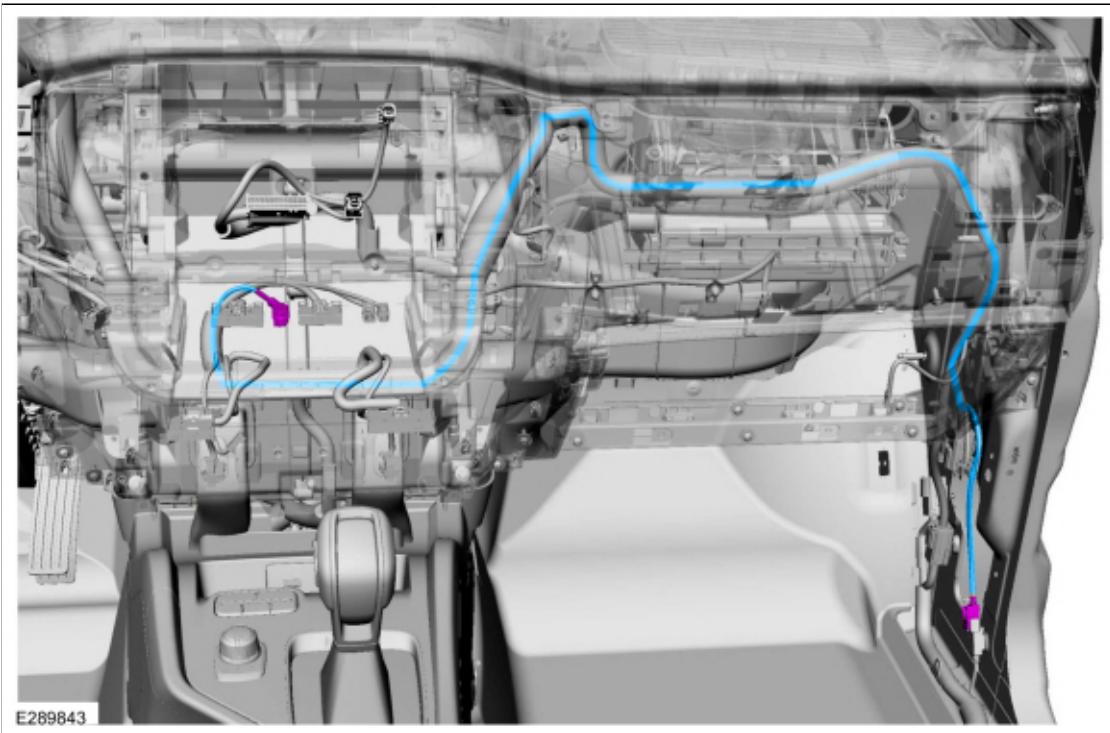

Rear automotive audio bus (AAB) cable

2. Overlay using the routing shown and secure the new automotive audio bus (AAB) cable to the body wiring harness, as necessary to prevent NVH concerns.

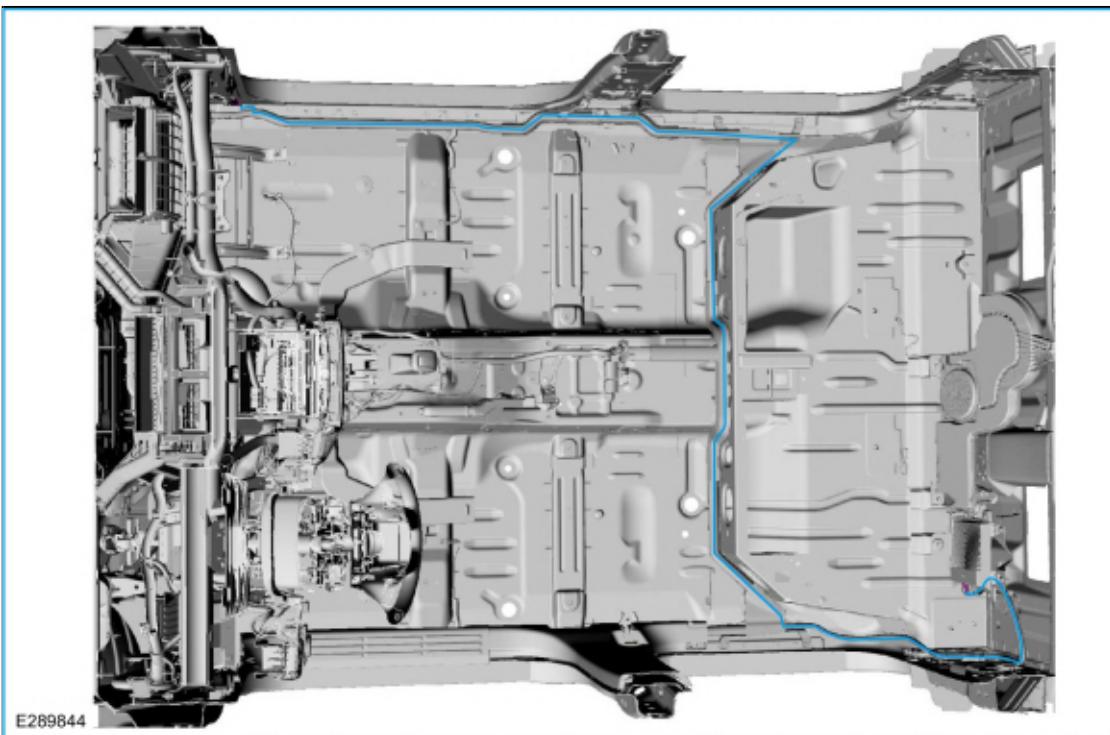

All vehicles

3. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
