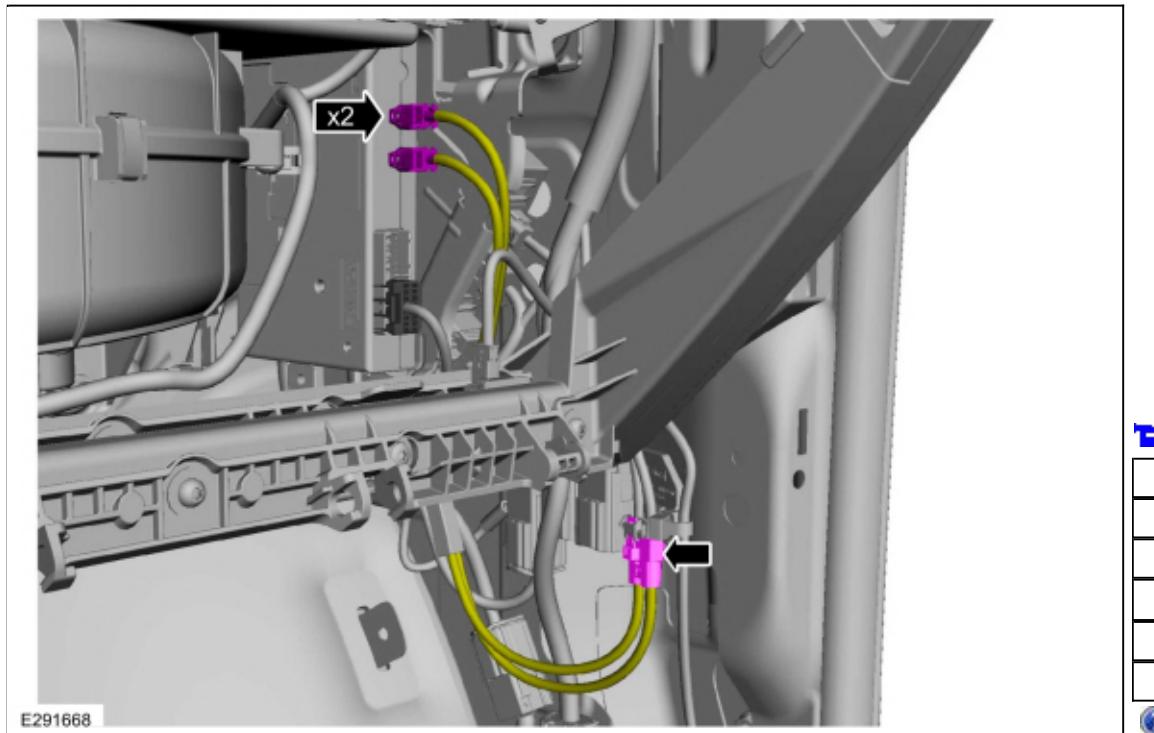


Cellular Phone Antenna Cable**Removal****Lower cellular phone antenna cable**


1. Remove the RH cowl side trim panel.
Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the glove compartment assembly.
Refer to: [Glove Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).
3. Disconnect the electrical connectors and remove the lower cellular phone antenna cables.

**Instrument panel telematics control unit (TCU) antenna cable**

NOTE: The original equipment TCU antenna cable is part of the wiring harness and cannot be removed. This procedure refers to replacement of the cable only by overlaying the cable.

4. Remove the RH cowl side trim panel.
Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
5. Remove the glove compartment assembly.
Refer to: [Glove Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).

6. Remove the instrument panel upper section.
Refer to: [Instrument Panel Upper Section](#) (501-12 Instrument Panel and Console, Removal and Installation).
7. Remove the instrument panel upper section.
Refer to: [Instrument Panel Upper Section](#) (501-12 Instrument Panel and Console, Removal and Installation).
8. Remove the cellular phone antenna coaxial cable from the connector.
 1. Release the tabs.
 2. Remove the locking tab.
 3. Release the tab and remove cellular phone antenna coaxial cable.

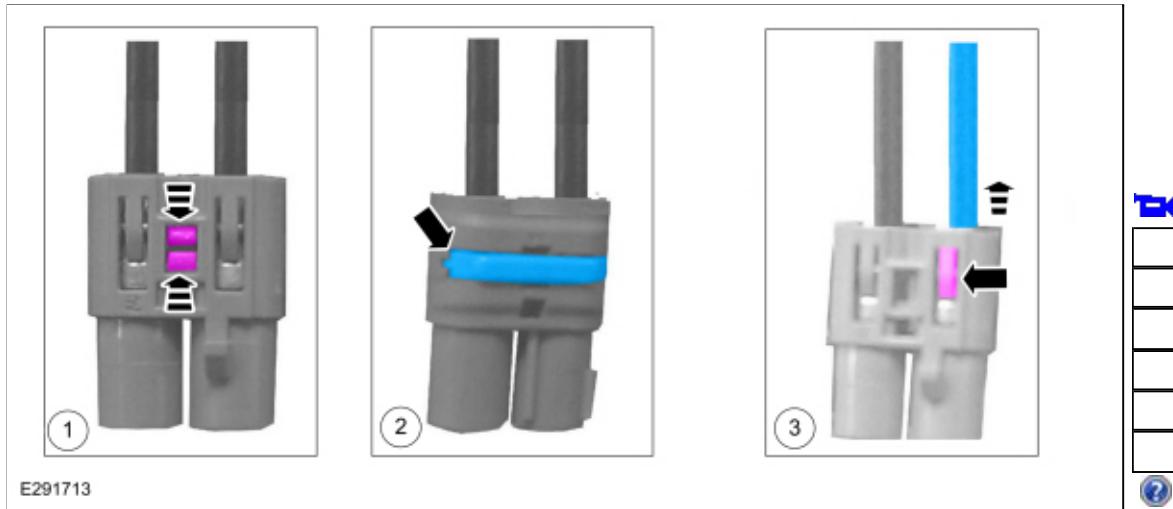


Installation

Lower telematics control unit (TCU) cable


1. To install, reverse the removal procedure.

Instrument panel telematics control unit (TCU) antenna cable

2. Cut the ends off of the TCU antenna coaxial cable.

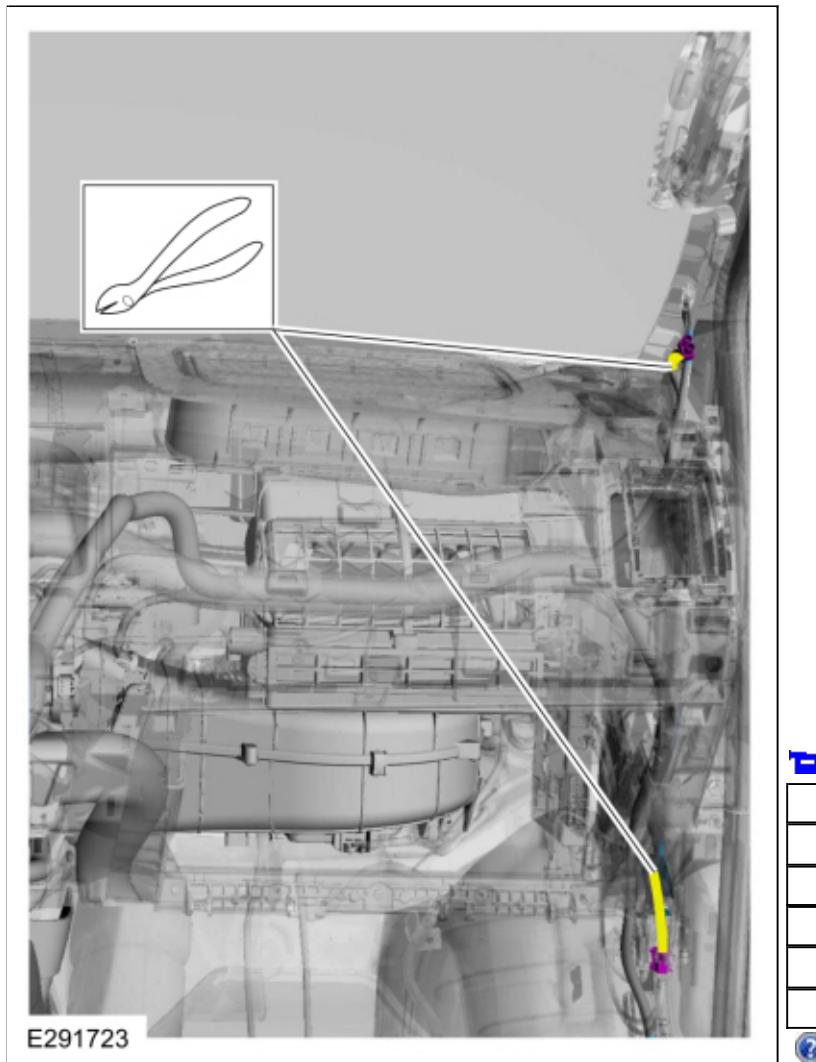

3. Overlay using the routing shown and secure the new cellular antenna cable to the instrument panel wiring harness, as necessary to prevent NVH concerns.

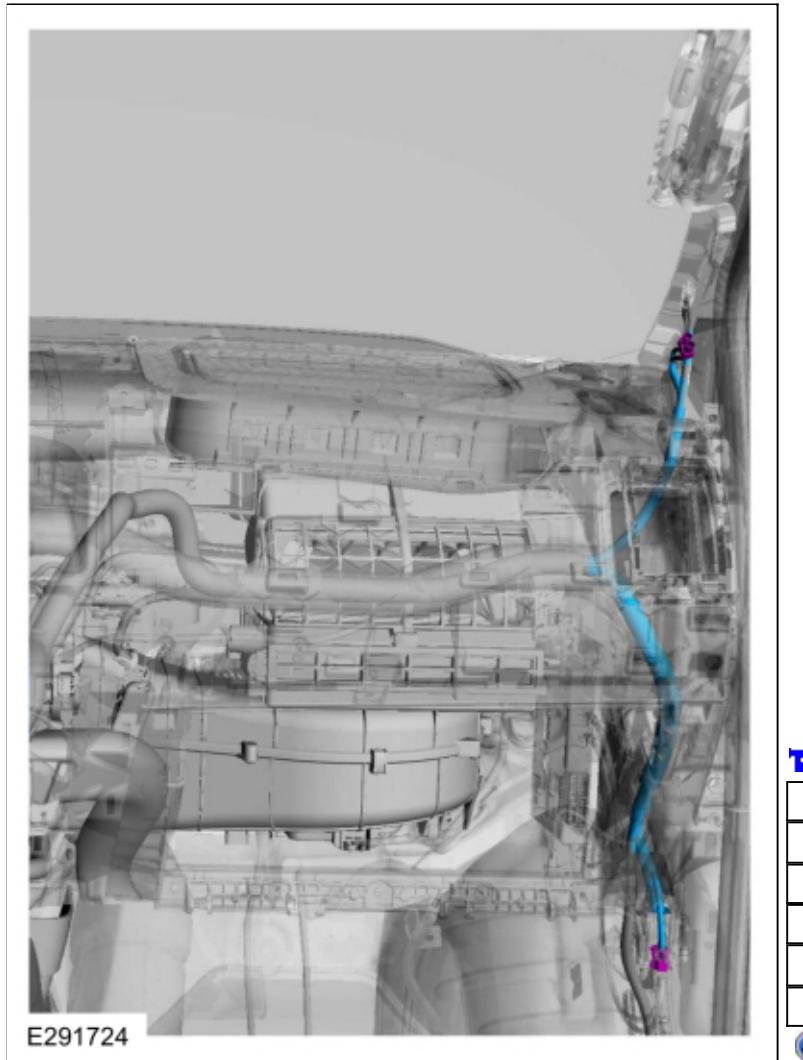

4. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

