


High Mounted Stoplamp


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Lower the rear of the headliner.
Refer to: [Headliner - Lowering - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Headliner - Lowering - Crew Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the electrical connector.

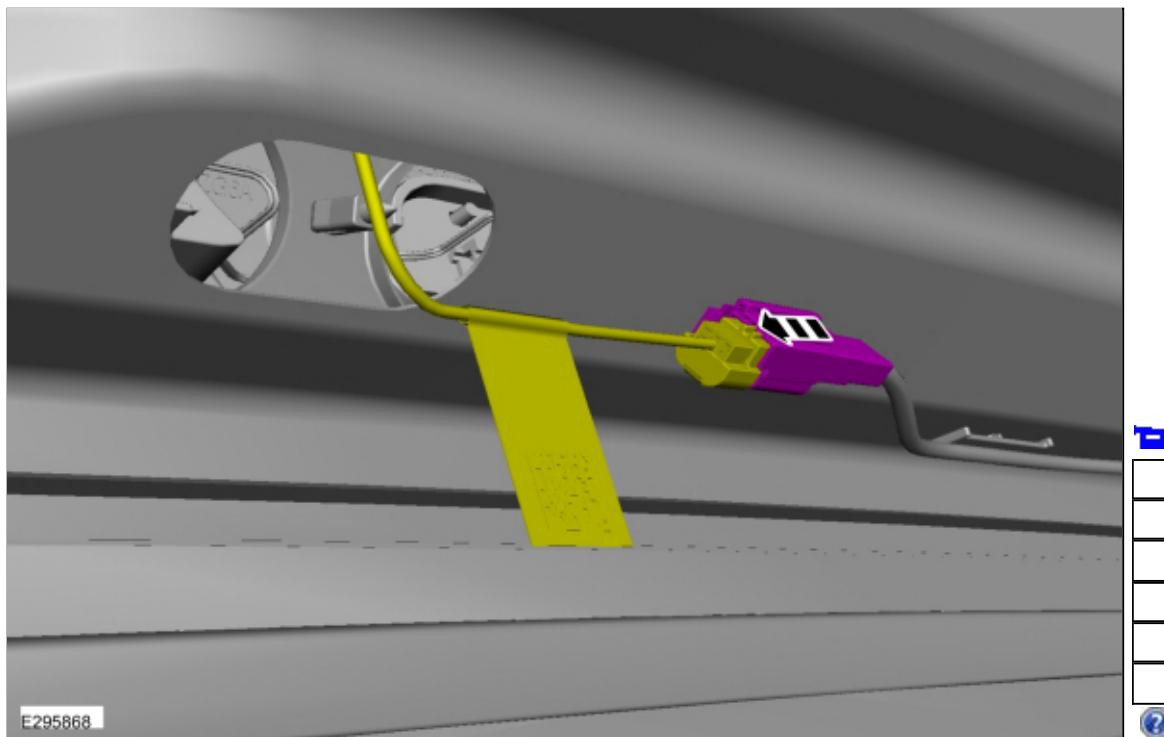


3. Remove the screws and the high mounted stop lamp.
Torque: 9 lb.in (1 Nm)

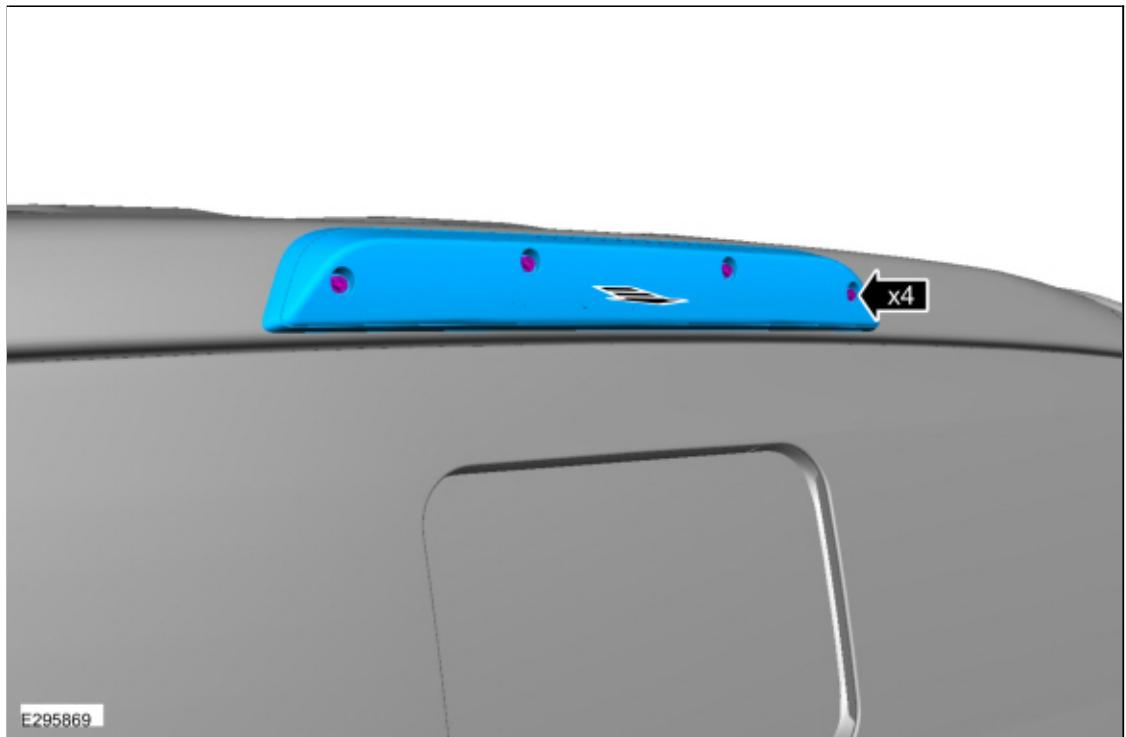

4.

1. Remove the bulb socket holder from the lense.
2. Remove the bulb.

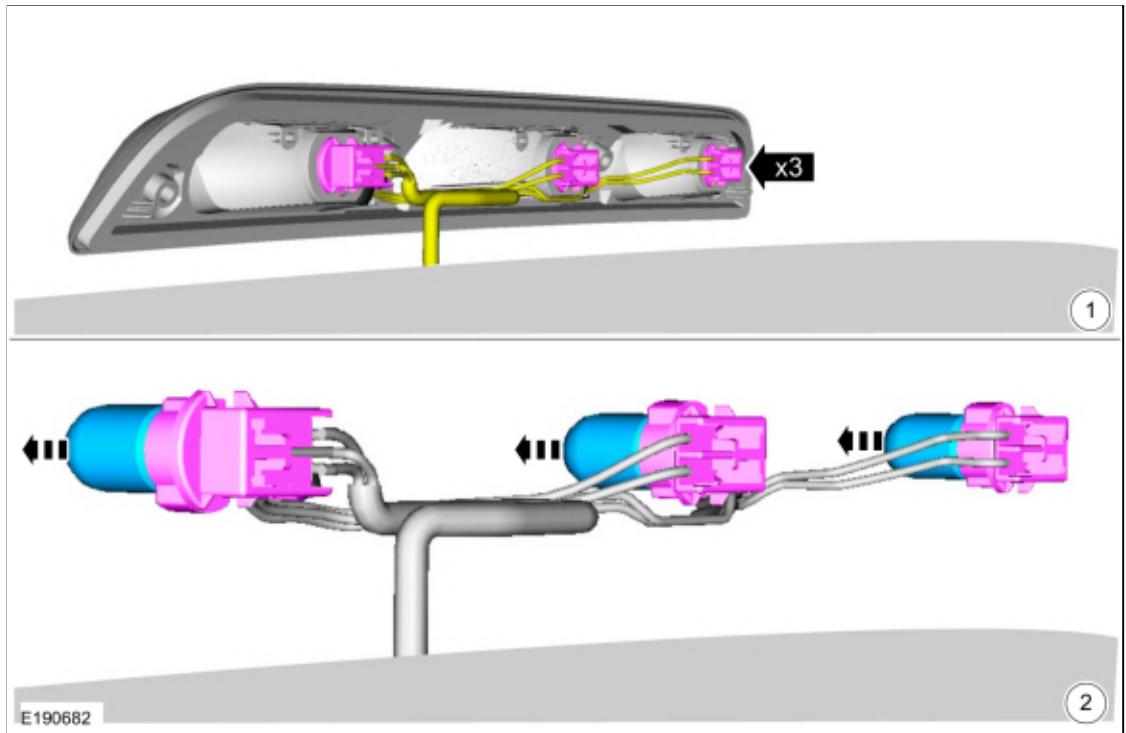

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
