


Anti-Theft Alarm Horn


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. On LH side.
Remove the fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
2. Disconnect the anti-theft alarm horn electrical connector and release the wiring harness retainer from the anti-theft alarm horn bracket.

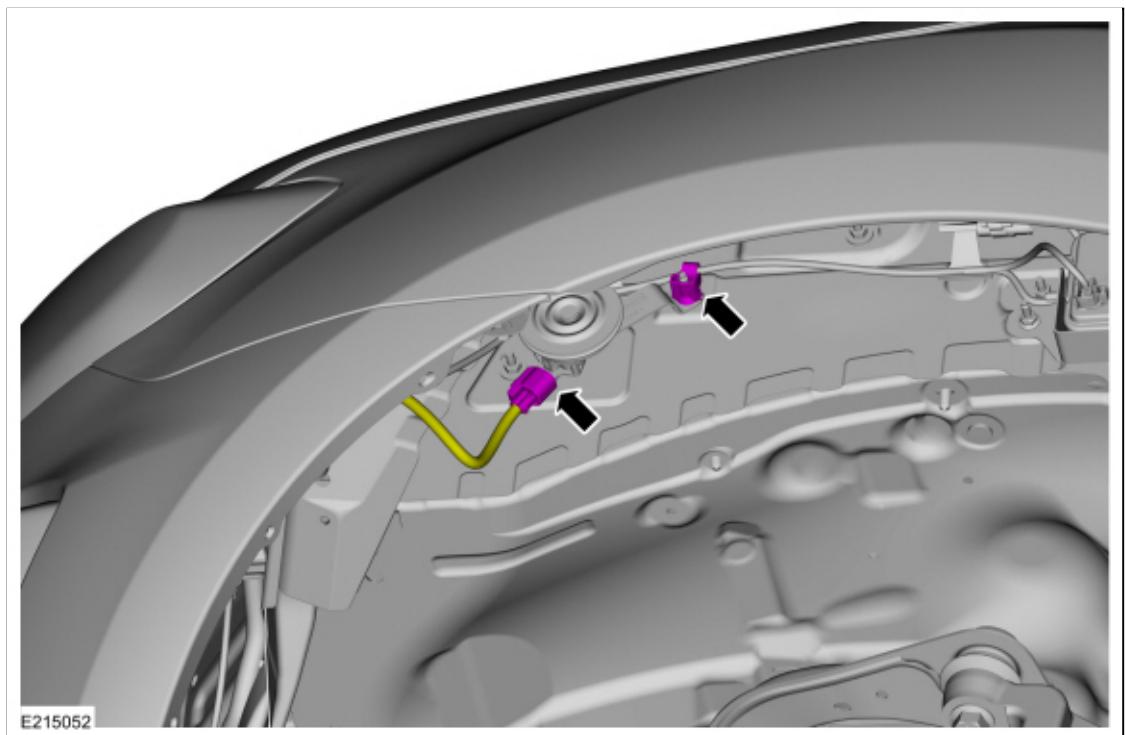

3. Remove the nut and the ant-theft alarm horn.
Torque: 106 lb.in (12 Nm)

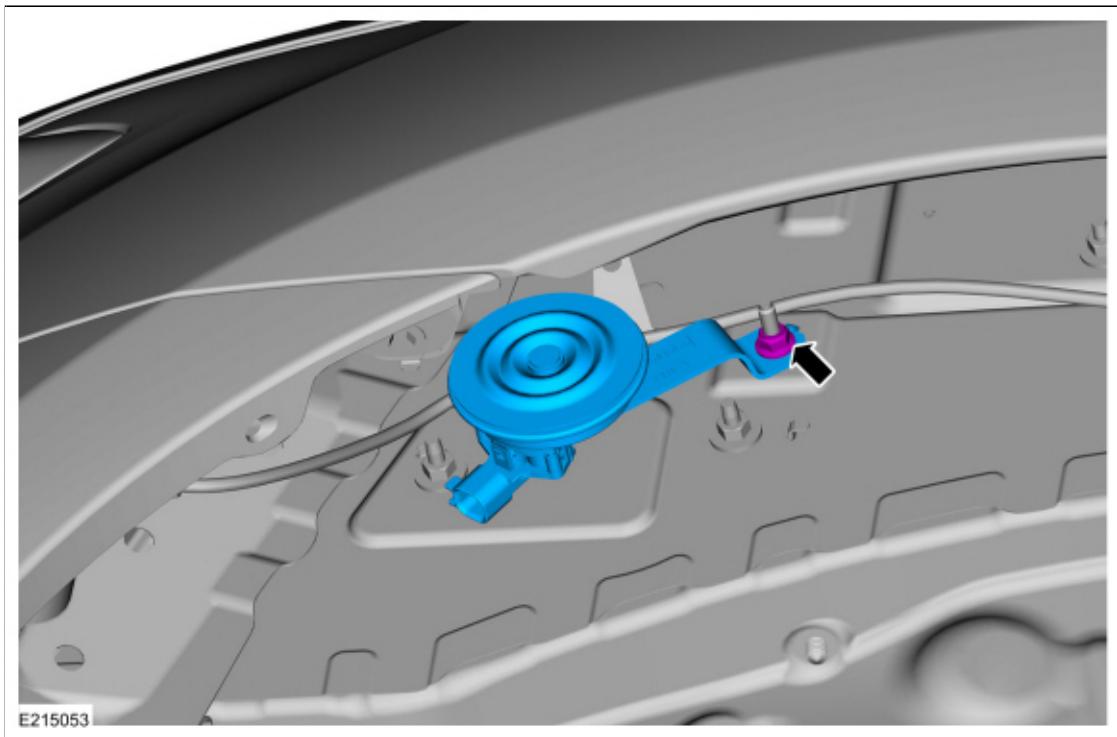

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

