



Passive Anti-Theft System (PATS) Transceiver


Removal

1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the PATS transceiver electrical connector.

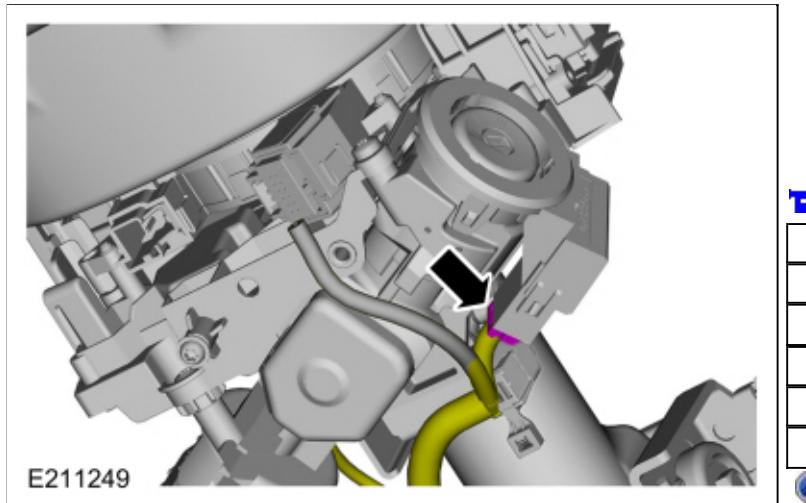


3. Remove the PATS transceiver.
 1. Release the PATS transceiver tabs.
 2. Remove the PATS transceiver.



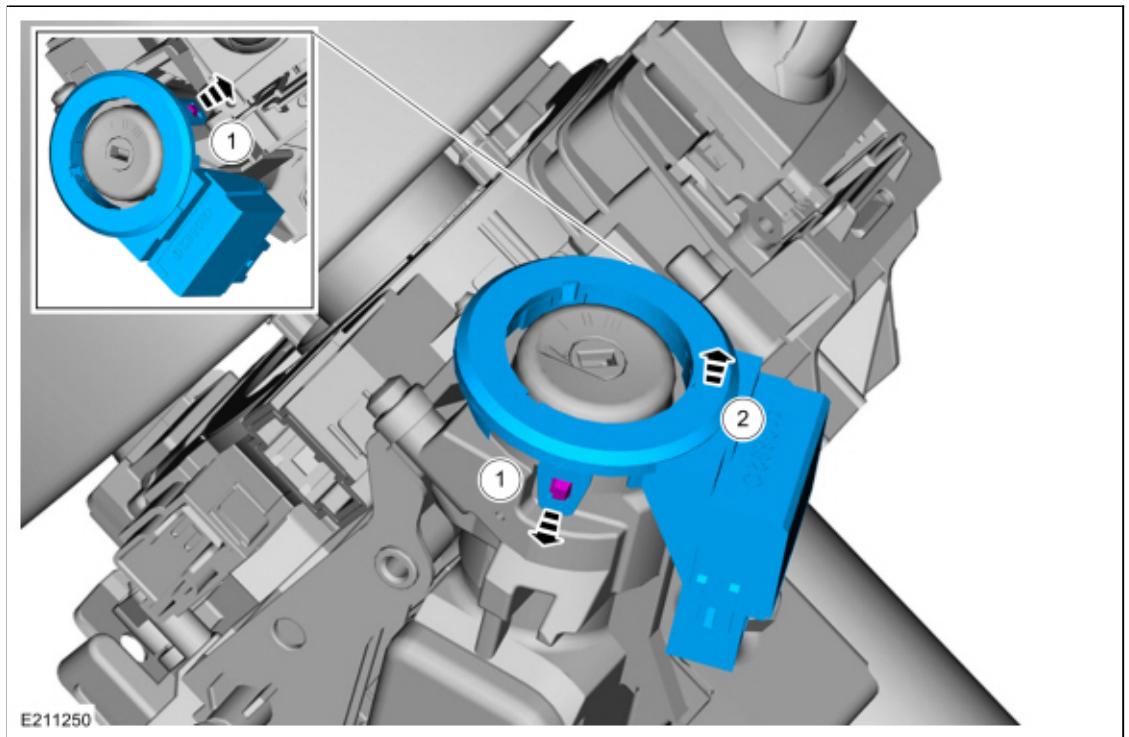

Installation

1. Visually inspect to verify the ring is installed on the PATS transceiver.

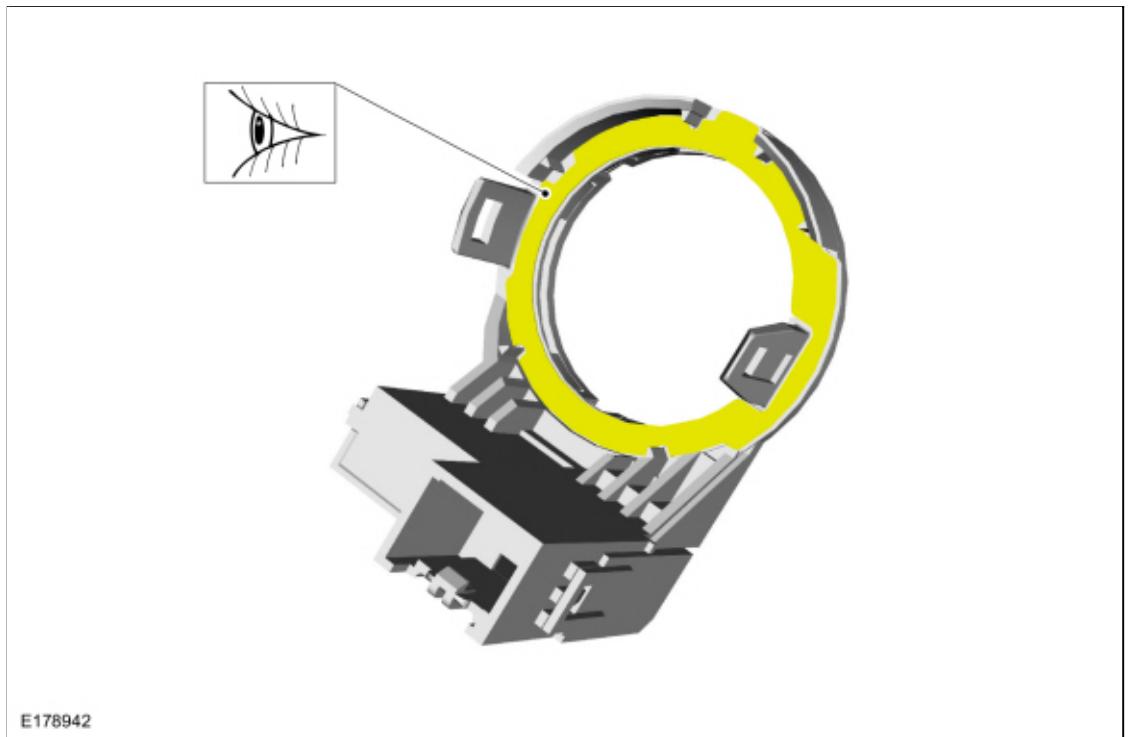

2. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
