

### Front Door - Crew Cab/Regular Cab

Base Part Number: 20124

#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


**NOTE:** LH side shown, RH side similar.

**NOTE:** Crew Cab shown, Regular Cab similar.


1. Open the door.



2. Remove the check arm bolt.  
*Torque: 18 lb.ft (25 Nm)*

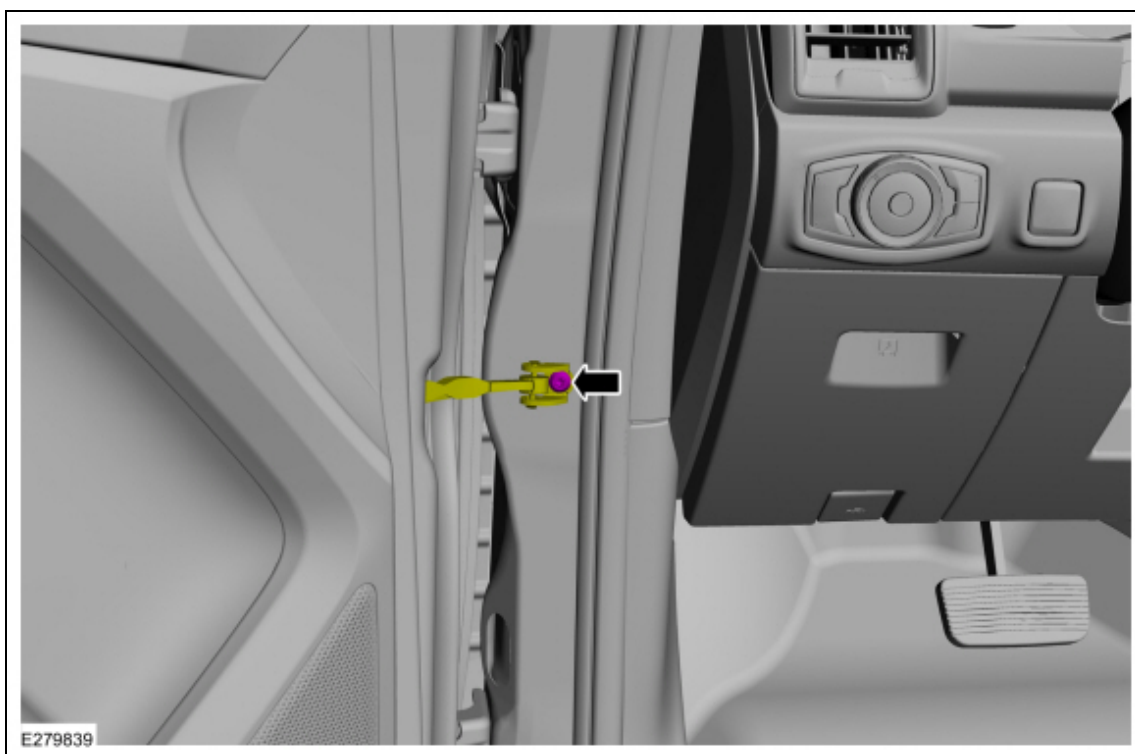


3. Remove the cowl side trim panel.  
Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
4.
  - Disconnect the electrical connectors.
  - Route the wiring harness through the body.

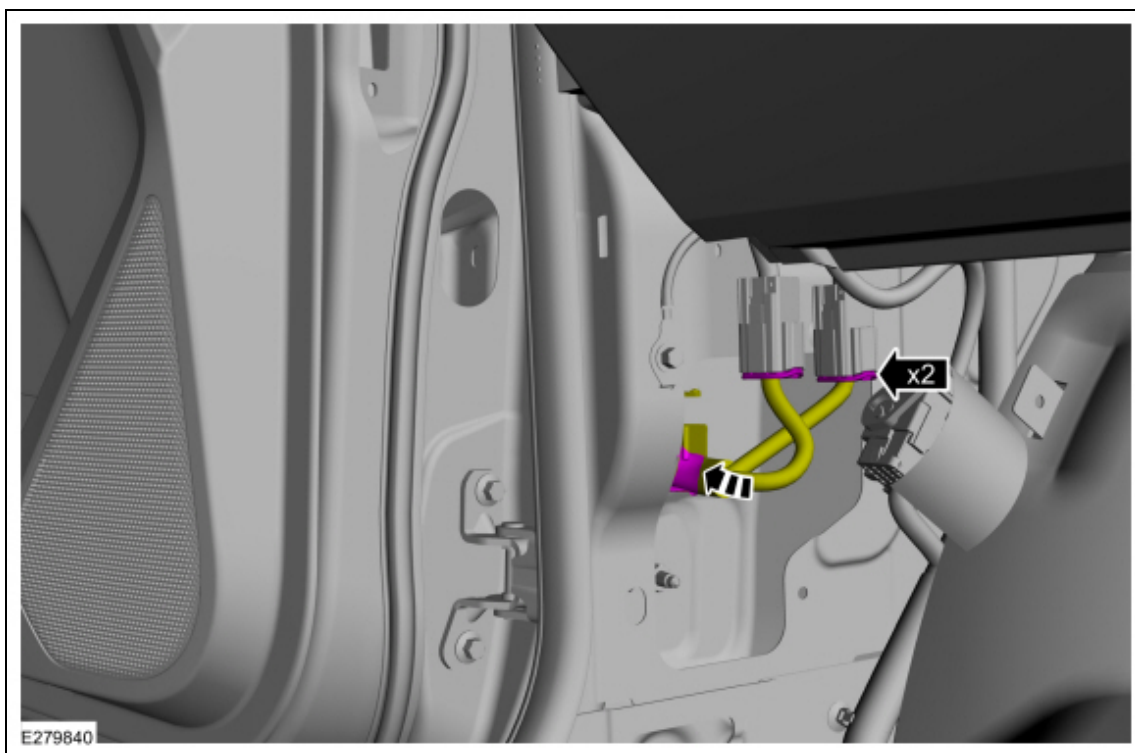

5. **NOTE:** This step requires the aid of another technician.




- Remove the door hinge bolts.  
*Torque: 18 lb.ft (25 Nm)*
- Remove the front door.

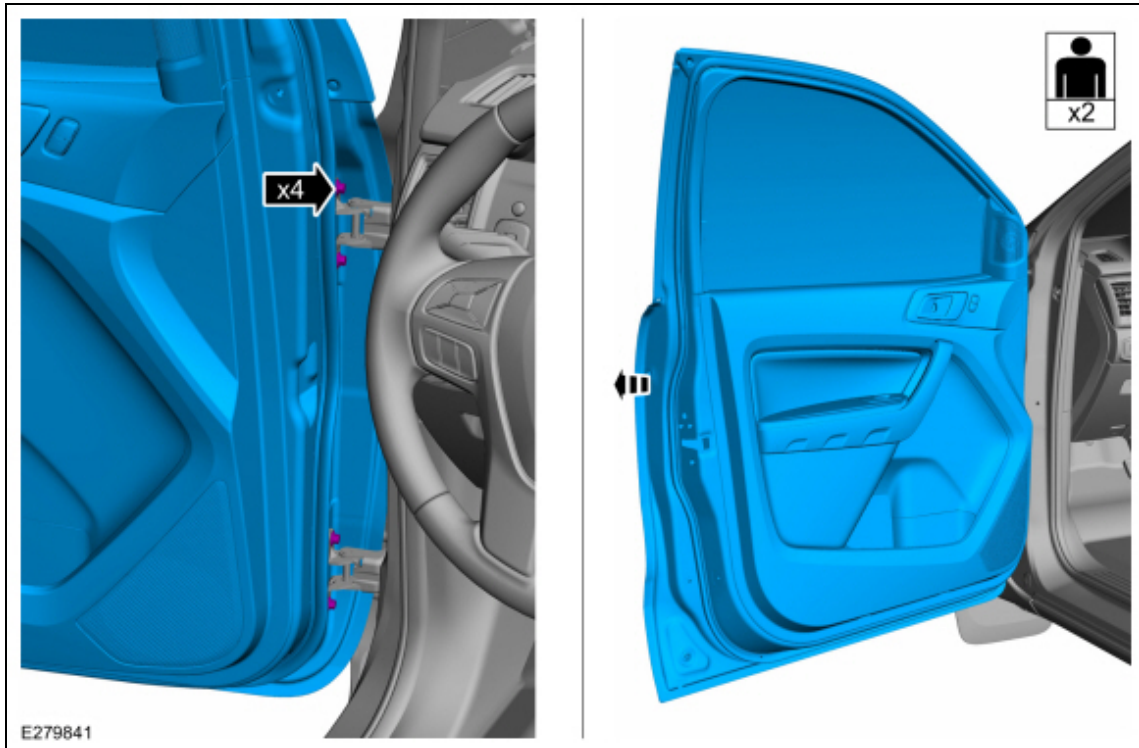

## Installation

1. To install, reverse the removal procedure.
2. Check the body-to-front door dimensions. Align the door as necessary.  
Refer to: [Front Door Alignment - Crew Cab/Regular Cab](#) (501-03 Body Closures, General Procedures).

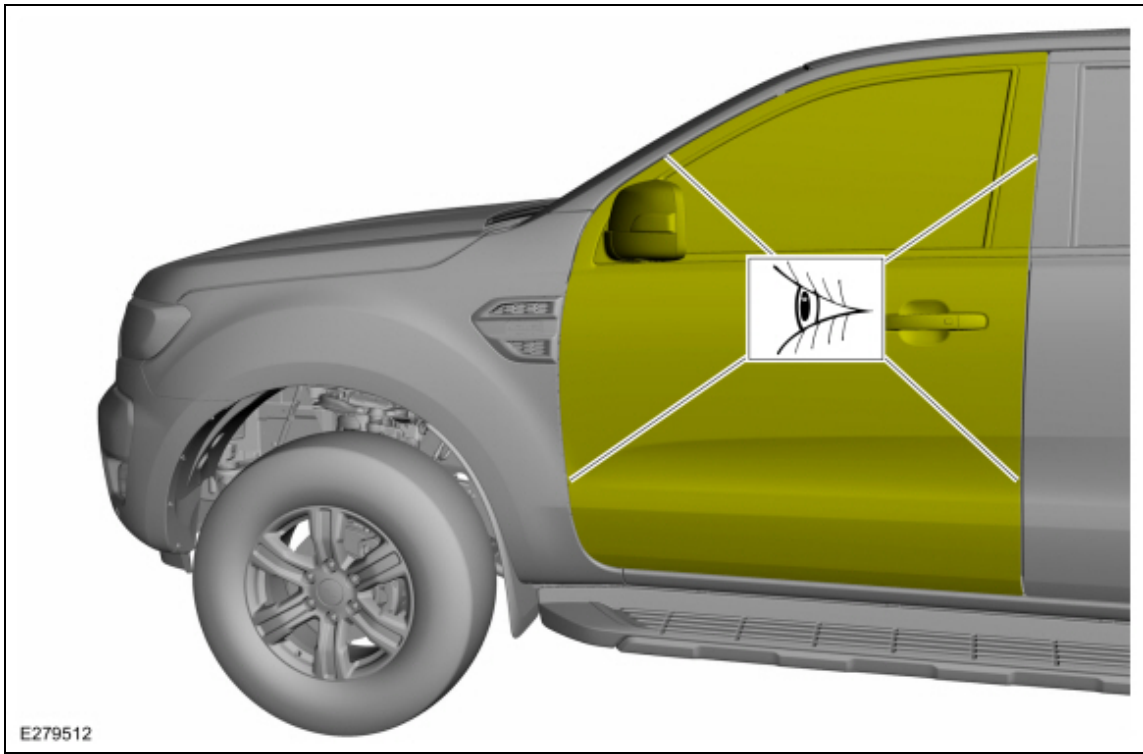

Copyright © 2019 Ford Motor Company