


Fastener Tightening Specifications


Application	Specification	
	Metric	English
Front Seat Back Frame Bolt	50 N·m	37 lb ft

Driver Seat Schematics

Power Seats

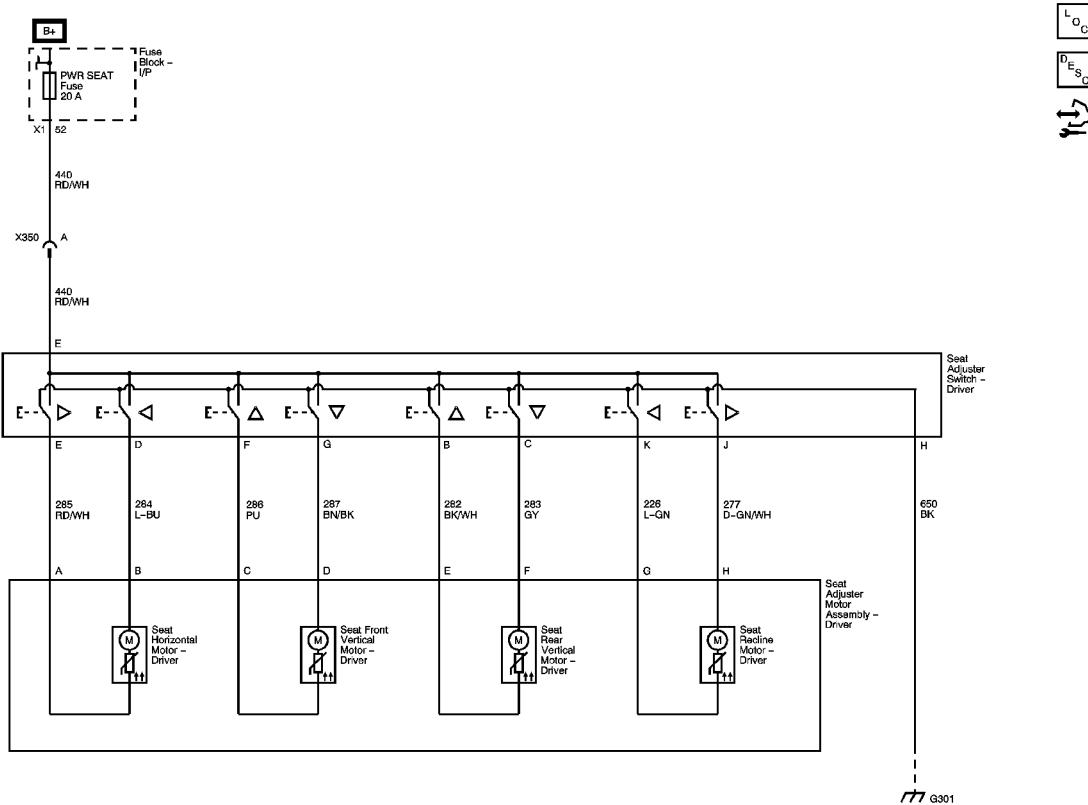


Driver Seat Cushion Frame Replacement

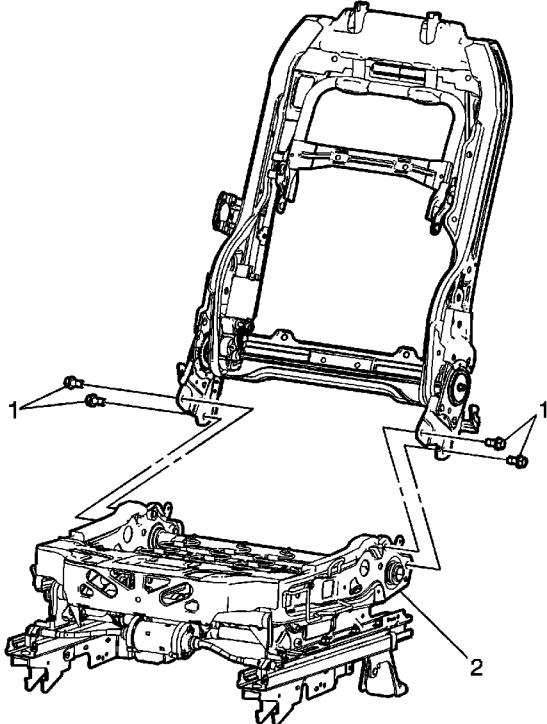

Callout	Component Name
<h3>Preliminary Procedures</h3>	
<ol style="list-style-type: none">1. Remove the front seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement.2. Remove the front seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement.	
1	Front Seat Back Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 50 N·m (37 lb ft)
2	Driver Seat Cushion Frame <h3>Procedure</h3> <ol style="list-style-type: none">1. Disconnect the electrical connector.2. If replacing the driver seat cushion frame transfer components as necessary.

© 2010 General Motors Corporation. All rights reserved.

Power Seat Switch Replacement

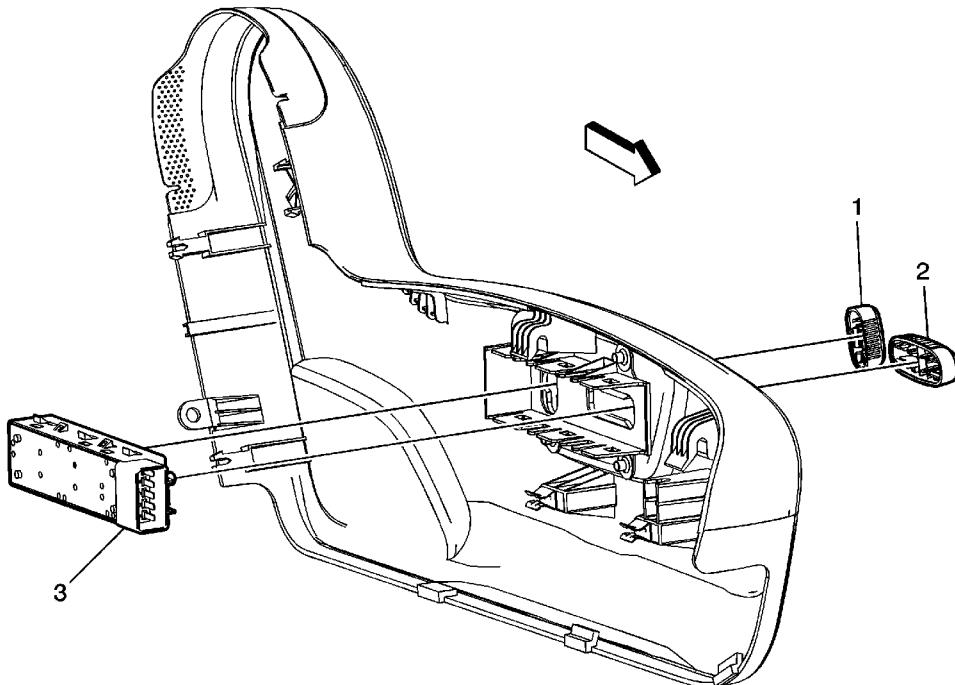

Callout	Component Name
<h3>Preliminary Procedures</h3> <p>Remove the front seat outer adjuster finish cover. Refer to Driver Seat and Passenger Seat Outer Adjuster Finish Cover Replacement .</p>	
1	Front Seat Back Recliner Knob Tip Pull the know outward to remove.
2	Front Seat Adjuster Knob Tip Pull the know outward to remove.
3	Front Seat Adjuster and Recliner Switch Tip Use a small flat bladed tool if necessary to help remove the switch from the adjuster finish cover.