


Rear Door Check Arm - SuperCab

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Open the rear door.

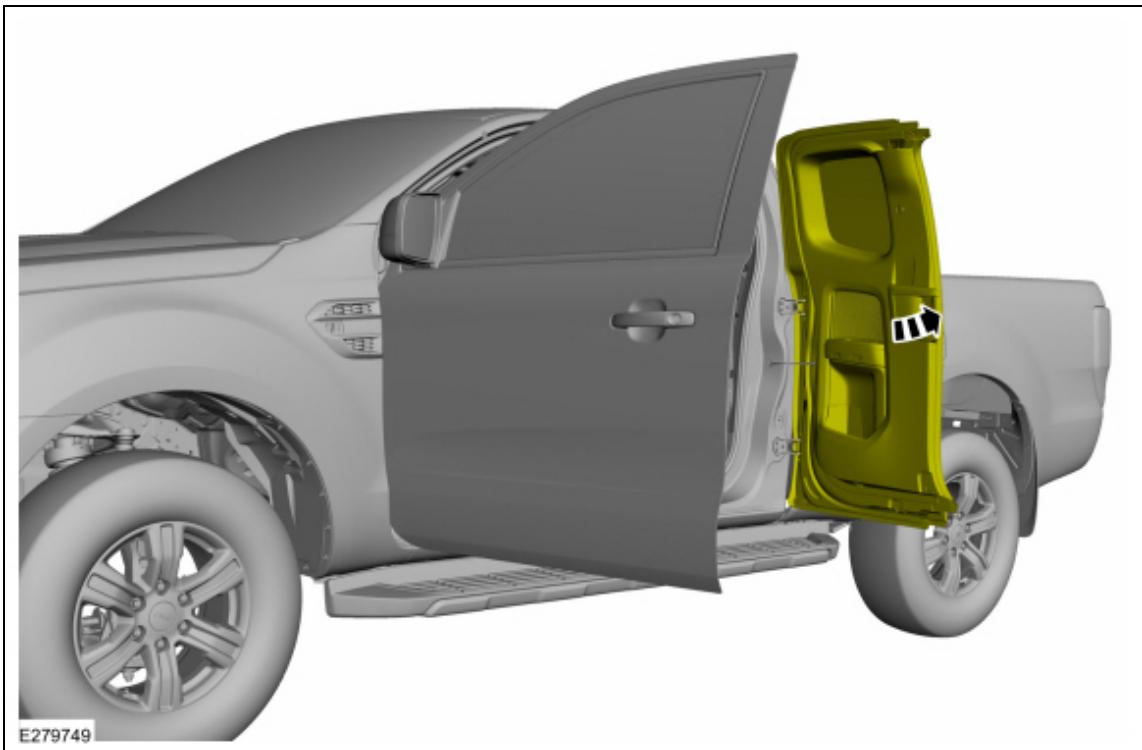

2. Remove the check arm bolt.
Torque: 124 lb.in (14 Nm)




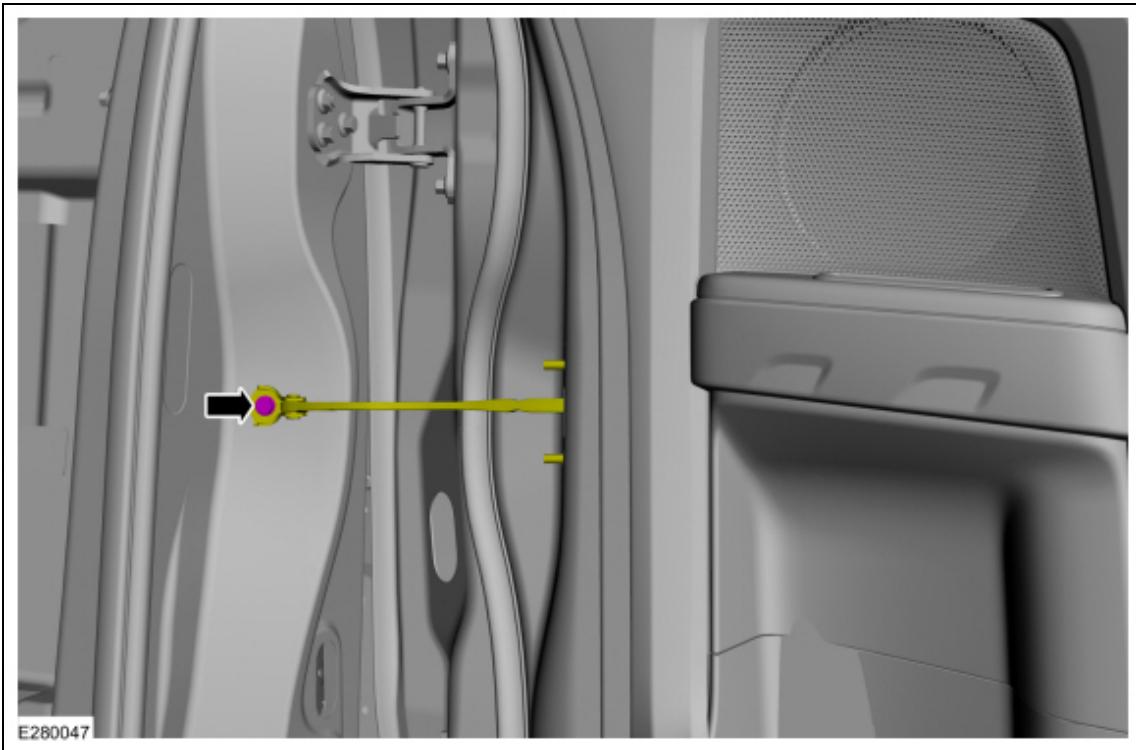

3. Remove the rear door trim panel.
Refer to: Rear Door Trim Panel - Super Cab (501-05) .

4. **NOTE: Door removed from vehicle for clarity.**


Disconnect the electrical connector, remove the retainers and the rear door speaker.
Torque: 27 lb.in (3 Nm)

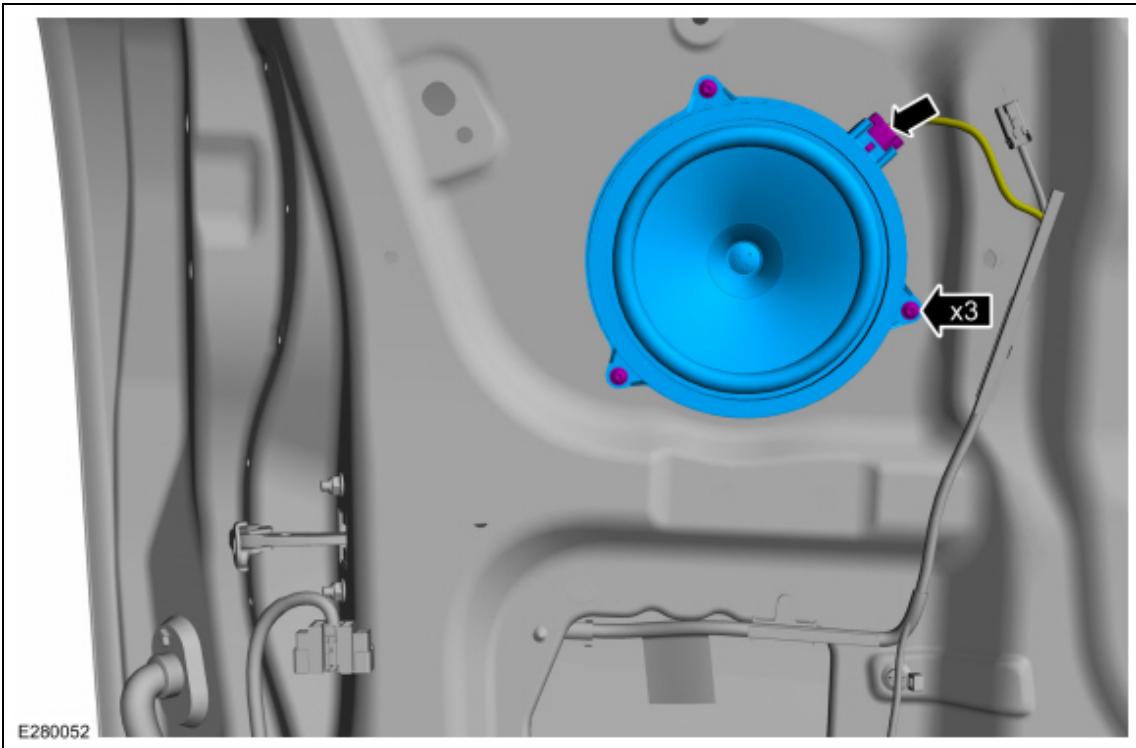

5. **NOTE: Door removed from vehicle for clarity.**


Remove the rear door check arm nuts.

Torque: 97 lb.in (11 Nm)

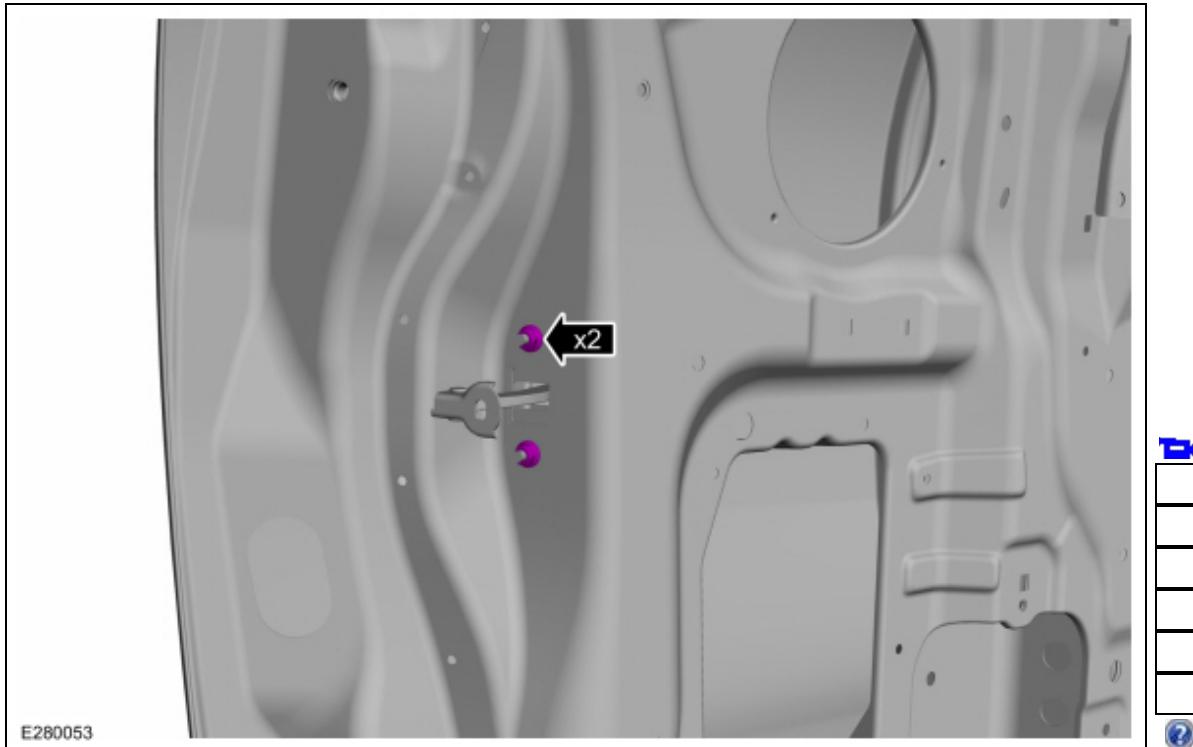

6. **NOTE: Door removed from vehicle for clarity.**

Remove the rear door check arm assembly.

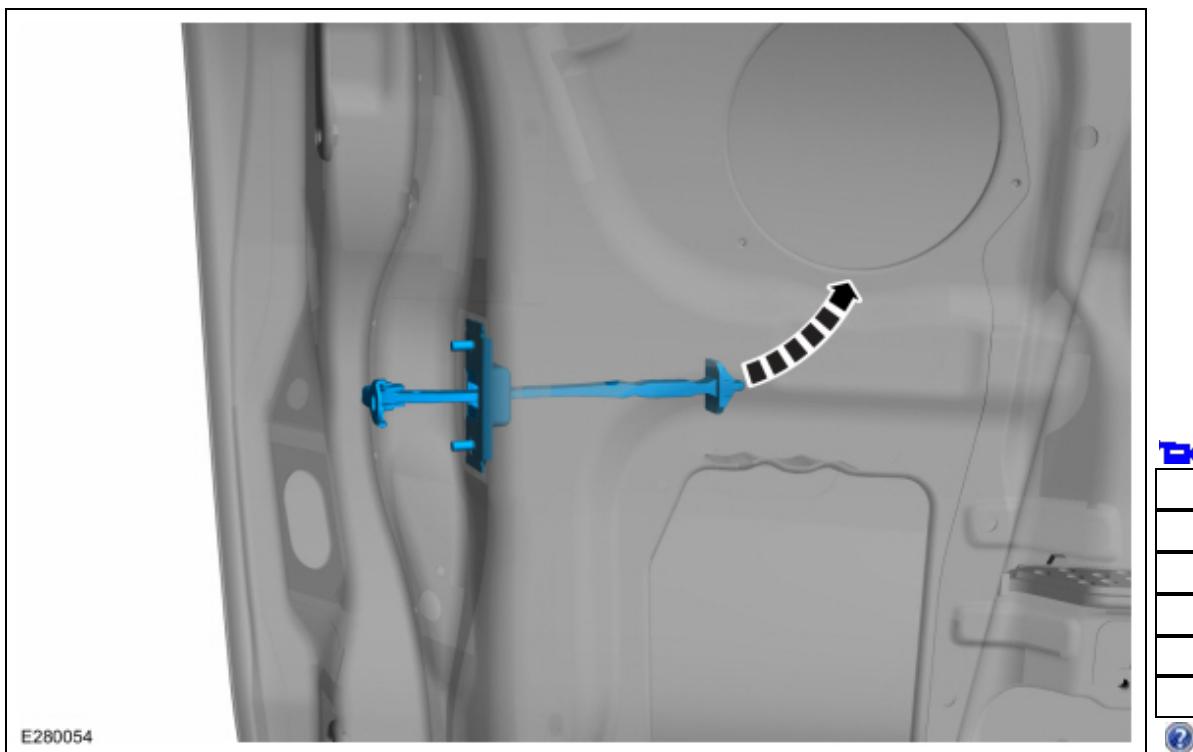

Installation

1. To install, reverse the removal procedure.