


Rear Door - SuperCab

Removal


NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Open the rear door.

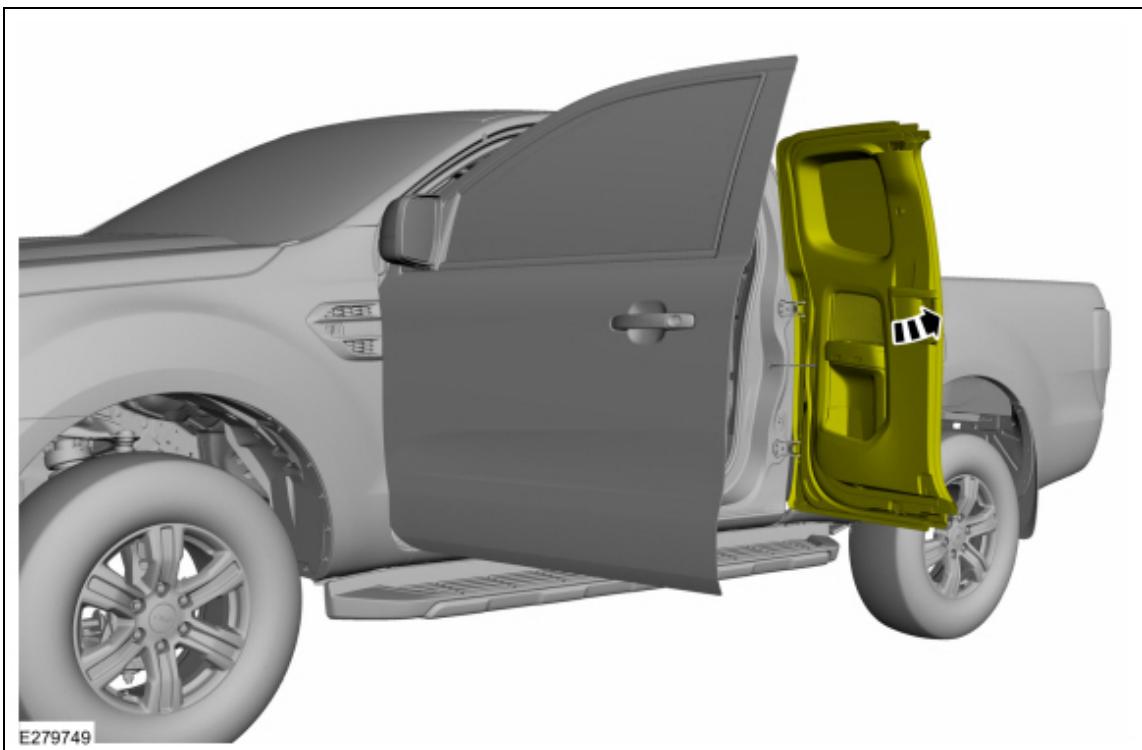


2. Remove the check arm bolt.
Torque: 124 lb.in (14 Nm)



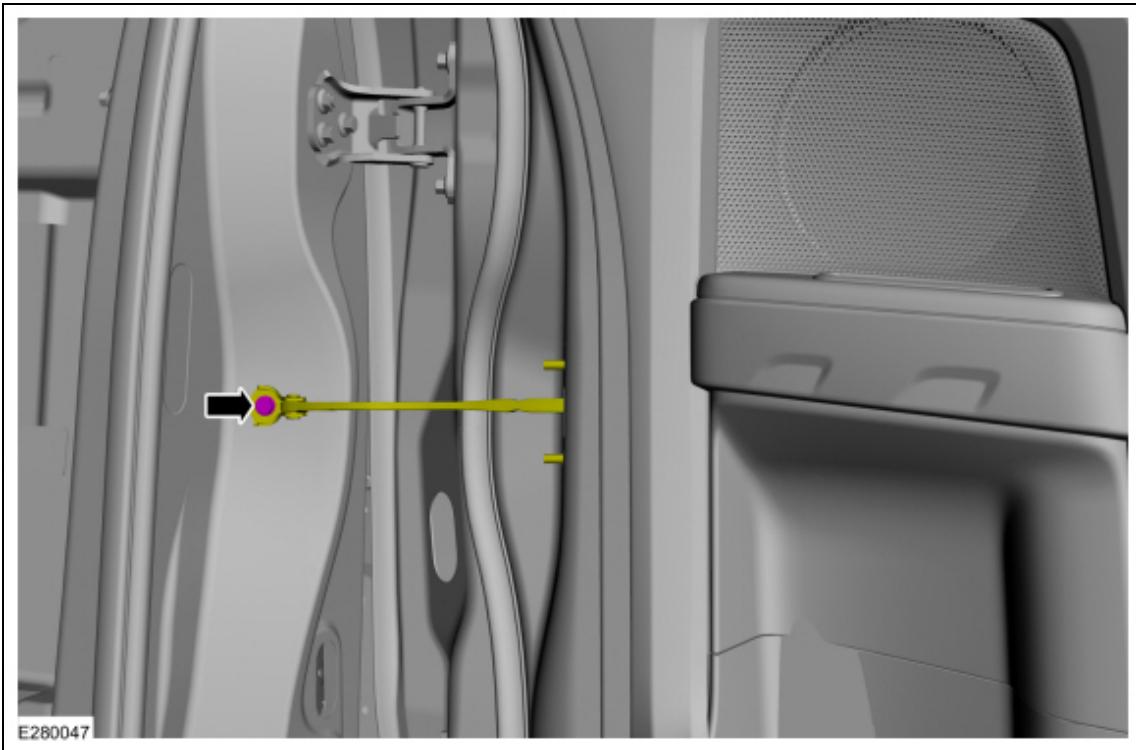

3. Remove the lower C-pillar trim panel.
Refer to: C-Pillar Lower Trim Panel (501-05) .

4.
 - Detach the wire harness retainer and disconnect the electrical connector.
 - Route the wiring harness through the body.

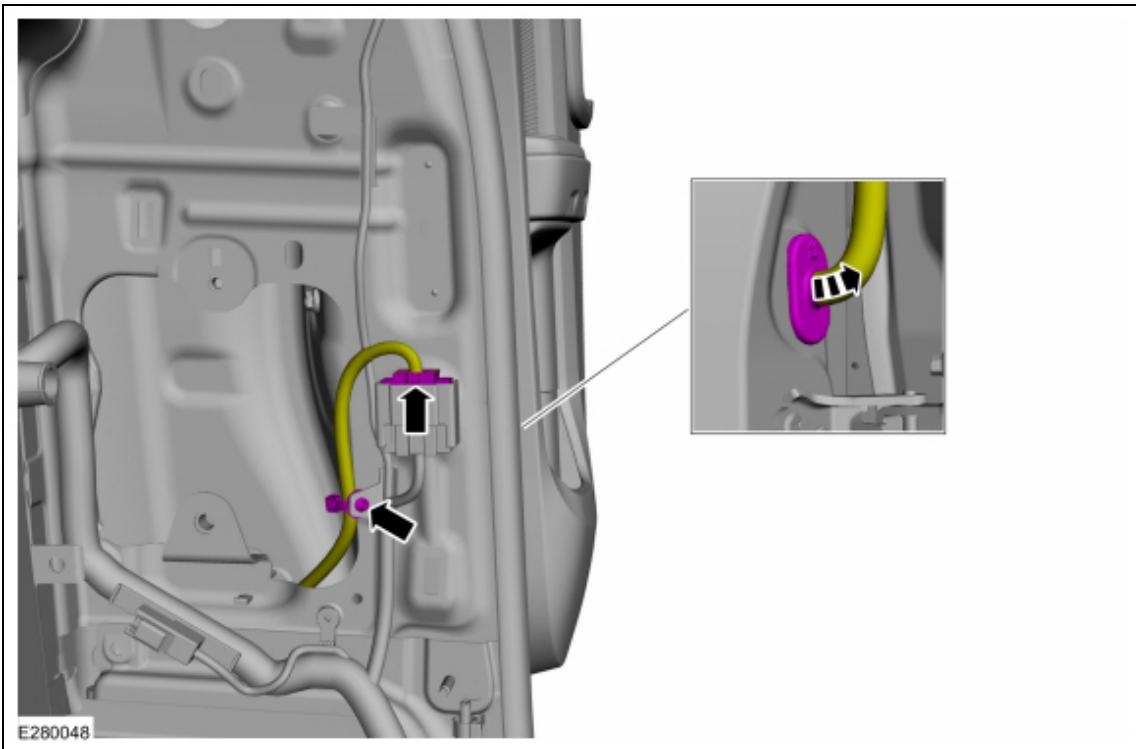


5. **NOTE:** This step requires the aid of another technician.


- Remove the door hinge bolts.
Torque: 18 lb.ft (25 Nm)
- Remove the rear door.



Installation

1. To install, reverse the removal procedure.
2. Check the body-to-rear door dimensions. Align the door as necessary.
Refer to: [Rear Door Alignment - SuperCab](#) (501-03 Body Closures, General Procedures).



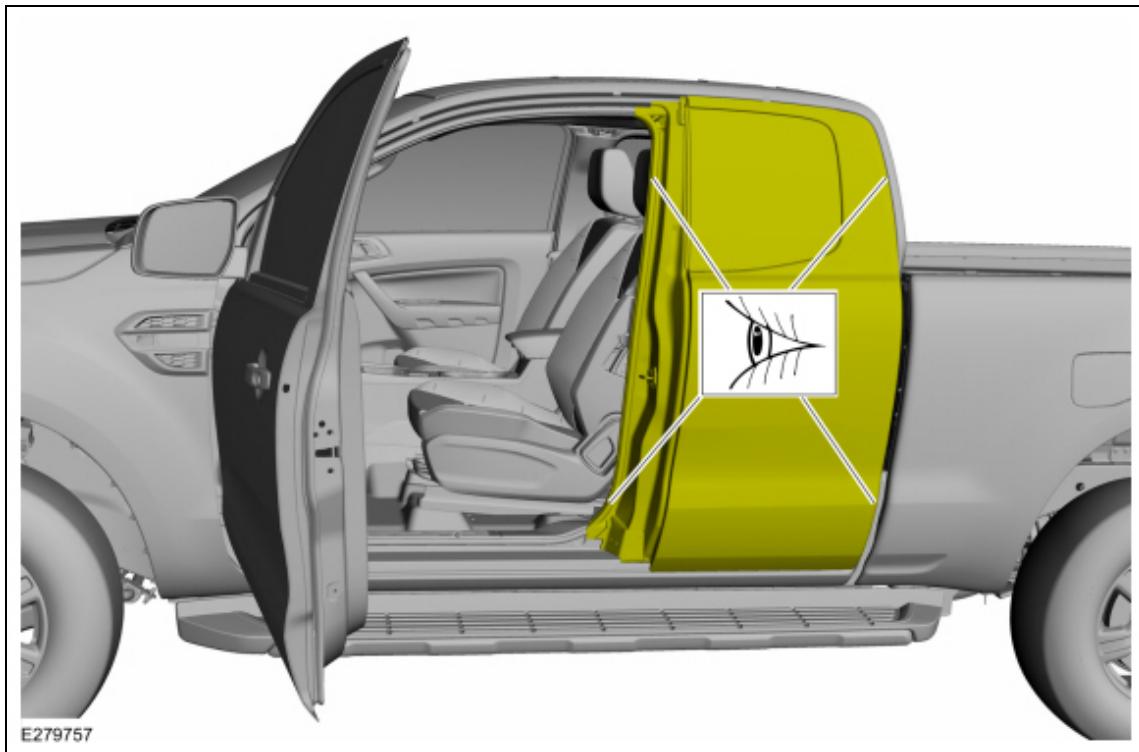

Copyright © 2019 Ford Motor Company
