

Rear Door Latch - Crew Cab


Base Part Number: 26412

Removal


NOTE: LH side shown, RH side similar.


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear door trim panel.
Refer to: Rear Door Trim Panel - Crew Cab (501-05 Interior Trim and Ornamentation) .
2. Remove the exterior rear door handle.
Refer to: [Exterior Rear Door Handle - Crew Cab](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. Remove the rear door watershield.

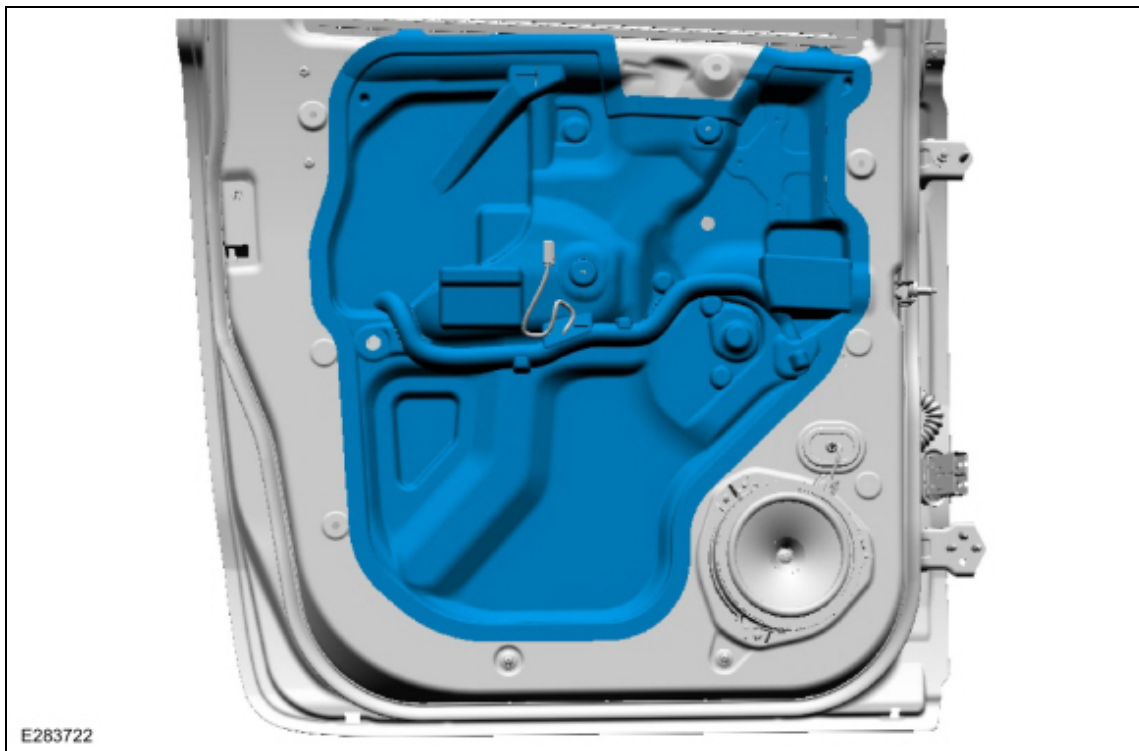


4. Remove the screw from the exterior rear door handle reinforcement.
Torque: 62 lb.in (7 Nm)



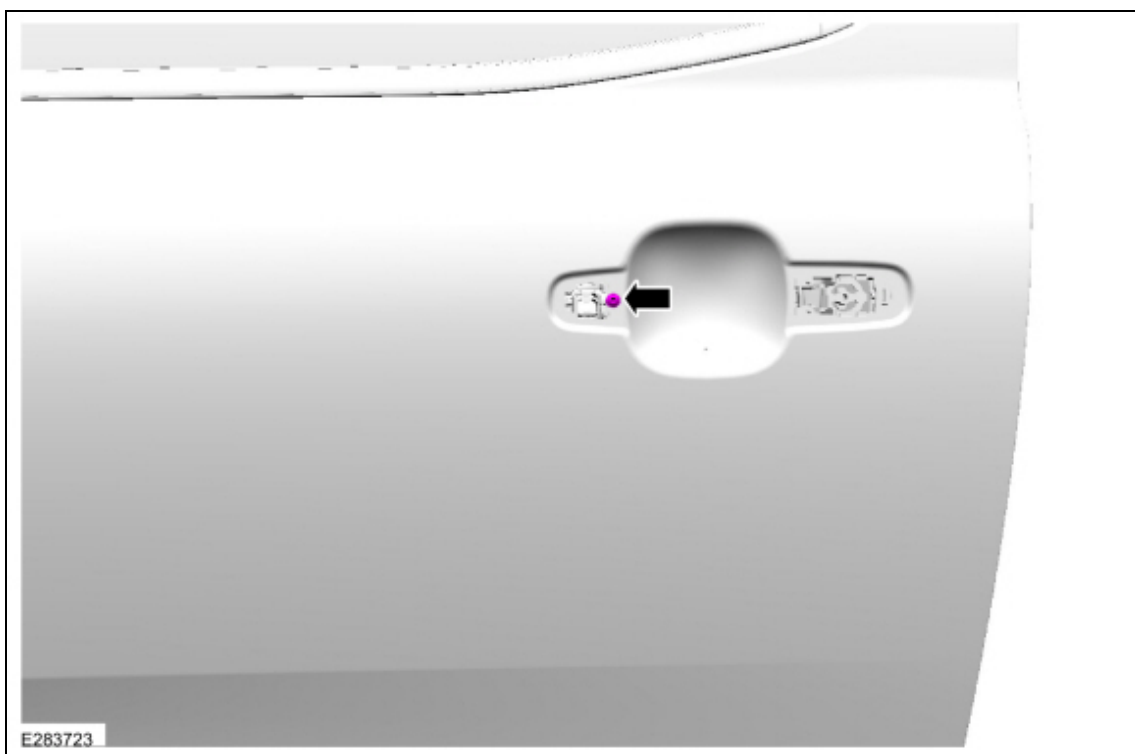


5. If equipped.
Disconnect the electrical connector(s).

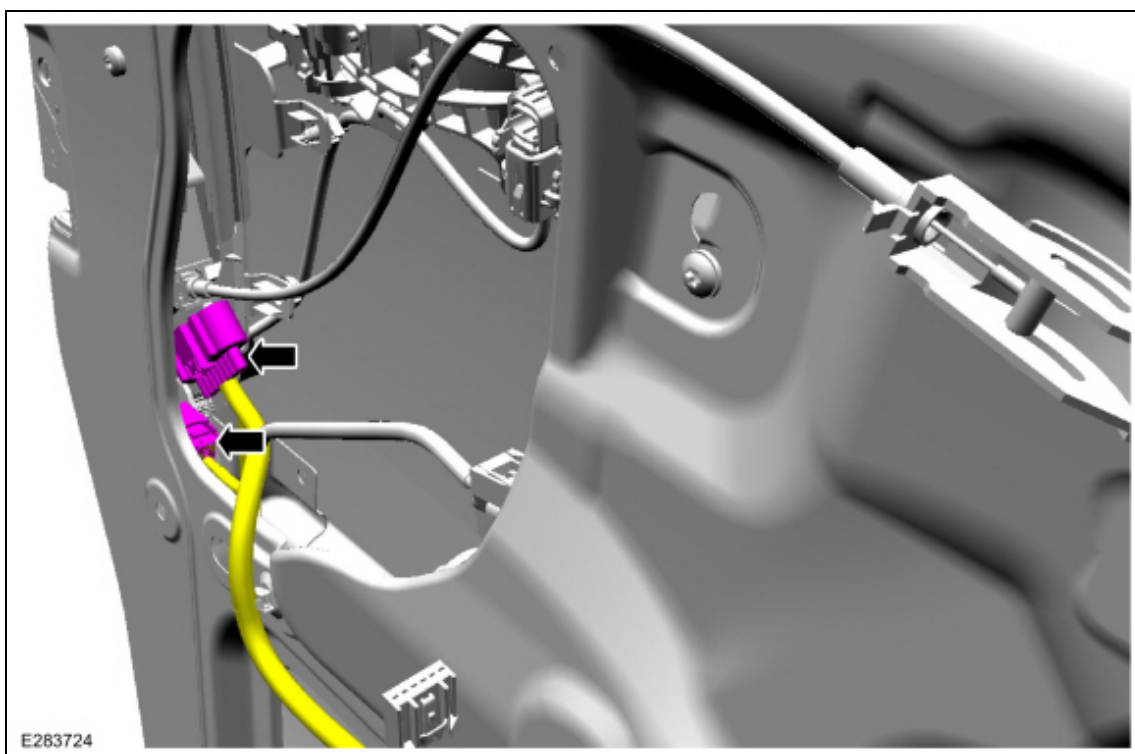

6. Remove the rear door latch bolts.
Torque: 106 lb.in (12 Nm)



7. Remove the rear door latch.

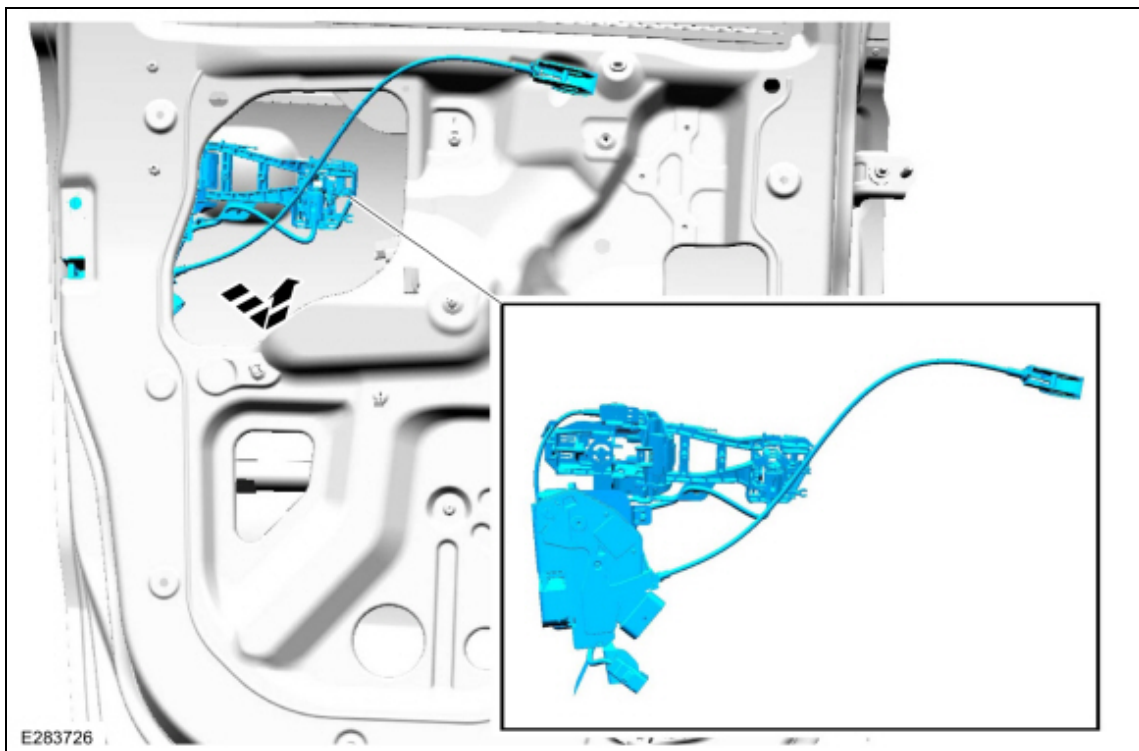

8. **NOTE:** This step is only necessary when installing a new component.


If equipped.

Remove the exterior rear door handle reinforcement wiring harness.

1. If equipped.

Release the electrical connector from the door latch assembly.


2. If equipped.
Release wiring harness routing clips from the door latch assembly.
3. If equipped.
Release the electrical connector from the exterior rear door handle reinforcement.

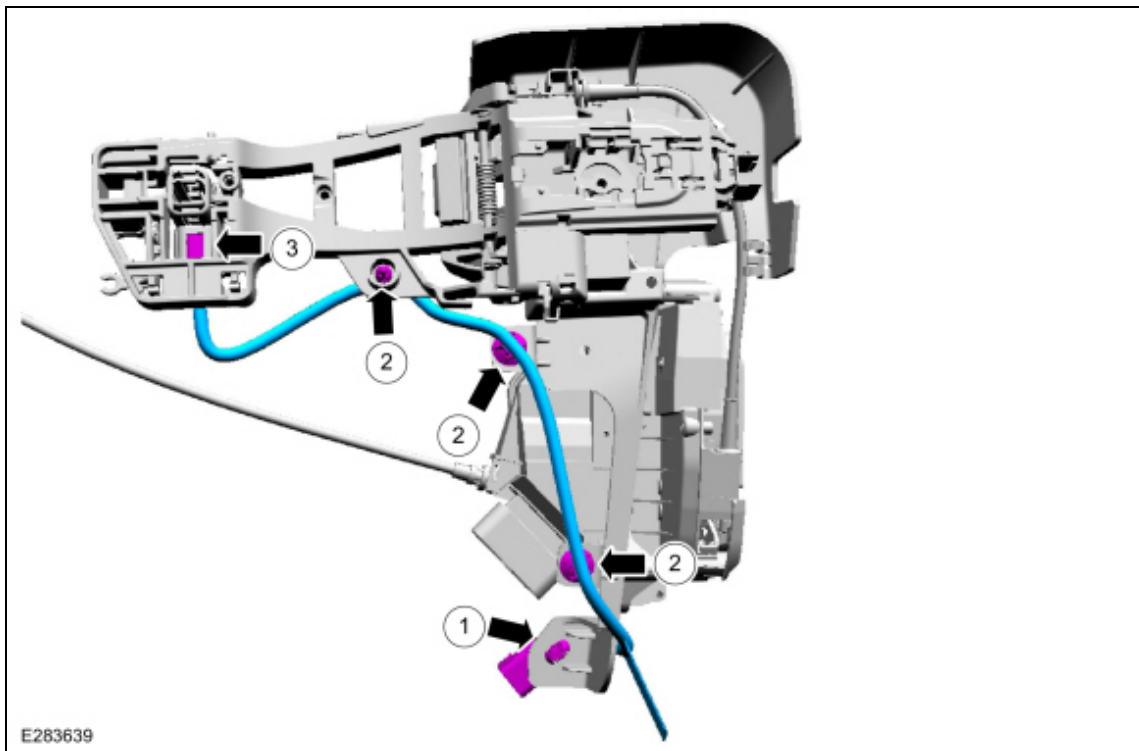

9. **NOTE:** *This step is only necessary when installing a new component.*

Remove the exterior front door handle reinforcement.


1. Detach the cable from the exterior front door handle reinforcement.
2. Remove the cable eyelet from the lever.
3. Press the locking tabs down and detach the exterior front door handle reinforcement.
4. Remove the exterior front door handle reinforcement.

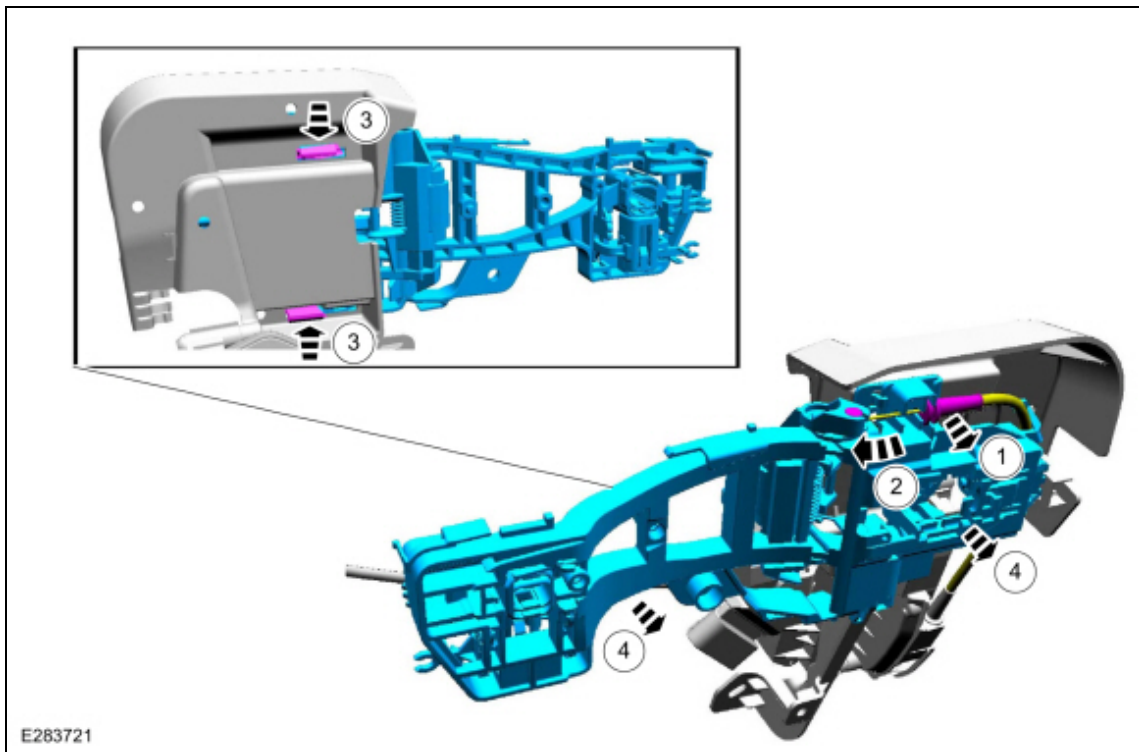


10. **NOTE:** This step is only necessary when installing a new component.

Remove the exterior rear door handle reinforcement cable.


1. Remove the exterior rear door handle reinforcement cable from the mounting slot.
2. Remove the exterior rear door handle reinforcement cable end from the rear door latch..

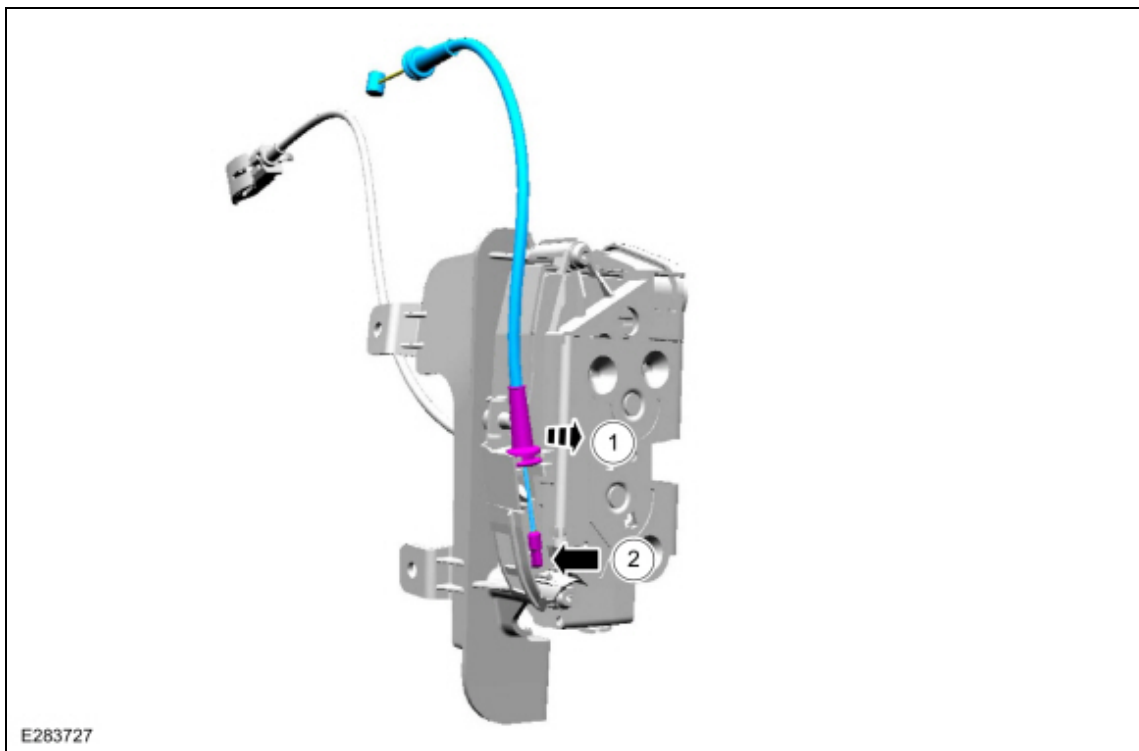

11. **NOTE:** This step is only necessary when installing a new component.




Remove the screws and the rear door latch bracket.

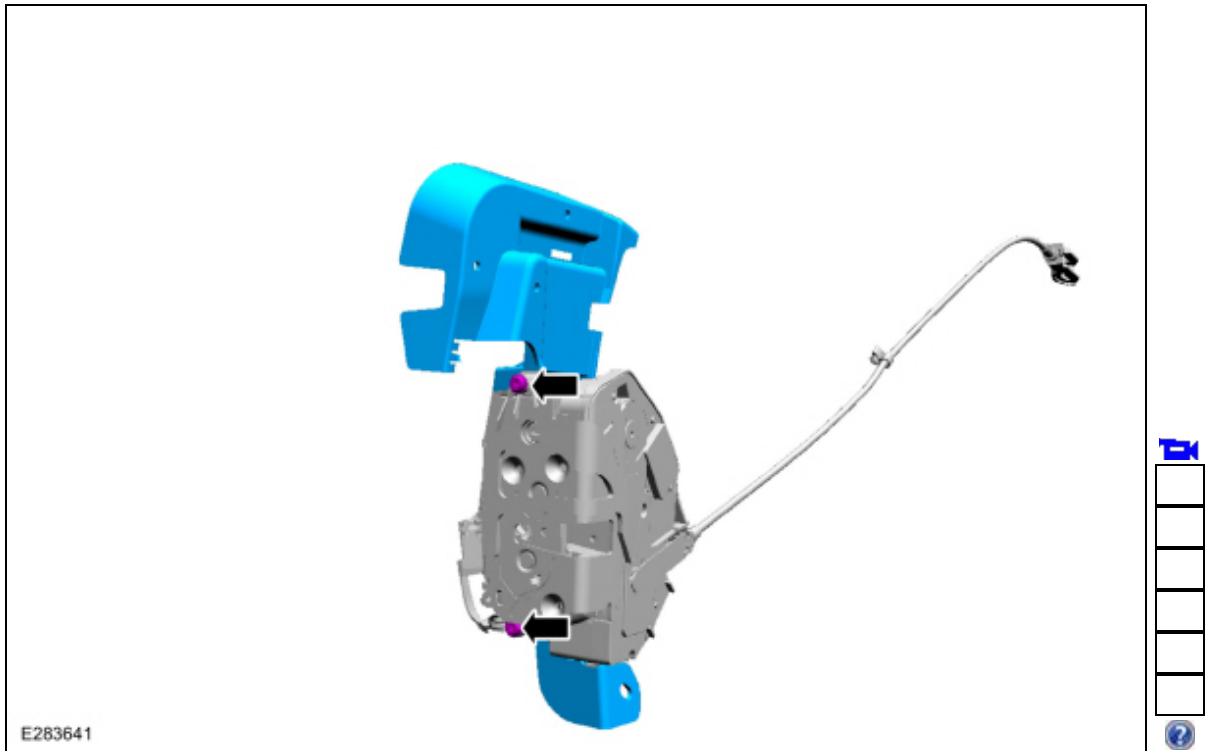

12. **NOTE:** *This step is only necessary when installing a new component.*


Remove the interior rear door handle cable access cover.

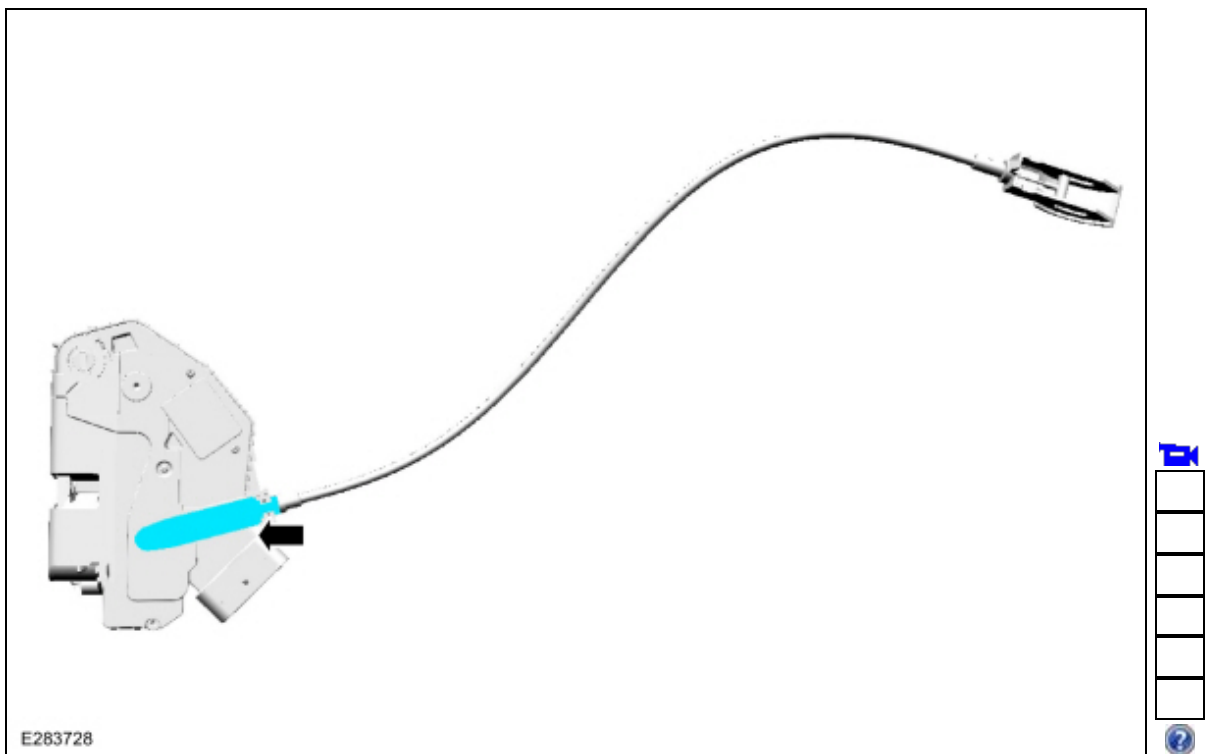

13. **NOTE:** *This step is only necessary when installing a new component.*

Remove the interior rear door handle cable.

- Remove the interior rear door handle cable from the mounting slot.
- Remove the interior rear door handle cable end from the rear door latch.

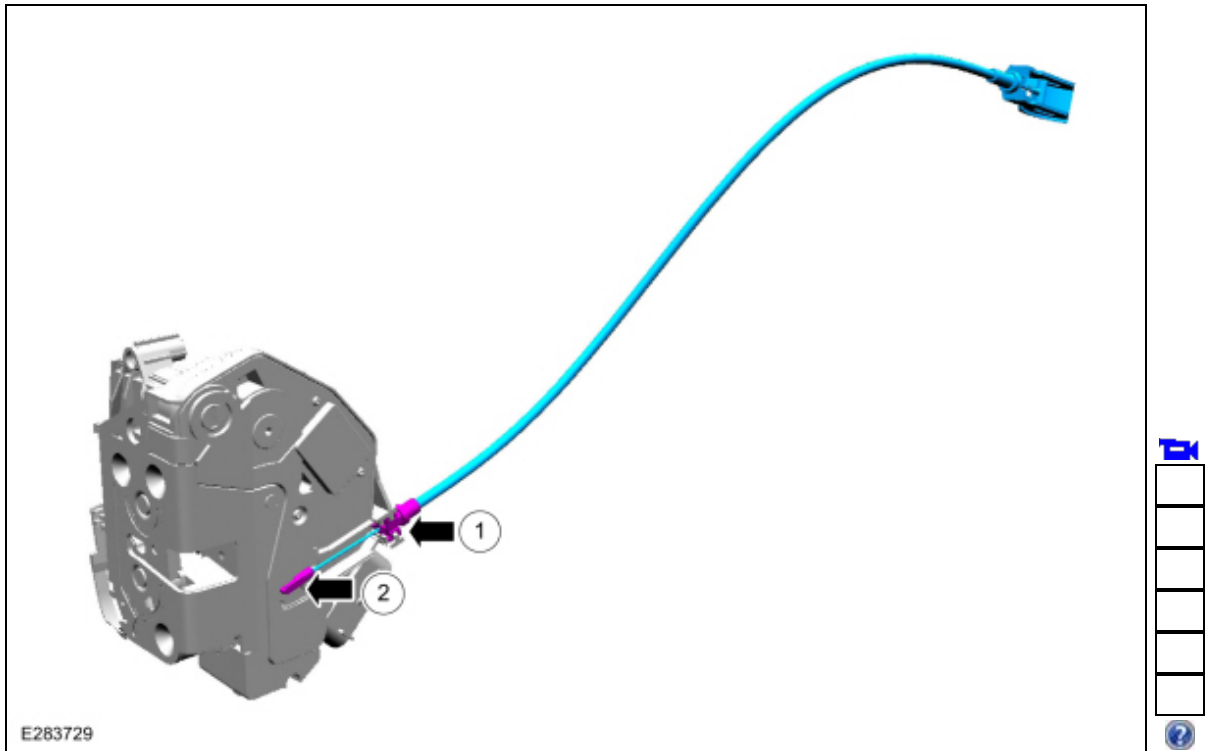

Installation

1. To install, reverse the removal procedure.

